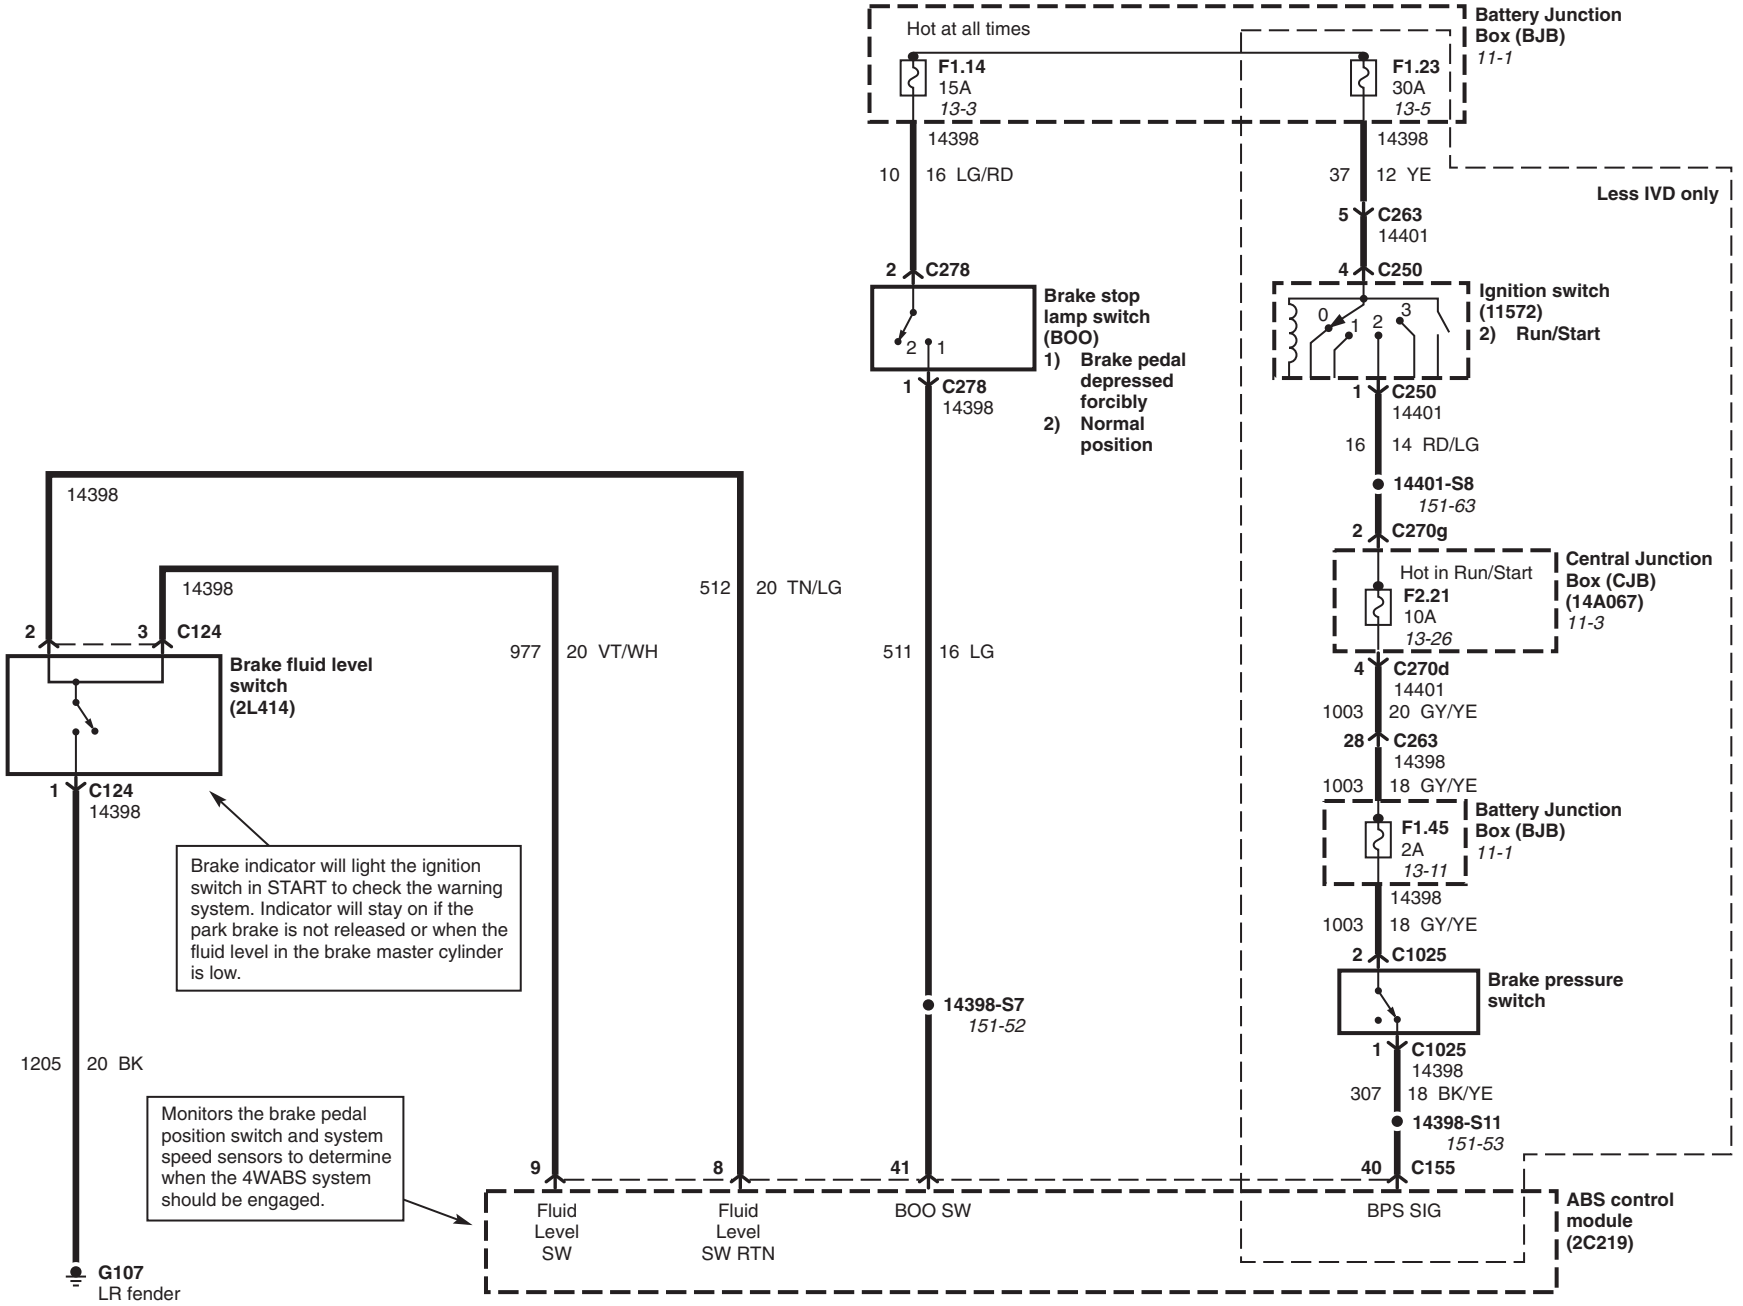
Hot at all times
F1.14
15A
13-3
F1.23
30A
13-5
Battery Junction Box (BJB)
11-1
14398
14398
10
16 LG/RD
37
12 YE
Less IVD only
5
C263
14401
2
C278
4
C250
Brake stop lamp switch (BOO)
1) Brake pedal depressed forcibly
2) Normal position
Ignition switch (11572)
2) Run/Start
1
C278
14398
1
C250
14401
16
14 RD/LG
14401-S8
151-63
2
C270g
Central Junction Box (CJB) (14A067)
11-3
Hot in Run/Start
F2.21
10A
13-26
14398
512
20 TN/LG
977
20 VT/WH
511
16 LG
2
3
C124
Brake fluid level switch (2L414)
4
C270d
14401
1003
20 GY/YE
28
C263
14398
1003
18 GY/YE
Battery Junction Box (BJB)
11-1
F1.45
2A
13-11
14398
1003
18 GY/YE
2
C1025
Brake pressure switch
1
C124
14398
Brake indicator will light the ignition switch in START to check the warning system. Indicator will stay on if the park brake is not released or when the fluid level in the brake master cylinder is low.
14398-S7
151-52
1
C1025
14398
307
18 BK/YE
1205
20 BK
14398-S11
151-53
Monitors the brake pedal position switch and system speed sensors to determine when the 4WABS system should be engaged.
9
8
41
40
C155
Fluid Level SW
Fluid Level SW RTN
BOO SW
BPS SIG
ABS control module (2C219)
G107
LR fender