C315

18C619

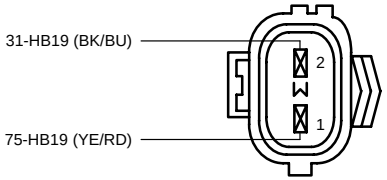

F02106

14A005

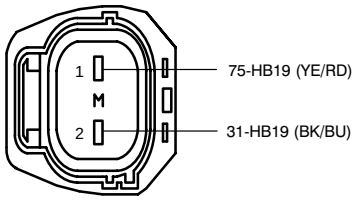

F02074

C323

14B719

N317
Safety belt buckle
switch (10B924)

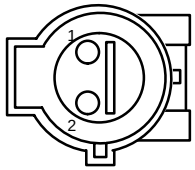

F02085

Pin	Circuit	Circuit Function
1	31-GE52 (BK/RD)	Ground
2	8-GE52 (WH/BK)	Sensor signal

C326

14A005

A151
Antenna



C330

14B122

N217
Seat adjust switch,
passenger side front

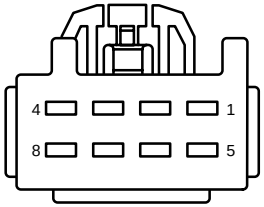

F08193

Pin	Circuit	Circuit Function
1	–	not used
2	31–AH2 (BK/BU)	Ground
3	32–AH17 (WH/GN)	Switched between: Battery voltage, Ground or Open
4	30–AH14 (RD/YE)	Voltage supplied at all times (not overload protected)
5	–	not used
6	–	not used
7	33–AH17 (YE/GN)	Switched between: Battery voltage, Ground or Open
8	31–AH1 (BK/YE)	Ground