C442

14401, 19A442

A11
Radio

F08044

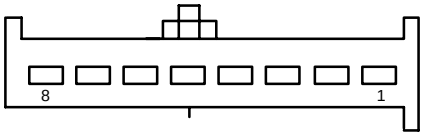

Pin	Circuit	Circuit Function
1	8-MD10 (WH/BK)	Sensor signal
2	10-MD10 (GY/BK)	Signal 2 (Y–direction, reverse, downward)
3	8-MD11 (WH/VT)	Sensor signal
4	10-MD11 (GY/WH)	Signal 2 (Y–direction, reverse, downward)
5	8-MD17 (WH/RD)	Sensor signal
6	10-MD17 (GY/RD)	Signal 2 (Y–direction, reverse, downward)
7	8-MD18 (WH)	Sensor signal
8	10-MD18 (GY)	Signal 2 (Y–direction, reverse, downward)

C443 (BK)

14401

A11
Radio



F07011

Pin	Circuit	Circuit Function
1	29-MD15 (OG/BK)	Voltage supplied at all times (overload protected)
2	91-MD34 (BK/YE)	Ground
	91-MD34A (BK/YE)	Ground
3	75-MD15 (YE/GN)	Voltage: Ignition switch in Accessory or Run
4	29S-LK34 (OG/BK)	Voltage supplied at all times (overload protected), switched
5	31S-GL15 (BK/OG)	Ground, switched
6	91-MD15 (BN/GN)	Ground
7	–	not used

C444

14401

N318
Stoplamp switch

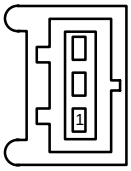

F03030

Pin	Circuit	Circuit Function
1	15S-LG14B (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
	15-LG23 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)
	15-LG23 (GN/WH) +	Voltage, ignition switch in Start or Run (not overload protected)
	15-PG6 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
2	–	not used
3	15S-LG6 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched
	15-LG14B (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched