## C515 (GY)

### 14A005

Perimeter anti–theft reset switch

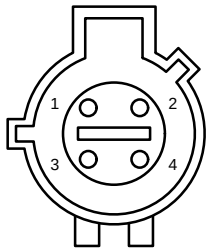


F04075

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 30-AA79 (RD/WH) | Voltage supplied at all times (not overload protected) |
| 2 | 31-AA79 (BK/WH) | Ground |
| 3 | – | not used |
| 4 | – | not used |

## C522

### 14A005

Exterior rear view mirror, left




F03079

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 32-AD32 (WH/RD) | Switched between: Battery voltage, Ground or Open |
| 2 | 34-AD31 (BU/WH) | Switched between: Battery voltage, Ground or Open |
| 3 | 32-AD10 (WH/BK) | Switched between: Battery voltage, Ground or Open |
| | 33-AD7 (YE/RD) | |

## C523

### 14A005

Speaker, left front (18808)

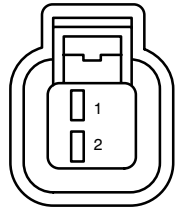


F02069

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 8-MD10 (WH/BK) | Speaker, left front (18808) (+) |
| 2 | 10-MD10 (GY/BK) | Speaker, left front (18808) (–) |