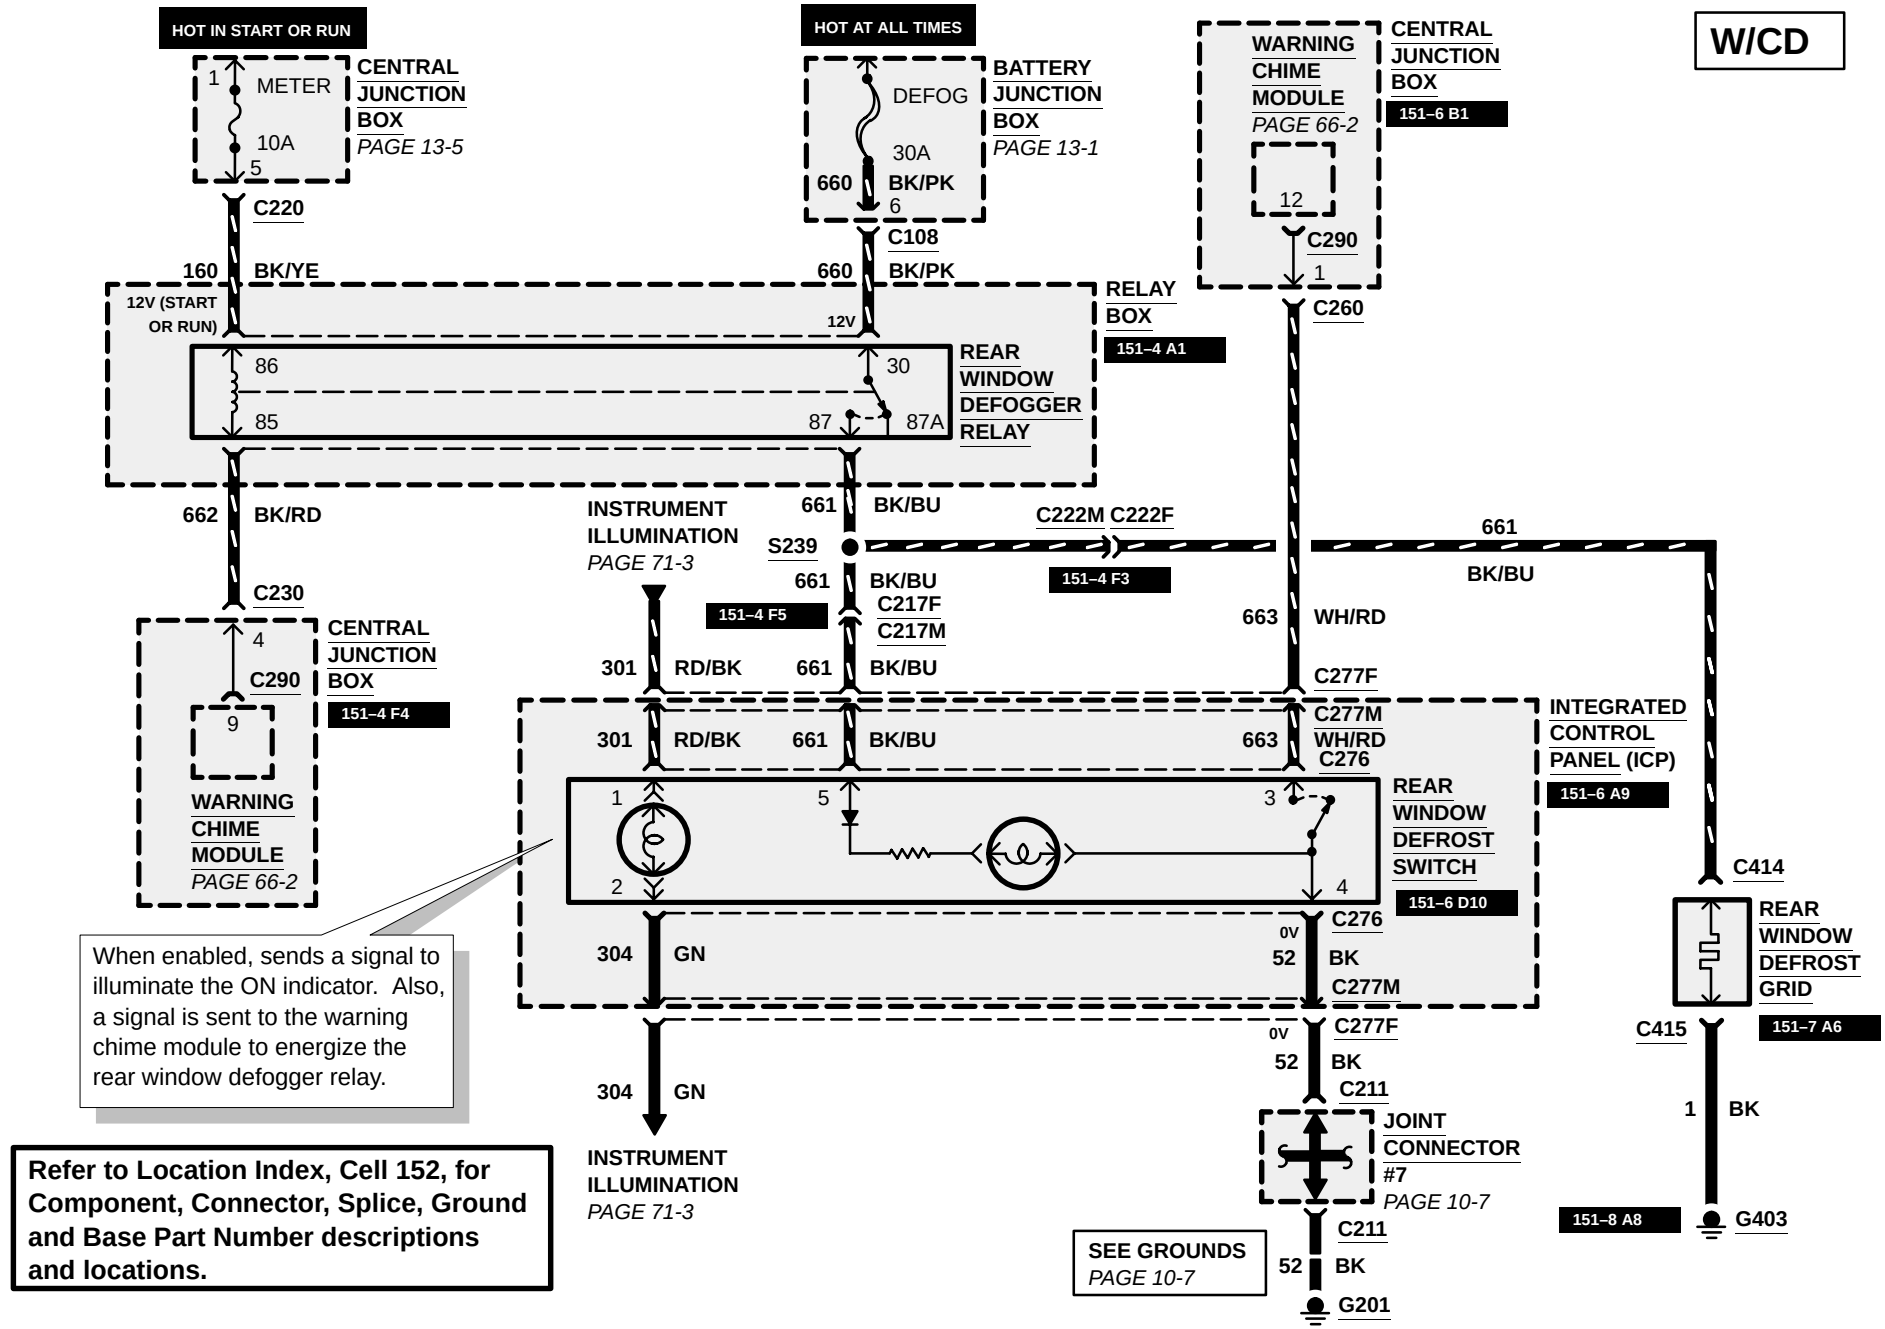
W/CD
HOT IN START OR RUN
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
PAGE 13-5
METER
10A
BATTERY JUNCTION BOX
PAGE 13-1
DEFOG
30A
WARNING CHIME MODULE
PAGE 66-2
151–6 B1
C220
C108
C290
C260
160 BK/YE
660 BK/PK
12V (START OR RUN)
12V
RELAY BOX
151–4 A1
REAR WINDOW DEFOGGER RELAY
86
85
87
87A
30
662 BK/RD
661 BK/BU
INSTRUMENT ILLUMINATION
PAGE 71-3
S239
C222M C222F
151–4 F3
663 WH/RD
C230
C290
151–4 F4
151–4 F5
C217F
C217M
301 RD/BK
C277F
C277M
WH/RD
C276
INTEGRATED CONTROL PANEL (ICP)
151–6 A9
REAR WINDOW DEFROST SWITCH
151–6 D10
C414
REAR WINDOW DEFROST GRID
151–7 A6
C415
304 GN
0V
52 BK
C211
JOINT CONNECTOR #7
PAGE 10-7
SEE GROUNDS
PAGE 10-7
151–8 A8
G403
G201
When enabled, sends a signal to illuminate the ON indicator. Also, a signal is sent to the warning chime module to energize the rear window defogger relay.
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.