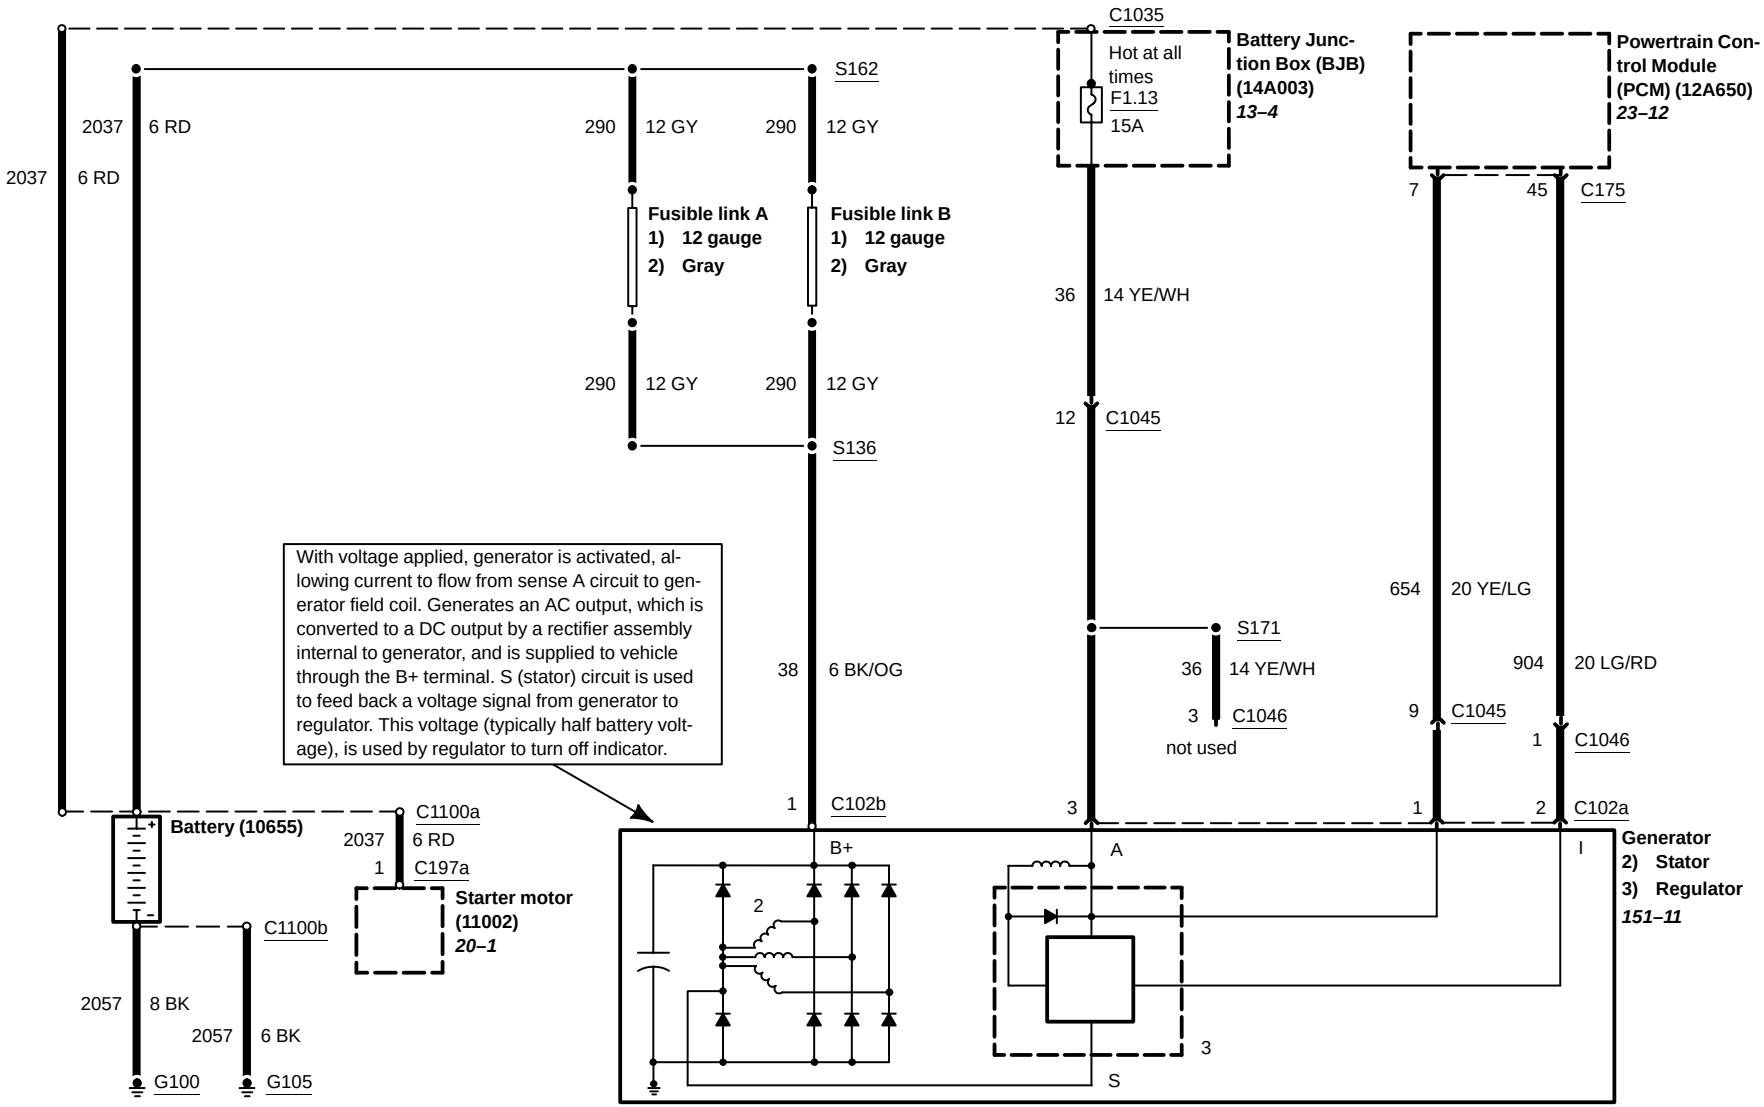
C1035
Hot at all times
F1.13
15A
Battery Junction Box (BJB) (14A003)
13–4
Powertrain Control Module (PCM) (12A650)
23–12
S162
2037 6 RD
290 12 GY
290 12 GY
2037 6 RD
Fusible link A
1) 12 gauge
2) Gray
Fusible link B
1) 12 gauge
2) Gray
36 14 YE/WH
290 12 GY
290 12 GY
12 C1045
S136
7
45 C175
654 20 YE/LG
904 20 LG/RD
With voltage applied, generator is activated, allowing current to flow from sense A circuit to generator field coil. Generates an AC output, which is converted to a DC output by a rectifier assembly internal to generator, and is supplied to vehicle through the B+ terminal. S (stator) circuit is used to feed back a voltage signal from generator to regulator. This voltage (typically half battery voltage), is used by regulator to turn off indicator.
S171
38 6 BK/OG
36 14 YE/WH
3 C1046
not used
9 C1045
1 C1046
1 C102b
3
1
2 C102a
C1100a
2037 6 RD
1 C197a
Battery (10655)
Starter motor (11002)
20–1
B+
A
I
Generator
2) Stator
3) Regulator
151–11
C1100b
2057 8 BK
2057 6 BK
G100
G105
2
3
S