## C424

**14014**

F24017

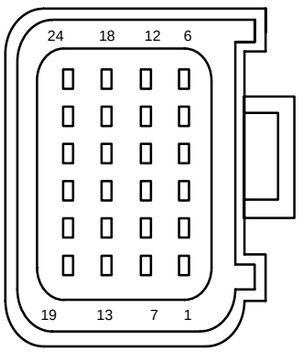


A29
Air bag diagnostic monitor

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | – | not used |
| 2 | – | not used |
| 3 | – | not used |
| 4 | – | not used |
| 5 | – | not used |
| 6 | – | not used |
| 7 | 91S-JA32 (BK/YE) | Ground, switched |
| 8 | 15S-FA32 (GN/YE) | Voltage, ignition switch in Start or Run (not overload protected), switched |
| 9 | 15S-JA31 (GN/WH) | Voltage, ignition switch in Start or Run (not overload protected), switched |
| 10 | 91S-JA31 (BK/WH) | Ground, switched |
| 11 | 91S-JA8 (BK/OG) | Ground, switched |
| 12 | 15S-JA8 (GN/RD) | Voltage, ignition switch in Start or Run (not overload protected), switched |
| 13 | 91S-JA48 (BK/GN) | Ground, switched |
| 14 | 91S-JA14 (BK/GN) | Ground, switched |
| 15 | 8-EE7 (WH/RD) | Sensor signal |
| 16 | 91S-AA72 (BK/YE) | Ground, switched |
| 17 | 91S-JA13 (BK/RD) | Ground, switched |
| 18 | 91-JA47 (BK/OG) | Ground |
| 19 | 15S-JA48 (GN/BK) | Voltage, ignition switch in Start or Run (not overload protected), switched |
| 20 | 8-JA49 (WH) | Sensor signal |
| 21 | 9-JA49 (BN) | Sensor signal return (reference/ground) |
| 22 | – | not used |
| 23 | 91-JA10 (BK/RD) | Ground |
| 24 | 15-JA10 (GN/OG) | Voltage, ignition switch in Start or Run (not overload protected) |