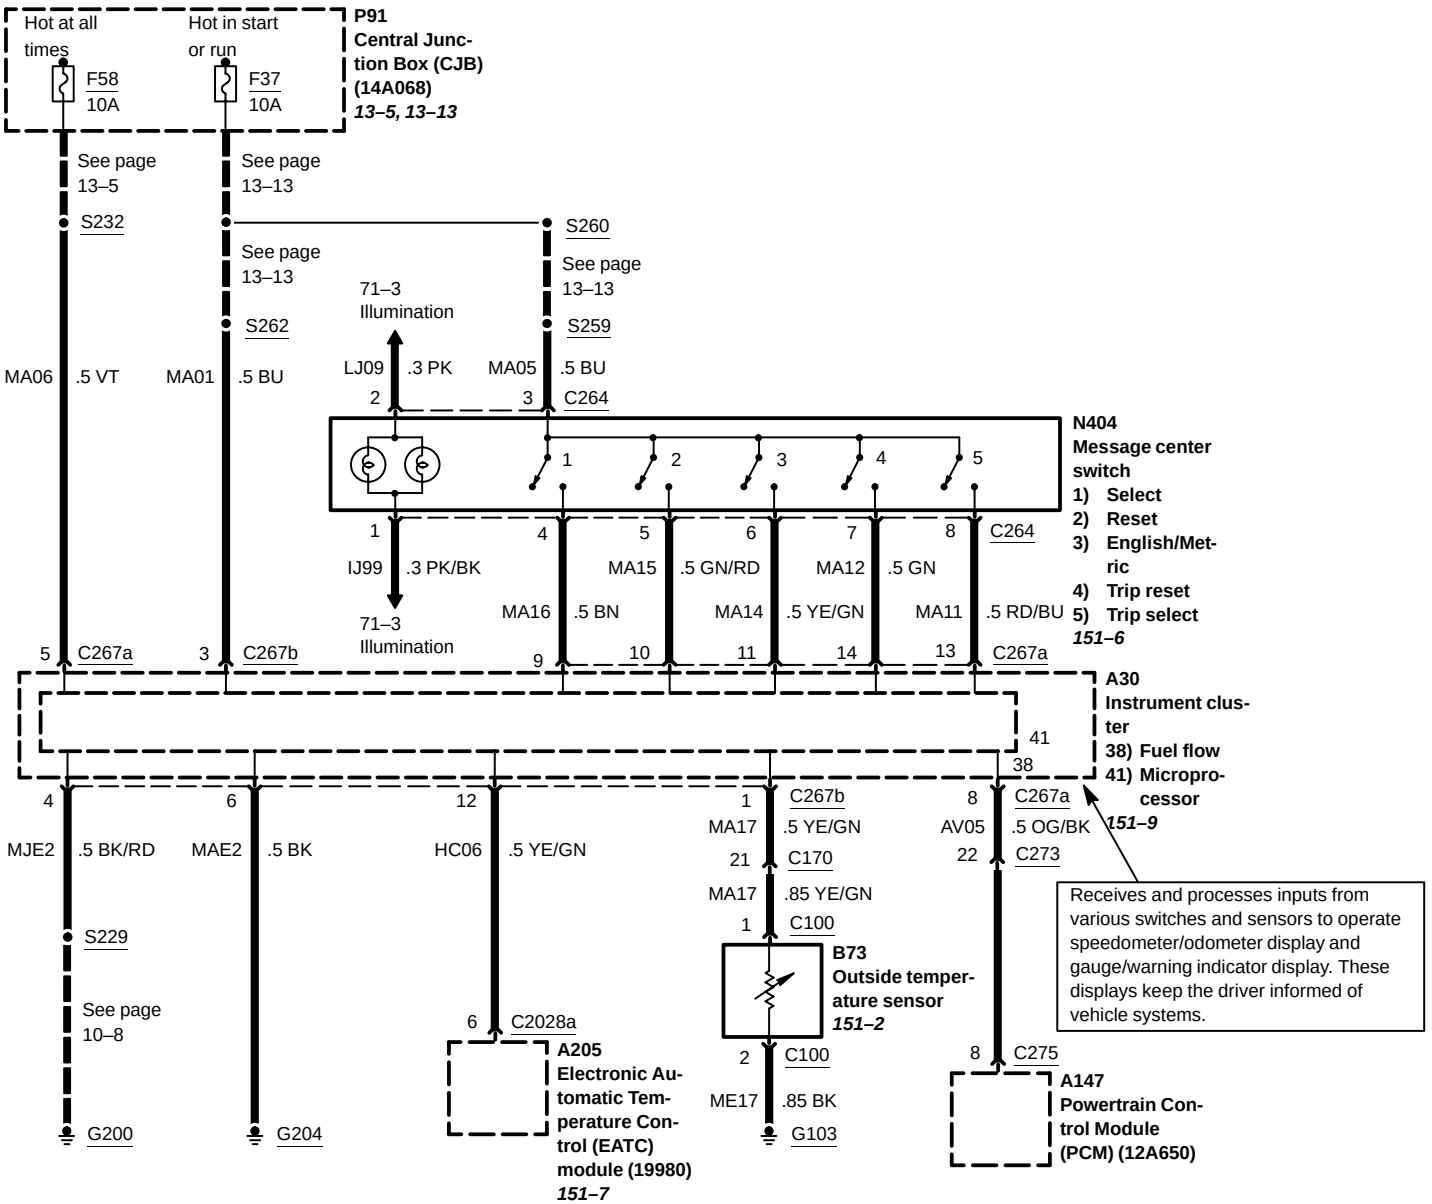
Hot at all times
Hot in start or run
F58 10A
F37 10A
P91 Central Junction Box (CJB) (14A068) 13–5, 13–13
See page 13–5
See page 13–13
S232
S260
See page 13–13
See page 13–13
S262
S259
71–3 Illumination
MA06 .5 VT
MA01 .5 BU
LJ09 .3 PK
MA05 .5 BU
2
3 C264
N404 Message center switch
1) Select
2) Reset
3) English/Metric
4) Trip reset
5) Trip select
151–6
1 2 3 4 5
1 IJ99 .3 PK/BK
4 MA16 .5 BN
5 MA15 .5 GN/RD
6 MA14 .5 YE/GN
7 MA12 .5 GN
8 MA11 .5 RD/BU
C264
71–3 Illumination
5 C267a
3 C267b
9 10 11 14 13 C267a
A30 Instrument cluster
38) Fuel flow
41) Microprocessor
151–9
41
38
4 MJE2 .5 BK/RD
6 MAE2 .5 BK
12 HC06 .5 YE/GN
1 C267b MA17 .5 YE/GN
8 C267a AV05 .5 OG/BK
21 C170
22 C273
MA17 .85 YE/GN
1 C100
S229
See page 10–8
B73 Outside temperature sensor 151–2
6 C2028a
2 C100
8 C275
ME17 .85 BK
G200
G204
G103
A205 Electronic Automatic Temperature Control (EATC) module (19980) 151–7
A147 Powertrain Control Module (PCM) (12A650)
Receives and processes inputs from various switches and sensors to operate speedometer/odometer display and gauge/warning indicator display. These displays keep the driver informed of vehicle systems.