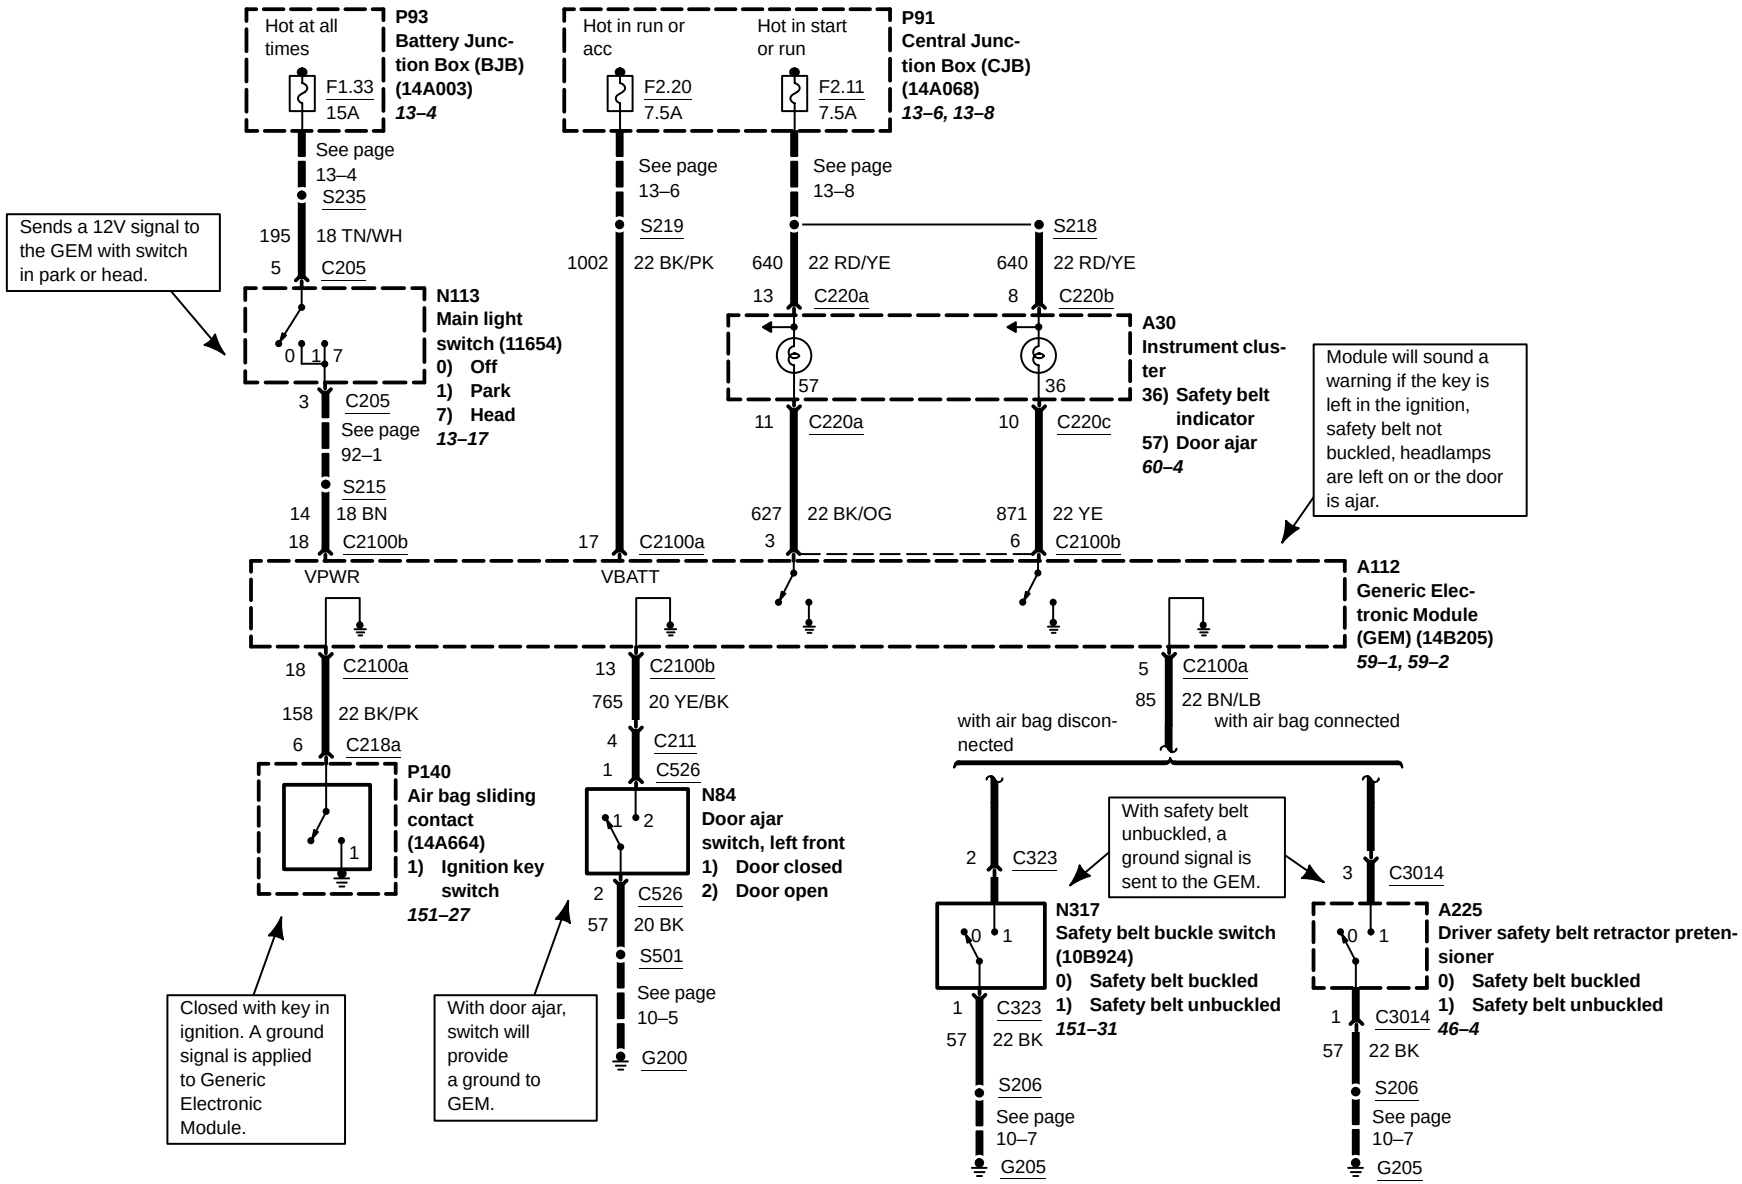
Hot at all times
P93 Battery Junction Box (BJB) (14A003) 13–4
F1.33 15A
See page 13–4
S235
195 18 TN/WH
5 C205
Sends a 12V signal to the GEM with switch in park or head.
N113 Main light switch (11654)
0) Off
1) Park
7) Head
13–17
0 1 7
3 C205
See page 92–1
S215
14 18 BN
18 C2100b
VPWR
Hot in run or acc
Hot in start or run
P91 Central Junction Box (CJB) (14A068) 13–6, 13–8
F2.20 7.5A
F2.11 7.5A
See page 13–6
See page 13–8
S219
1002 22 BK/PK
17 C2100a
VBATT
S218
640 22 RD/YE
13 C220a
640 22 RD/YE
8 C220b
A30 Instrument cluster
36) Safety belt indicator
57) Door ajar
60–4
57
36
11 C220a
10 C220c
627 22 BK/OG
3
871 22 YE
6 C2100b
Module will sound a warning if the key is left in the ignition, safety belt not buckled, headlamps are left on or the door is ajar.
A112 Generic Electronic Module (GEM) (14B205) 59–1, 59–2
18 C2100a
158 22 BK/PK
6 C218a
P140 Air bag sliding contact (14A664)
1) Ignition key switch
151–27
1
13 C2100b
765 20 YE/BK
4 C211
1 C526
N84 Door ajar switch, left front
1) Door closed
2) Door open
1 2
2 C526
57 20 BK
S501
See page 10–5
G200
5 C2100a
85 22 BN/LB
with air bag disconnected
with air bag connected
2 C323
N317 Safety belt buckle switch (10B924)
0) Safety belt buckled
1) Safety belt unbuckled
151–31
0 1
1 C323
57 22 BK
S206
See page 10–7
G205
With safety belt unbuckled, a ground signal is sent to the GEM.
3 C3014
A225 Driver safety belt retractor pretensioner
0) Safety belt buckled
1) Safety belt unbuckled
46–4
0 1
1 C3014
57 22 BK
S206
See page 10–7
G205
Closed with key in ignition. A ground signal is applied to Generic Electronic Module.
With door ajar, switch will provide a ground to GEM.