C126 (BK)

14A200

ABS test connector

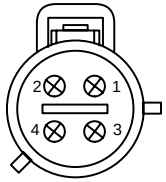

F04263

Pin	Circuit	Circuit function
1	523 (RD/PK)	dealer–fitted
2	–	not used
3	519 (LG/BK)	dealer–fitted
4	–	not used

C128

12A690

Mass Air Flow (MAF) sensor (12B579)

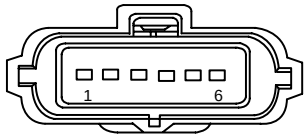

F06077

Pin	Circuit	Circuit function
1	359 (GY/RD)	signal, return
2	361 (RD)	Voltage supplied in Start and Run (overload protected)
3	570 (BK/WH)	Ground
4	968 (TN/LB)	Mass Air Flow (MAF) sensor (12B579), signal, return
5	967 (LB/RD)	Mass Air Flow (MAF) sensor (12B579), output
6	743 (GY)	Intake Air Temperature (IAT) sensor (12A697), input

C129 (BK)

12A581

Intake Air Temperature (IAT) sensor (12A697)

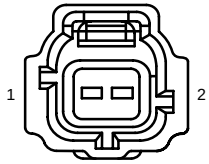

F02101

Pin	Circuit	Circuit function
1	743 (GY)	Intake Air Temperature (IAT) sensor (12A697), input
2	359 (GY/RD)	signal, return

C130 (BK)

12A581

A/C clutch cycling pressure switch (19D594)

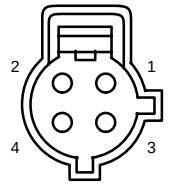

F04195

Pin	Circuit	Circuit function
1	348 (VT)	A/C demand signal
2	–	not used
3	–	not used
4	441 (RD/YE)	A/C pressure switch, to A/C cycling switch

C132 (BK)

14290

Ambient air temperature sensor (19E702)

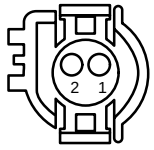

F02623

Pin	Circuit	Circuit function
1	767 (LB/OG)	Ambient air temperature sensor (19E702), feed
2	470 (PK/BK)	Sensor signal return (reference/ground)