11-1 FUSE PANEL/CIRCUIT PROTECTION

CIRCUIT PROTECTION DEVICES

Electrical circuits on this vehicle may be protected by fuses, fusible links, maxi-fuses, circuit breakers, or a combination of these devices.

BLADE TYPE FUSE

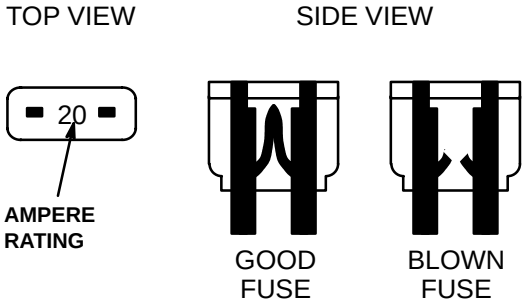

Blade type fuses have a transparent, color-coded, plastic housing. To check a fuse, pull it from the fuse panel and look at the fuse element through the housing. Always replace a blown fuse with a new fuse that has the same ampere rating.

The ampere rating of a blade type fuse can also be determined by following the color code :

BLADE FUSE COLOR-CODING	
AMPERE RATING	**HOUSING COLOR**
2	Gray
4	Pink
5	Tan
7.5	Brown
10	Red
15	Light Blue
20	Yellow
25	Natural
30	Light Green

FUSIBLE LINK

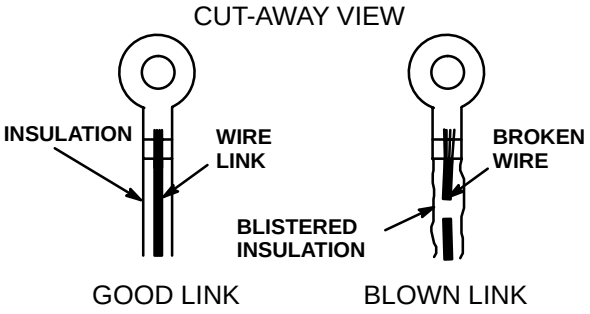

Fusible links are short lengths of wire that are smaller in diameter than the wires they are protecting. Fusible link wire is covered with a special thick, non-flammable insulation. An overload condition causes the insulation to blister. If the overload condition continues, the wire link will melt. To check a fusible link, look for blistered insulation. If the insulation is okay, pull lightly on the wire; If the fusible link stretches, the wire has melted.

When replacing fusible links, first cut the protected wire where it is connected to the fusible link. Then, tightly crimp or solder the new link to the protected wire and cover the joint with insulating tape.

Fusible links are often identified by color coding of the insulation, as shown here:

FUSIBLE LINK COLOR-CODING	
WIRE LINK SIZE	**INSULATION COLOR**
20 GA	Blue
18 GA	Brown or Red
16 GA	Black or Orange
14 GA	Green
12 GA	Gray

MAXI-FUSE

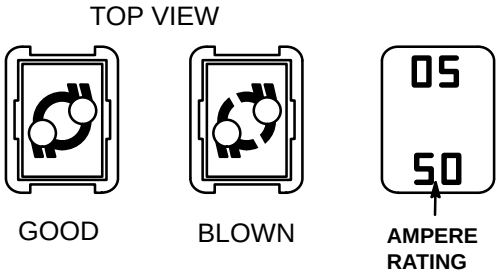

Maxi-fuses have a color-coded plastic housing. To check a maxi-fuse, look at the fuse element through the top of the housing.

To replace a maxi-fuse, pull it from the fuse box or panel. Always replace a blown maxi-fuse with a new one having the same ampere rating.

The ampere rating of a maxi-fuse can also be determined by following the color-code:

MAXI-FUSE COLOR-CODING	
AMPERE RATING	**HOUSING COLOR**
20	Blue
30	Pink
40	Green
50	Red

DIODE



Diodes are electrical devices that permit current to flow in one direction only. The current flows in the direction indicated by the arrow.

BATTERY JUNCTION BOX

REVISED

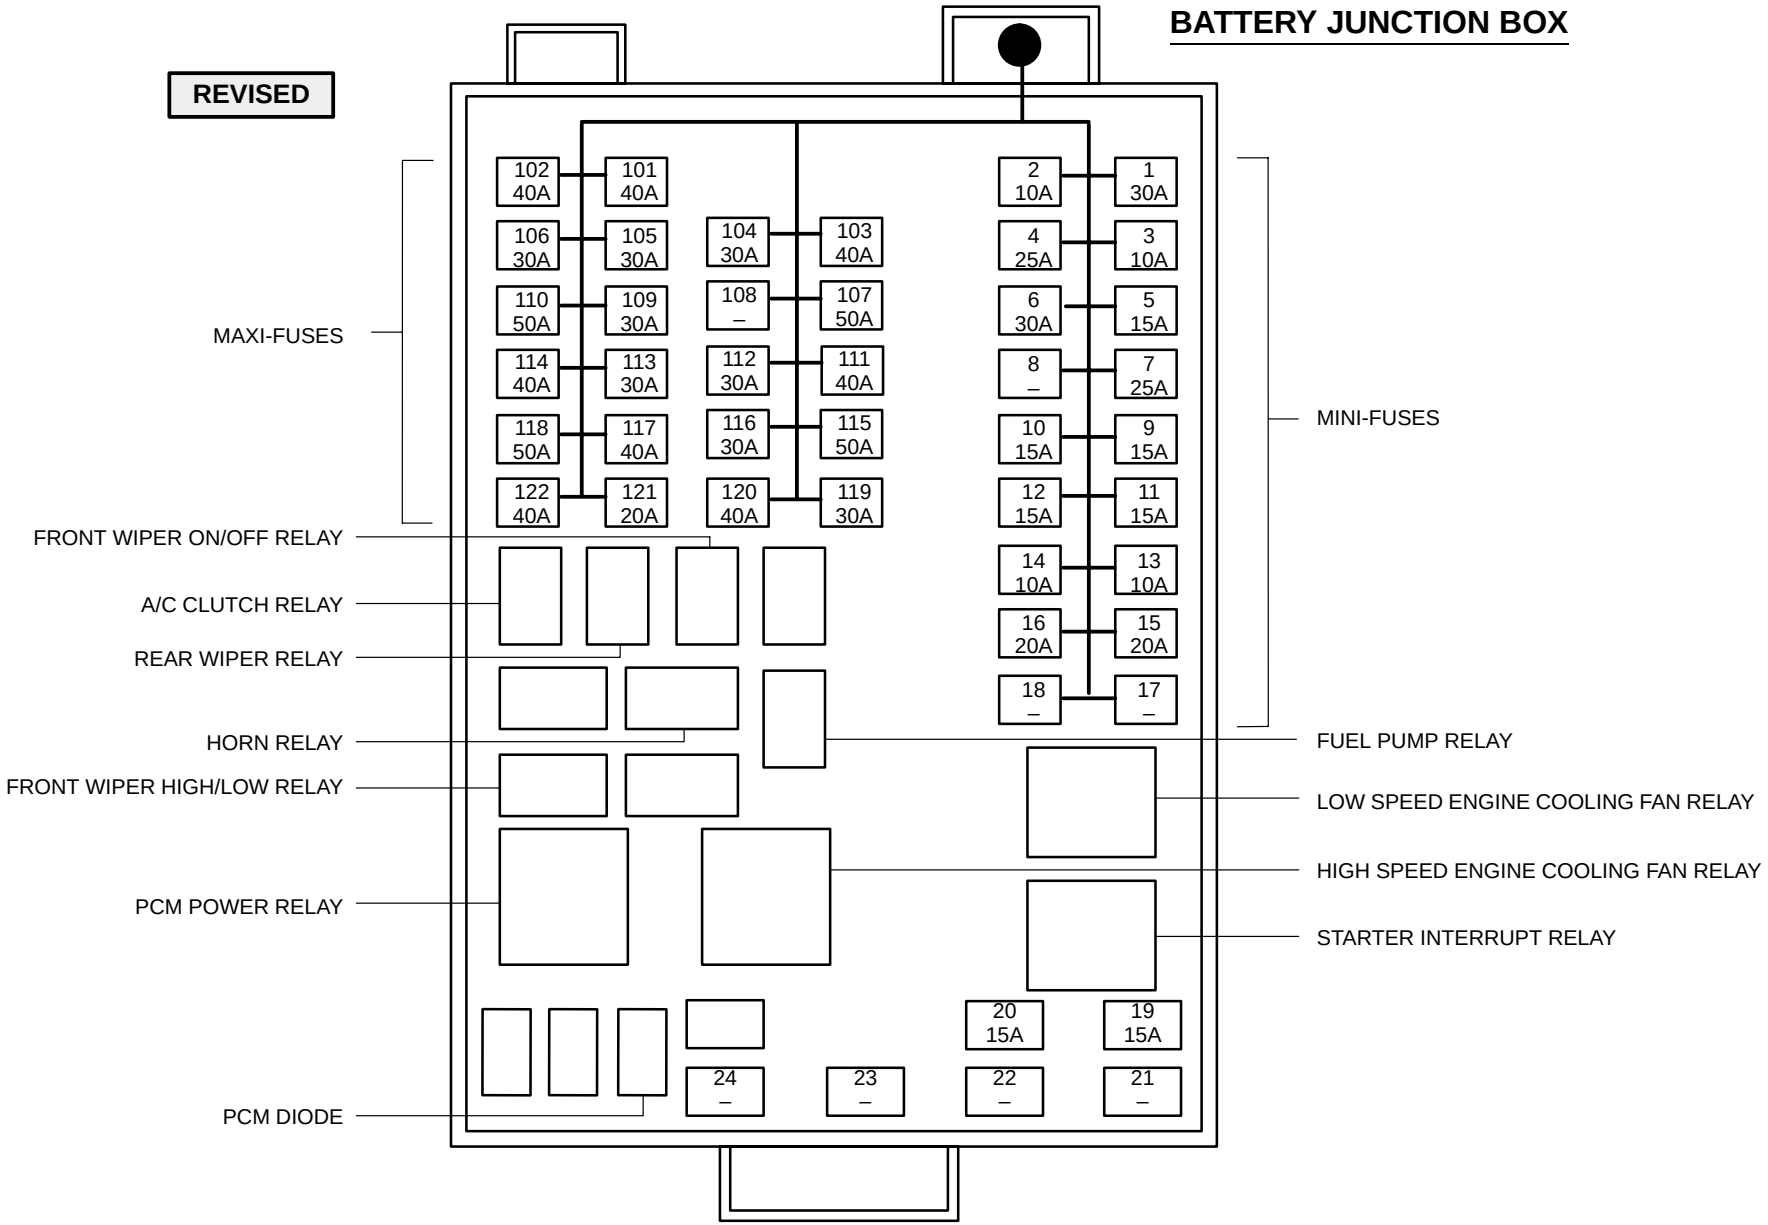

11-3 FUSE PANEL/CIRCUIT PROTECTION

MINI-FUSE	AMPS	CIRCUITS PROTECTED
1	30A	PCM Power Relay
2	10A	Powertrain Control Module (PCM), Front Electronic Module (FEM)
3	10A	A/C Clutch
4	25A	Horn
5	15A	Fuel Pump
6	30A	Front Wiper/Washer
7	25A	Rear Wiper/Washer
8	–	NOT USED
9	15A	Right Headlamp
10	15A	Right Park/Turn Lamps
11	15A	Left Park/Turn Lamps, Front Electronic Module (FEM)
12	15A	Left Headlamp
13	10A	Generator
14	10A	Front Electronic Module (FEM)
15	20A	Trailer Tow, Park Lamps
16	20A	Trailer Tow, Stop/Turn Lamps
17	–	NOT USED
18	–	NOT USED
19	15A	Engine Controls
20	15A	Engine Controls, PATS
21	–	NOT USED
22	–	NOT USED
23	–	NOT USED
24	–	NOT USED

REVISED

MAXI-FUSE	AMPS	CIRCUITS PROTECTED
101	40A	Anti-Lock Brake Control Module
102	40A	Anti-Lock Brake Control Module
103	40A	Switched System Power Relay #4
104	30A	Left Power Seat, Left Power Lumbar, Driver Seat Module
105	30A	Ignition Switch, Starter Interrupt Relay
106	30A	Accessory Delay Relay, Power Mirrors, Adjustable Pedal
107	50A	Cooling Fans
108	–	NOT USED
109	30A	Heated Seats
110	50A	Right Power Sliding Door
111	40A	Central Junction Box
112	30A	Trailer Tow, Electric Brake
113	30A	Front Electronic Module (FEM)
114	40A	Switched System Power Relay #3
115	50A	Central Junction Box
116	30A	Rear Window Defrost
117	40A	Auxiliary Blower Motor
118	50A	Left Power Sliding Door
119	30A	Central Junction Box
120	40A	Front Blower Motor
121	20A	Ignition Switch
122	40A	Right Power Seat, Right Power Lumbar

CENTRAL JUNCTION BOX

REVISED

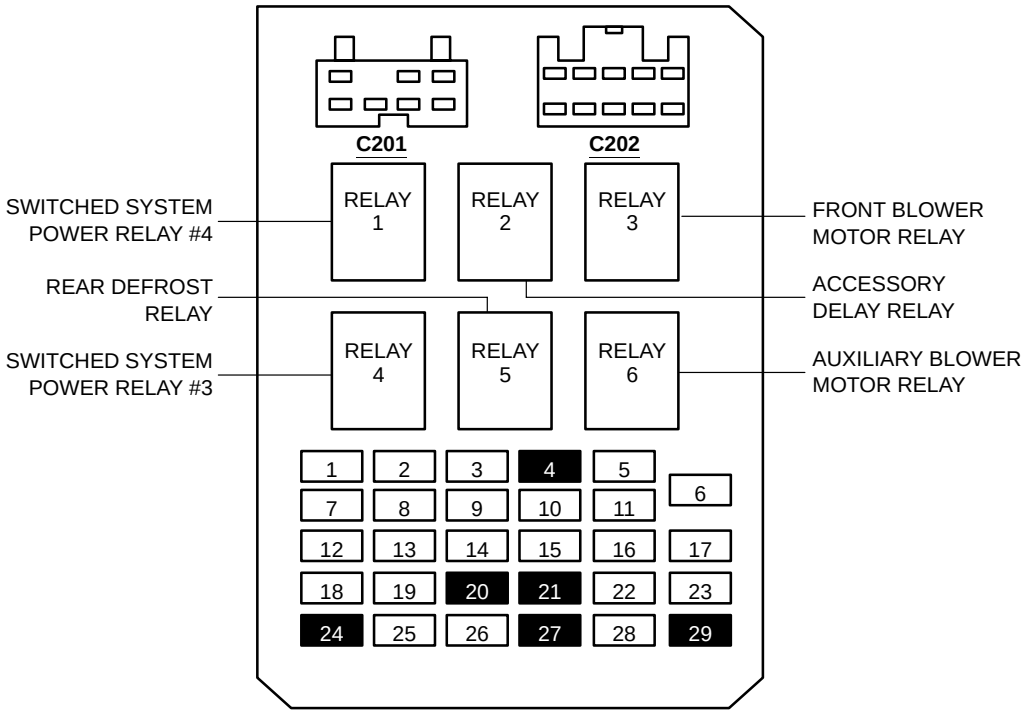

TOP VIEW

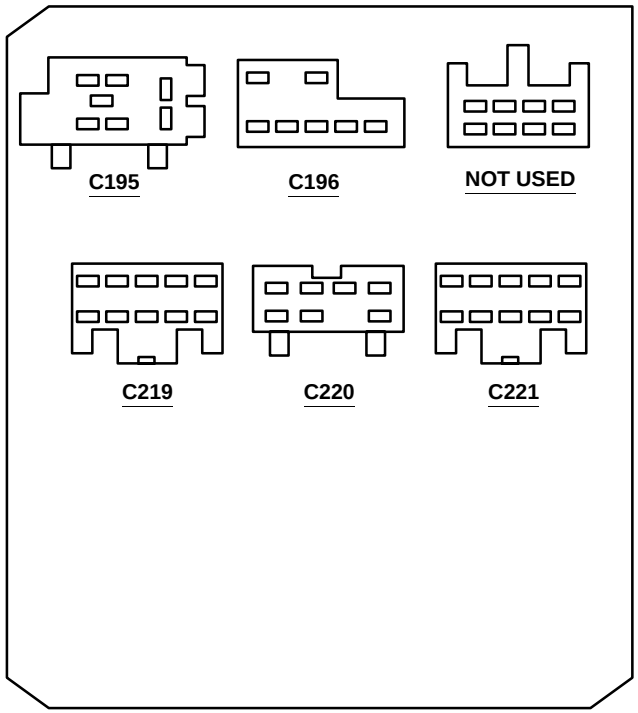

BOTTOM VIEW

11-5 FUSE PANEL/CIRCUIT PROTECTION

FUSE POSITION	AMPS	REVISED CIRCUITS PROTECTED
1	10A	Courtesy Lamps
2	25A	Left Instrument Panel Courtesy Lamp, Glove Box Lamp, Right Instrument Panel Courtesy Lamp, Video Cassette Player
3	15A	Exterior Rear View Mirrors, Adjustable Pedal, Left Seat Control Switch, Driver Seat Module, Memory Set Switch
4	–	NOT USED
5	20A	Instrument Panel Power Point, Console Power Point #1
6	15A	Remote Keyless Entry, Radio, Power Sliding Doors, Rear Seat Entertainment
7	15A	Right Rear Park/Stop Lamp, Left Rear Turn Lamp, Right Reversing Lamp, Left Reversing Lamp, License Lamps
8	20A	Rear Electronic Module (REM)
9	10A	Instrument Cluster, Powertrain Control Module (PCM)
10	15A	Shift Lock Actuator, Instrument Cluster, Climate Control Switch Assembly, Blend Door Actuator, Power Sliding Doors, Reverse Parking Aid, Anti-Lock Brakes, Speed Control, A/C Clutch Cycling Pressure Switch, Rear Defrost Relay, Brake Pressure Switch, Heated Seats
11	15A	Brake Pedal Position (BPP) Switch, Shift Lock Actuator, Electronic Brake Switch, Rear Electronic Module (REM)
12	20A	High Mounted Stoplamp
13	10A	Left Rear Park/Stop Lamp, Right Rear Turn Lamp
14	10A	Front Electronic Module (FEM), Electronic Day/Night Mirror, Compass, Overhead Console, Autolamp Sensor, Transmission Control Switch
15	20A	Console Power Point #2
16	10A	Rear Electronic Module (REM), Instrument Cluster
17	20A	Instrument Panel, Cigar Lighter, Data Link Connector (DLC)
18	15A	Radio, Power Windows, Instrument Illumination, Video Cassette Player
19	10A	Digital Transmission Range (DTR) Sensor
20	–	NOT USED
21	–	NOT USED
22	10A	Exterior Rear View Mirror Heaters
23	20A	Auxiliary Blower Speed Relay #1 and #2, Rear Power Point
24	–	NOT USED
25	10A	Radio
26	10A	Restraint Control Module
27	–	NOT USED
28	10A	Instrument Cluster
29	–	NOT USED