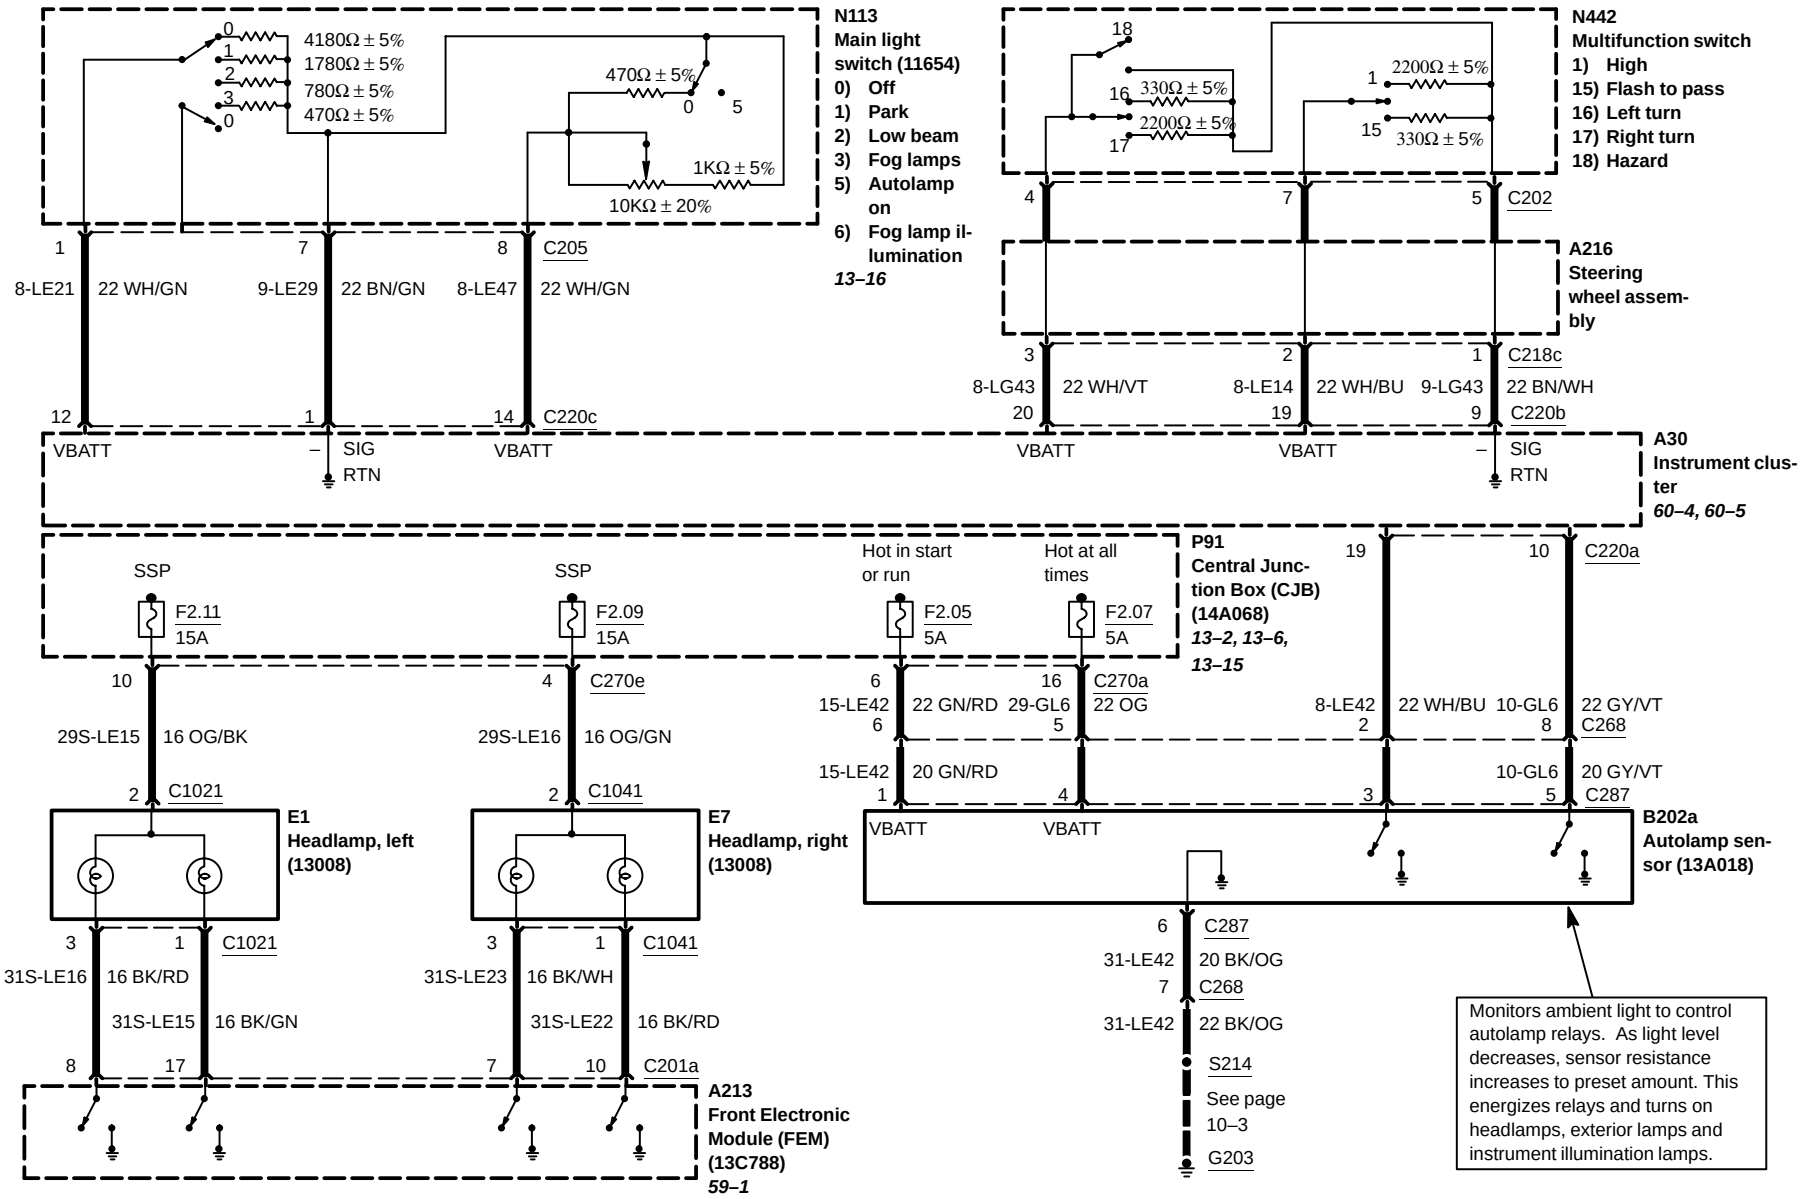
N113
Main light switch (11654)
0) Off
1) Park
2) Low beam
3) Fog lamps
5) Autolamp on
6) Fog lamp illumination
13–16
4180Ω ± 5%
1780Ω ± 5%
780Ω ± 5%
470Ω ± 5%
470Ω ± 5%
1KΩ ± 5%
10KΩ ± 20%
N442
Multifunction switch
1) High
15) Flash to pass
16) Left turn
17) Right turn
18) Hazard
330Ω ± 5%
2200Ω ± 5%
2200Ω ± 5%
330Ω ± 5%
C202
A216
Steering wheel assembly
C218c
C205
8-LE21 22 WH/GN
9-LE29 22 BN/GN
8-LE47 22 WH/GN
8-LG43 22 WH/VT
8-LE14 22 WH/BU
9-LG43 22 BN/WH
C220c
C220b
VBATT
SIG RTN
VBATT
VBATT
VBATT
SIG RTN
A30
Instrument cluster
60–4, 60–5
SSP
F2.11 15A
SSP
F2.09 15A
Hot in start or run
F2.05 5A
Hot at all times
F2.07 5A
P91
Central Junction Box (CJB) (14A068)
13–2, 13–6, 13–15
C220a
C270e
29S-LE15 16 OG/BK
29S-LE16 16 OG/GN
15-LE42 22 GN/RD
29-GL6 22 OG
8-LE42 22 WH/BU
10-GL6 22 GY/VT
C268
15-LE42 20 GN/RD
10-GL6 20 GY/VT
C287
C1021
C1041
VBATT
VBATT
B202a
Autolamp sensor (13A018)
E1
Headlamp, left (13008)
E7
Headlamp, right (13008)
C1021
C1041
31S-LE16 16 BK/RD
31S-LE15 16 BK/GN
31S-LE23 16 BK/WH
31S-LE22 16 BK/RD
C287
31-LE42 20 BK/OG
C268
31-LE42 22 BK/OG
S214
See page 10–3
G203
C201a
A213
Front Electronic Module (FEM) (13C788)
59–1
Monitors ambient light to control autolamp relays. As light level decreases, sensor resistance increases to preset amount. This energizes relays and turns on headlamps, exterior lamps and instrument illumination lamps.