C613 (WH)

14630

Tweeter, right front

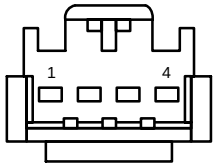

F042357

Pin	Circuit	Circuit function
1	805 (WH/LG)	Speaker, right front (18808) +
2	811 (DG/OG)	Speaker, right front (18808) –
3	187 (DB/OG)	Tweeter, right front, to, Speaker, right front (18808) +
4	189 (TN/LB)	Tweeter, right front, to, Speaker, right front (18808) –

C702 (BK)

14632/19A017

Speaker, left rear (18808)

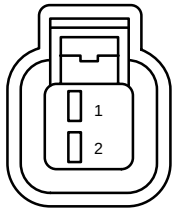

F02069

Pin	Circuit	Circuit function
1	802 (OG/RD)	Speaker, left rear (18808) +
2	803 (BN/PK)	Speaker, left rear (18808) –

C701 (GY)

14632

Window adjust switch, left rear (14A412)

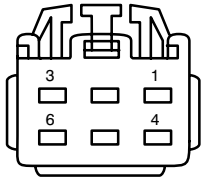

F06213

Pin	Circuit	Circuit function
1	316 (YE/LB)	Window switch, feed, left rear, Down
2	884 (YE/BK)	Window switch, to, Window motor, left rear
3	170 (RD/LB)	Accessory delay relay, switched power, output
4	–	not used
5	885 (YE/LB)	Window switch, to, Window motor, left rear
6	317 (GY/OG)	Window switch, feed, left rear, Up

C703 (GY)

14632

Power window motor, left rear (23394)

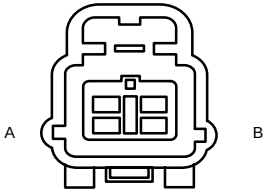

F02595

Pin	Circuit	Circuit function
A	884 (YE/BK)	Window switch, to, Window motor, left rear
B	885 (YE/LB)	Window switch, to, Window motor, left rear