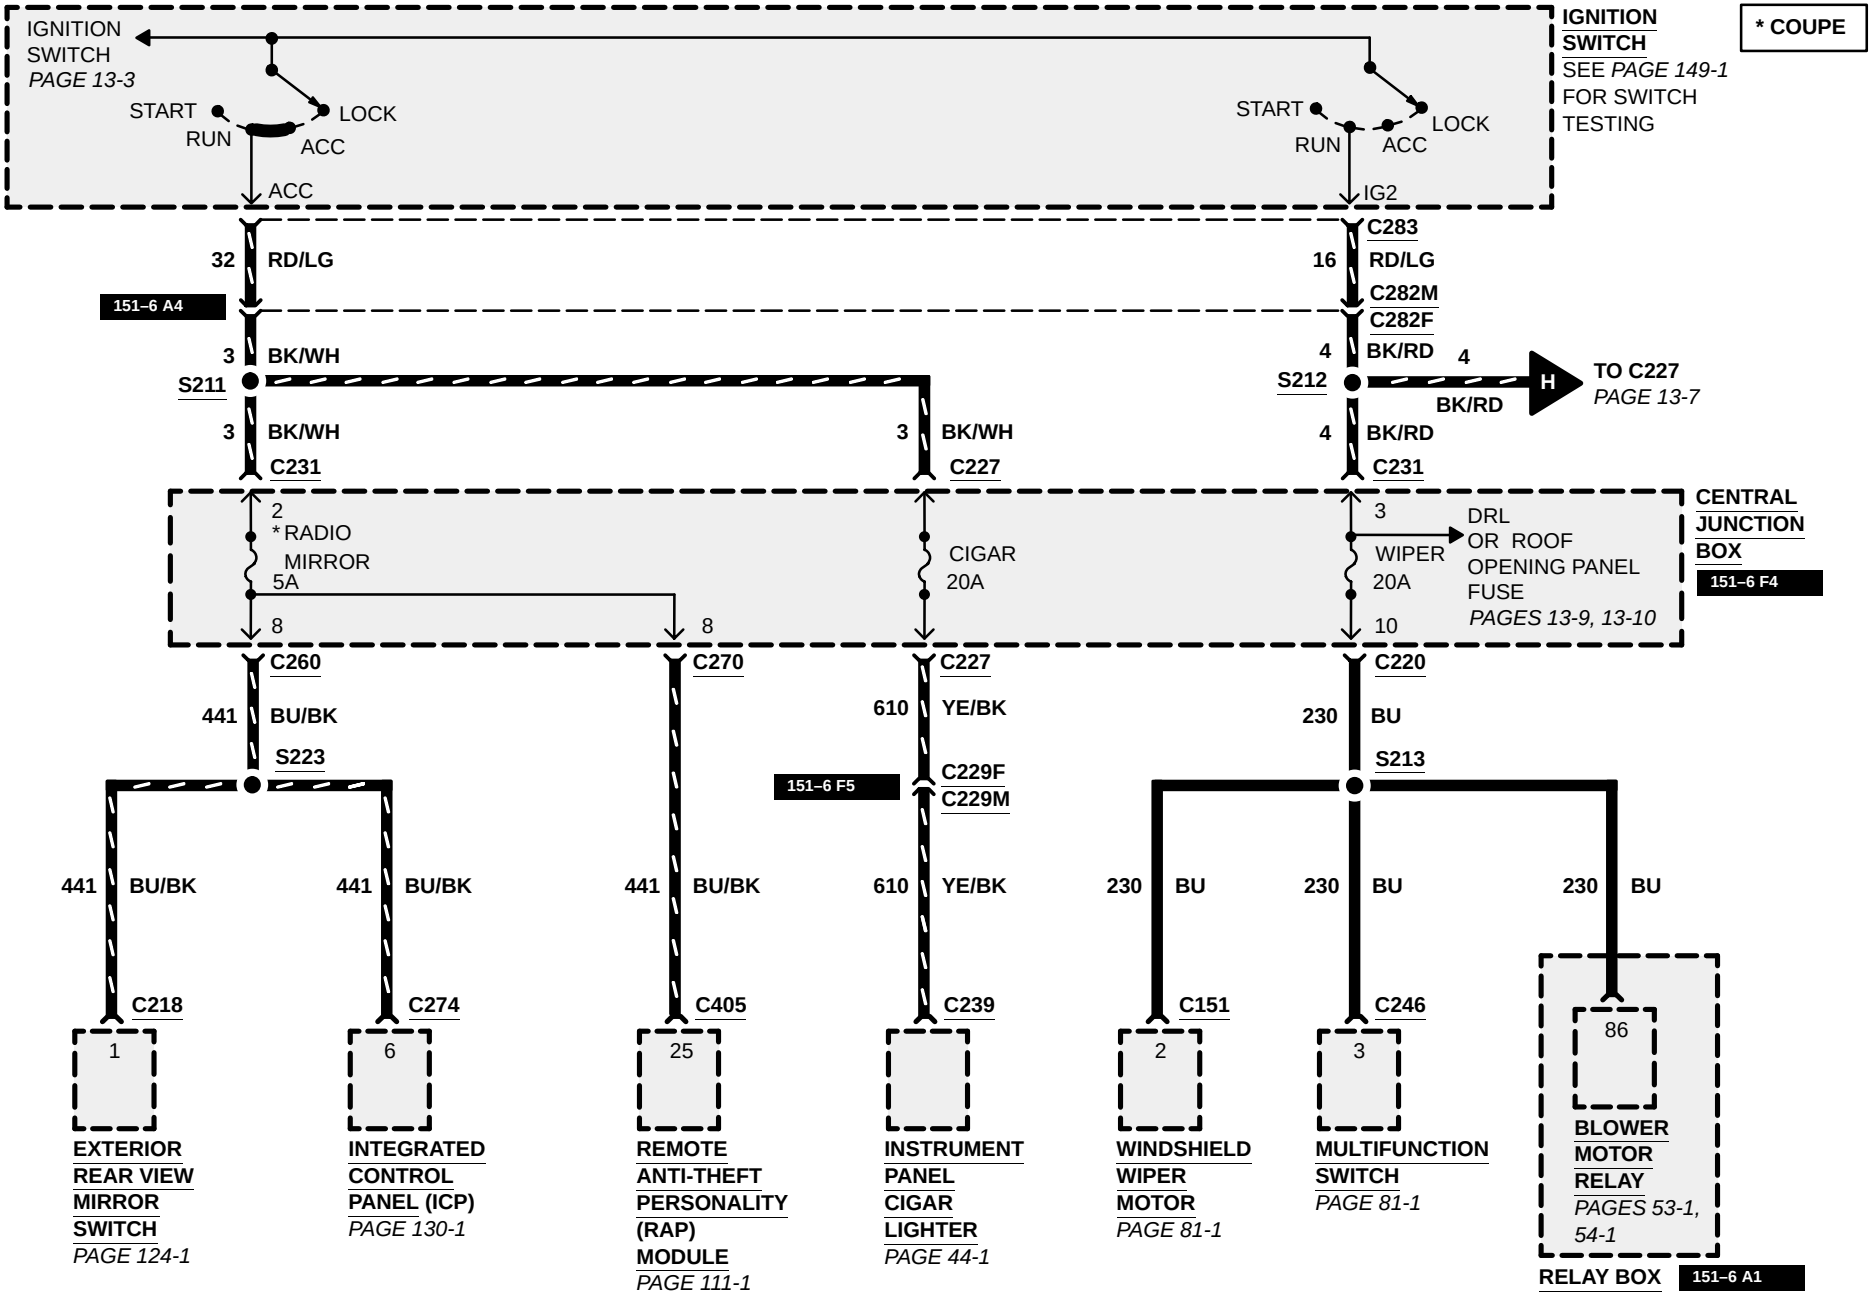
IGNITION SWITCH
PAGE 13-3
START
RUN
LOCK
ACC
ACC
START
RUN
ACC
LOCK
IG2
IGNITION SWITCH
SEE PAGE 149-1 FOR SWITCH TESTING
* COUPE
32 RD/LG
151–6 A4
16 RD/LG
C283
C282M
C282F
3 BK/WH
S211
4 BK/RD
S212
4
BK/RD
H
TO C227
PAGE 13-7
3 BK/WH
C231
3 BK/WH
C227
4 BK/RD
C231
CENTRAL JUNCTION BOX
151–6 F4
2
*RADIO
MIRROR
5A
CIGAR
20A
3
WIPER
20A
DRL
OR ROOF
OPENING PANEL
FUSE
PAGES 13-9, 13-10
8
8
10
C260
C270
C227
C220
441 BU/BK
S223
610 YE/BK
C229F
C229M
151–6 F5
230 BU
S213
441 BU/BK
441 BU/BK
441 BU/BK
610 YE/BK
230 BU
230 BU
230 BU
C218
C274
C405
C239
C151
C246
1
6
25
2
3
86
EXTERIOR REAR VIEW MIRROR SWITCH
PAGE 124-1
INTEGRATED CONTROL PANEL (ICP)
PAGE 130-1
REMOTE ANTI-THEFT PERSONALITY (RAP) MODULE
PAGE 111-1
INSTRUMENT PANEL CIGAR LIGHTER
PAGE 44-1
WINDSHIELD WIPER MOTOR
PAGE 81-1
MULTIFUNCTION SWITCH
PAGE 81-1
BLOWER MOTOR RELAY
PAGES 53-1, 54-1
RELAY BOX
151–6 A1