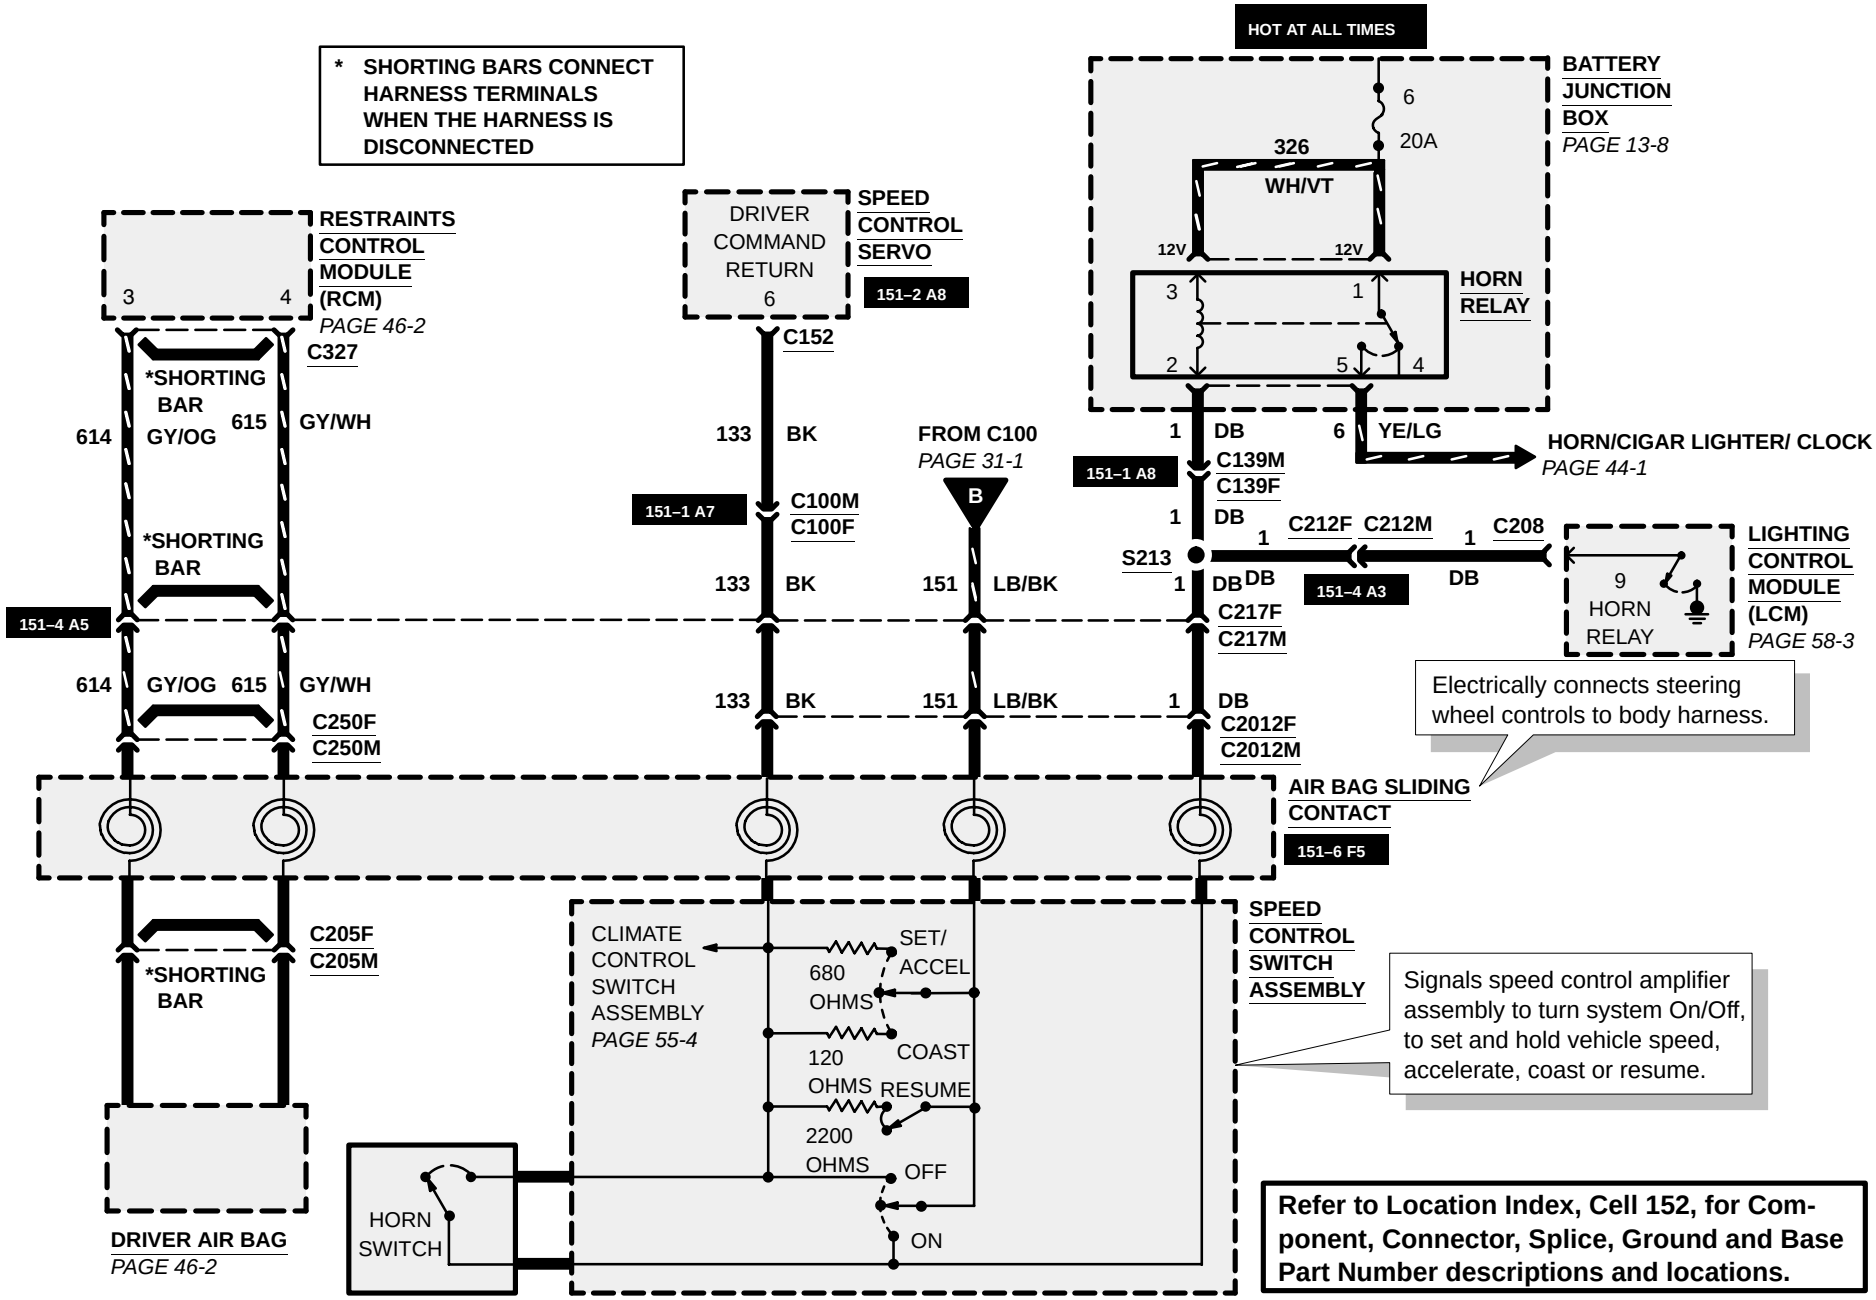
* SHORTING BARS CONNECT HARNESS TERMINALS WHEN THE HARNESS IS DISCONNECTED
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-8
6
20A
326
WH/VT
12V
12V
HORN RELAY
3
1
2
5
4
RESTRAINTS CONTROL MODULE (RCM)
PAGE 46-2
3
4
C327
*SHORTING BAR
614 GY/OG
615 GY/WH
*SHORTING BAR
151–4 A5
614 GY/OG
615 GY/WH
C250F
C250M
*SHORTING BAR
C205F
C205M
DRIVER AIR BAG
PAGE 46-2
DRIVER COMMAND RETURN
6
SPEED CONTROL SERVO
151–2 A8
C152
133 BK
C100M
C100F
151–1 A7
133 BK
151 LB/BK
133 BK
151 LB/BK
FROM C100
PAGE 31-1
B
1 DB
C139M
C139F
151–1 A8
1 DB
S213
1 DB
C217F
C217M
1 DB
C2012F
C2012M
6 YE/LG
HORN/CIGAR LIGHTER/ CLOCK
PAGE 44-1
1 C212F C212M 1 C208
DB DB
151–4 A3
LIGHTING CONTROL MODULE (LCM)
PAGE 58-3
9
HORN RELAY
Electrically connects steering wheel controls to body harness.
AIR BAG SLIDING CONTACT
151–6 F5
CLIMATE CONTROL SWITCH ASSEMBLY
PAGE 55-4
SET/ ACCEL
680 OHMS
120 OHMS
COAST
RESUME
2200 OHMS
OFF
ON
HORN SWITCH
SPEED CONTROL SWITCH ASSEMBLY
Signals speed control amplifier assembly to turn system On/Off, to set and hold vehicle speed, accelerate, coast or resume.
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.