10-1 GROUNDS

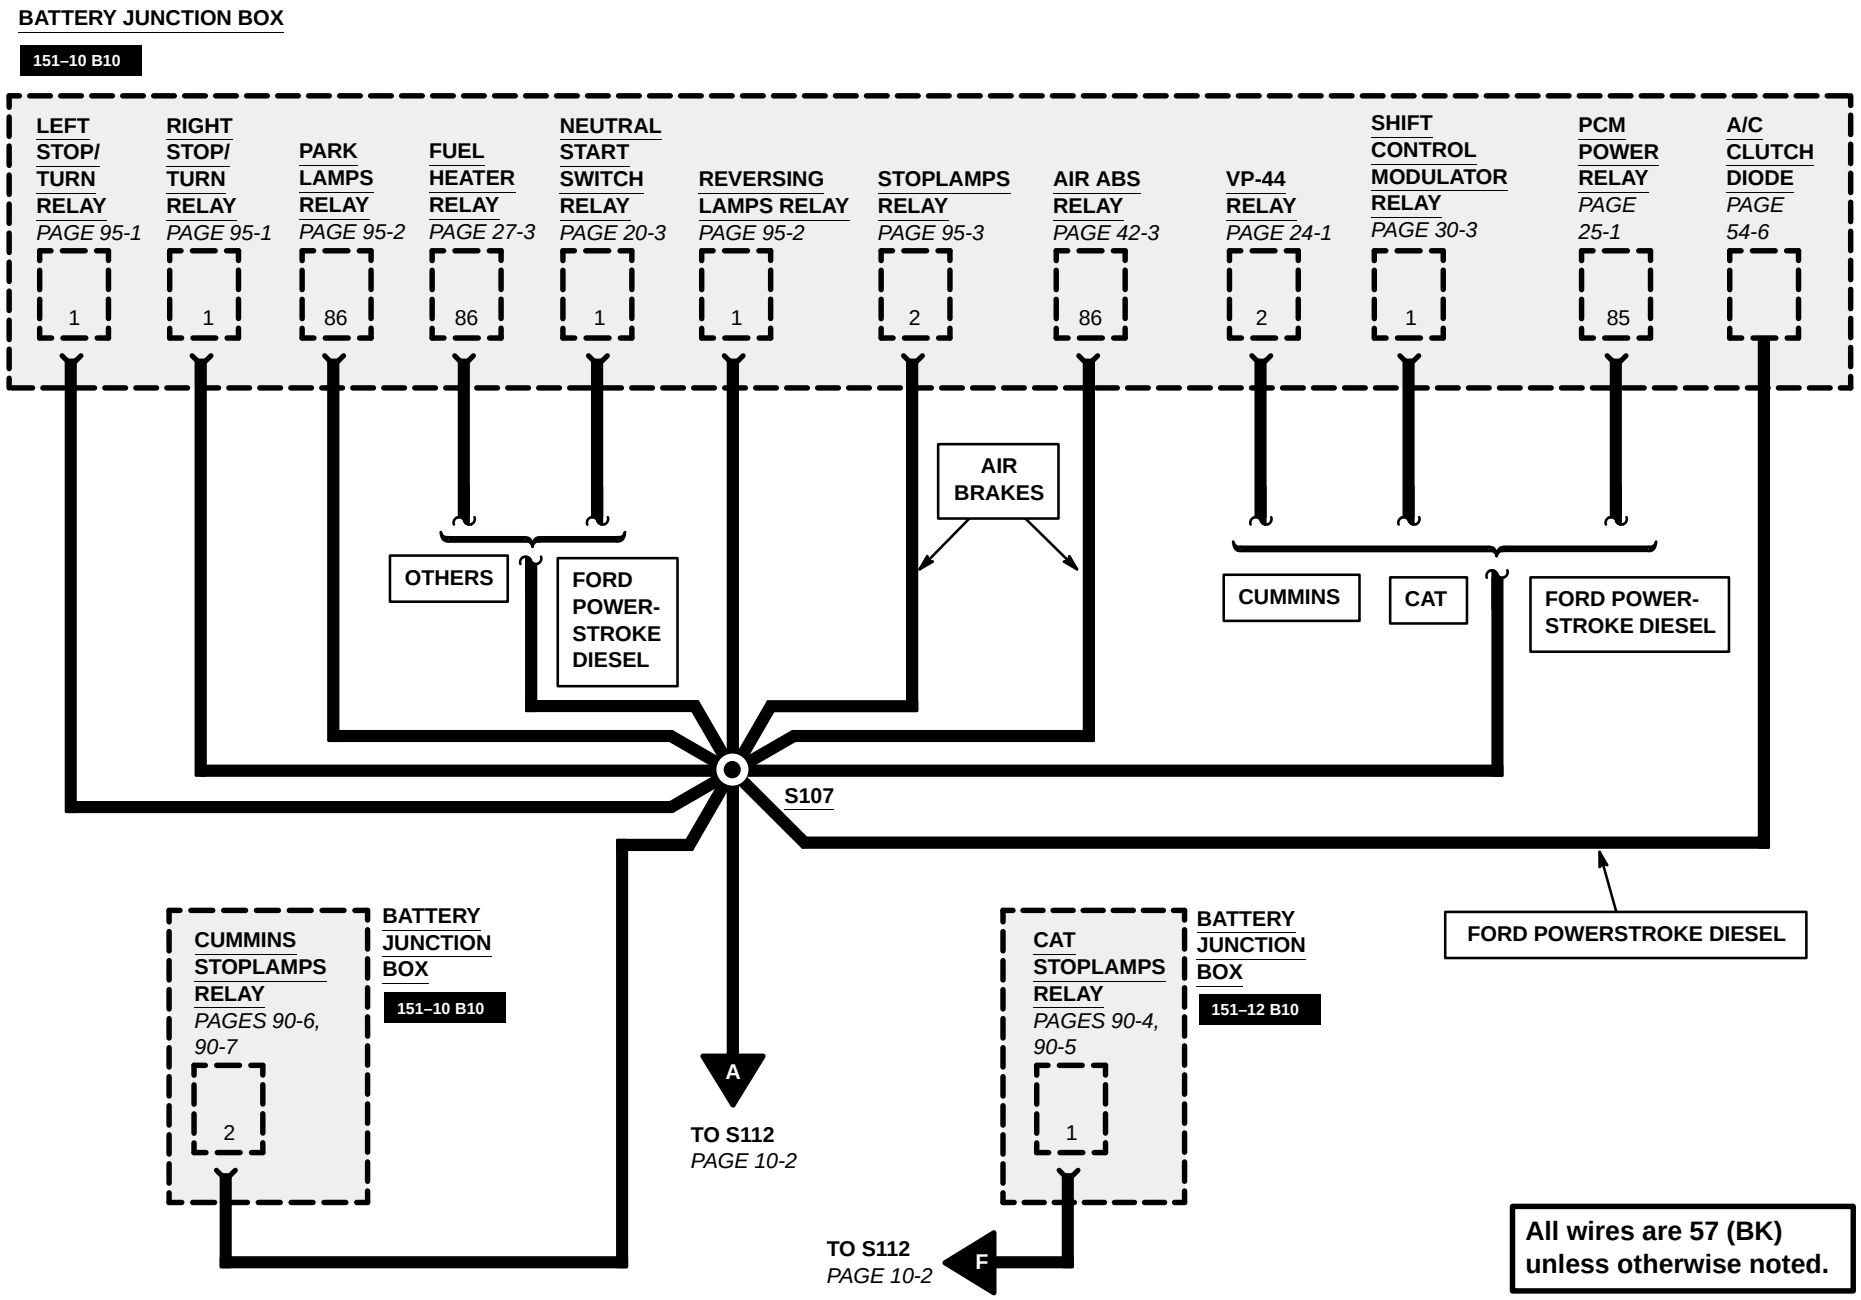
BATTERY JUNCTION BOX
151–10 B10
LEFT STOP/ TURN RELAY
PAGE 95-1
RIGHT STOP/ TURN RELAY
PAGE 95-1
PARK LAMPS RELAY
PAGE 95-2
FUEL HEATER RELAY
PAGE 27-3
NEUTRAL START SWITCH RELAY
PAGE 20-3
REVERSING LAMPS RELAY
PAGE 95-2
STOPLAMPS RELAY
PAGE 95-3
AIR ABS RELAY
PAGE 42-3
VP-44 RELAY
PAGE 24-1
SHIFT CONTROL MODULATOR RELAY
PAGE 30-3
PCM POWER RELAY
PAGE 25-1
A/C CLUTCH DIODE
PAGE 54-6
1
1
86
86
1
1
2
86
2
1
85
AIR BRAKES
OTHERS
FORD POWER-STROKE DIESEL
CUMMINS
CAT
FORD POWER-STROKE DIESEL
S107
FORD POWERSTROKE DIESEL
CUMMINS STOPLAMPS RELAY
PAGES 90-6, 90-7
2
BATTERY JUNCTION BOX
151–10 B10
A
TO S112
PAGE 10-2
CAT STOPLAMPS RELAY
PAGES 90-4, 90-5
1
BATTERY JUNCTION BOX
151–12 B10
TO S112
PAGE 10-2
F
All wires are 57 (BK) unless otherwise noted.