REVISED

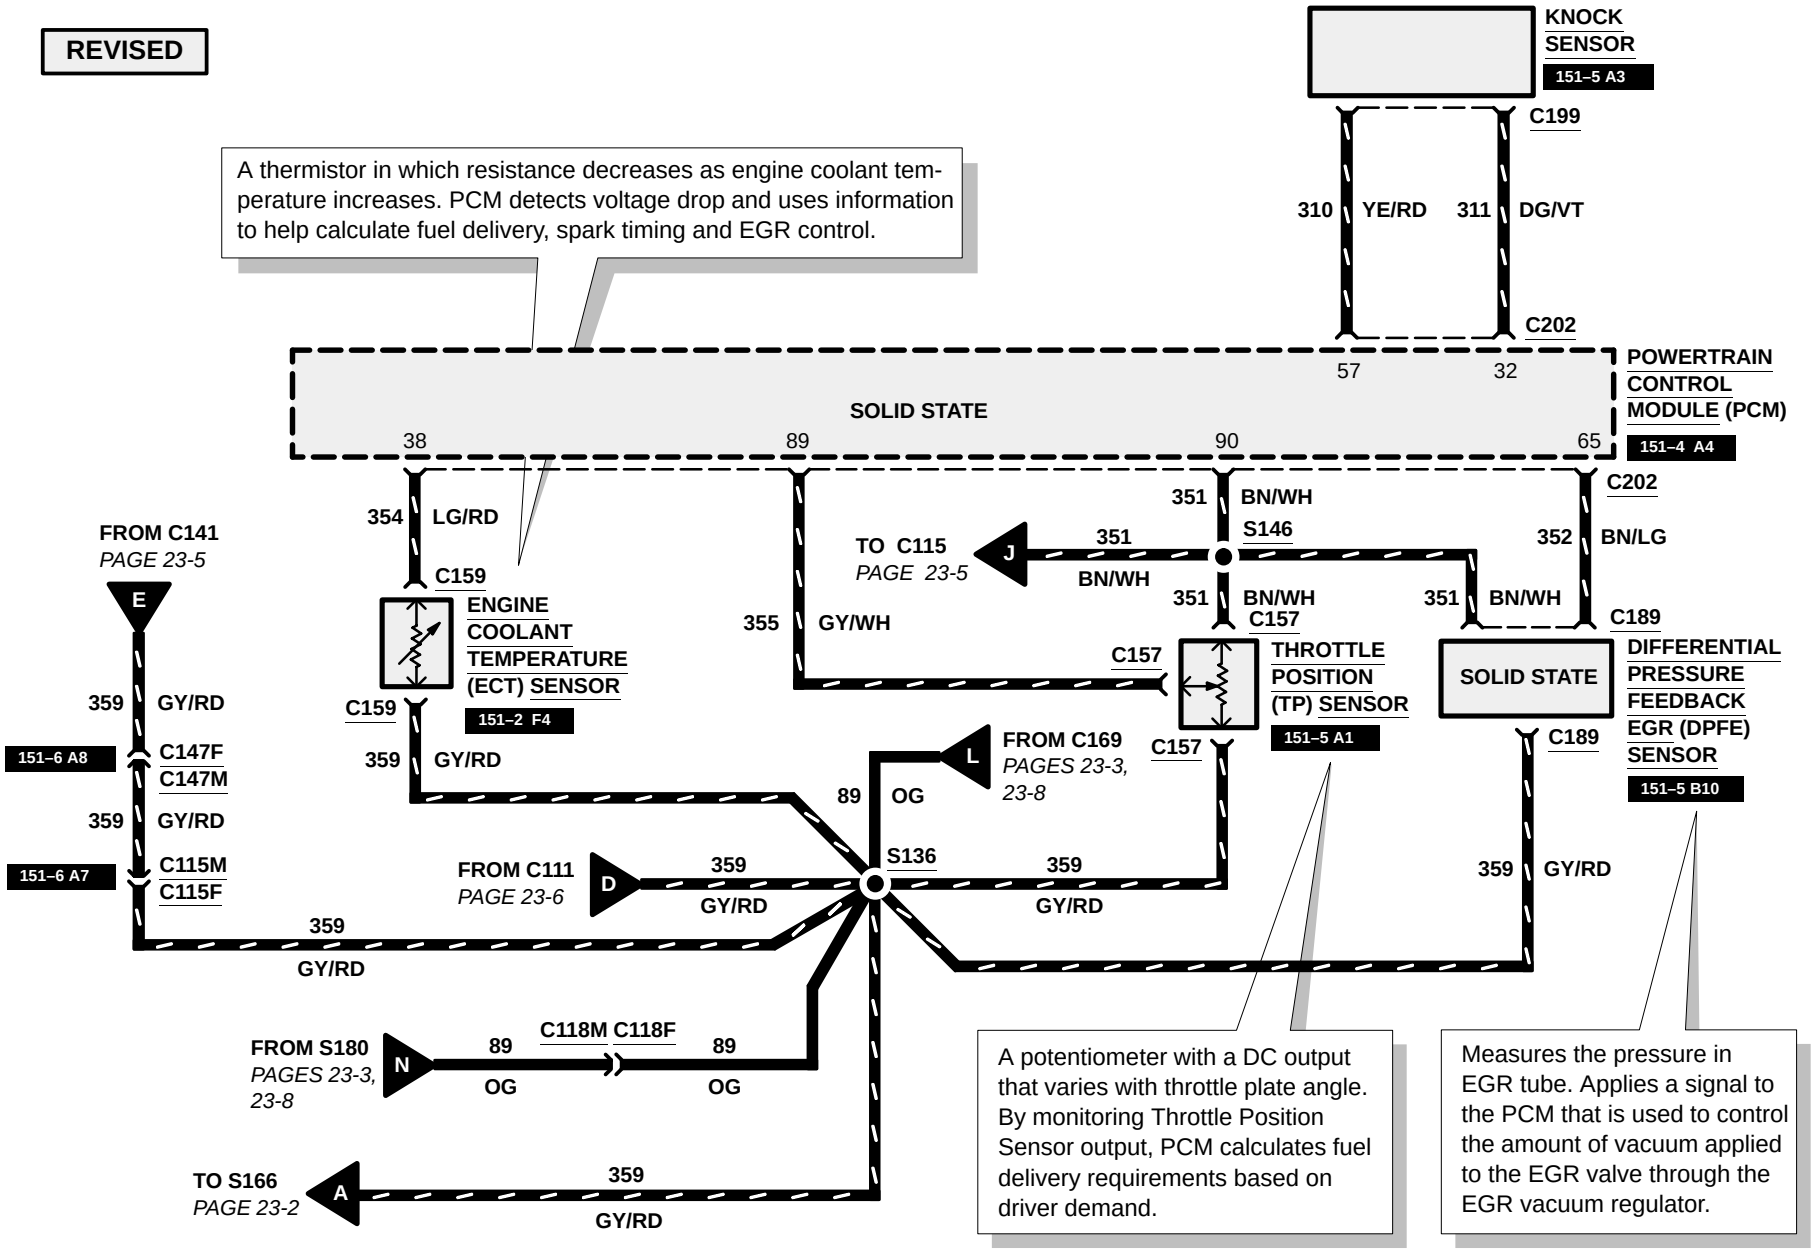
KNOCK SENSOR
151–5 A3
C199
310 YE/RD
311 DG/VT
C202
57
32
A thermistor in which resistance decreases as engine coolant temperature increases. PCM detects voltage drop and uses information to help calculate fuel delivery, spark timing and EGR control.
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–4 A4
38
89
90
65
354 LG/RD
C159
ENGINE COOLANT TEMPERATURE (ECT) SENSOR
151–2 F4
C159
359 GY/RD
FROM C141
PAGE 23-5
E
359 GY/RD
151–6 A8
C147F
C147M
359 GY/RD
151–6 A7
C115M
C115F
359 GY/RD
355 GY/WH
351 BN/WH
S146
TO C115
PAGE 23-5
J
351 BN/WH
351 BN/WH
C157
C157
THROTTLE POSITION (TP) SENSOR
151–5 A1
C157
89 OG
FROM C169
PAGES 23-3, 23-8
L
FROM C111
PAGE 23-6
D
359 GY/RD
S136
359 GY/RD
FROM S180
PAGES 23-3, 23-8
N
89 OG
C118M C118F
89 OG
TO S166
PAGE 23-2
A
359 GY/RD
C202
352 BN/LG
C189
SOLID STATE
DIFFERENTIAL PRESSURE FEEDBACK EGR (DPFE) SENSOR
151–5 B10
C189
359 GY/RD
A potentiometer with a DC output that varies with throttle plate angle. By monitoring Throttle Position Sensor output, PCM calculates fuel delivery requirements based on driver demand.
Measures the pressure in EGR tube. Applies a signal to the PCM that is used to control the amount of vacuum applied to the EGR valve through the EGR vacuum regulator.