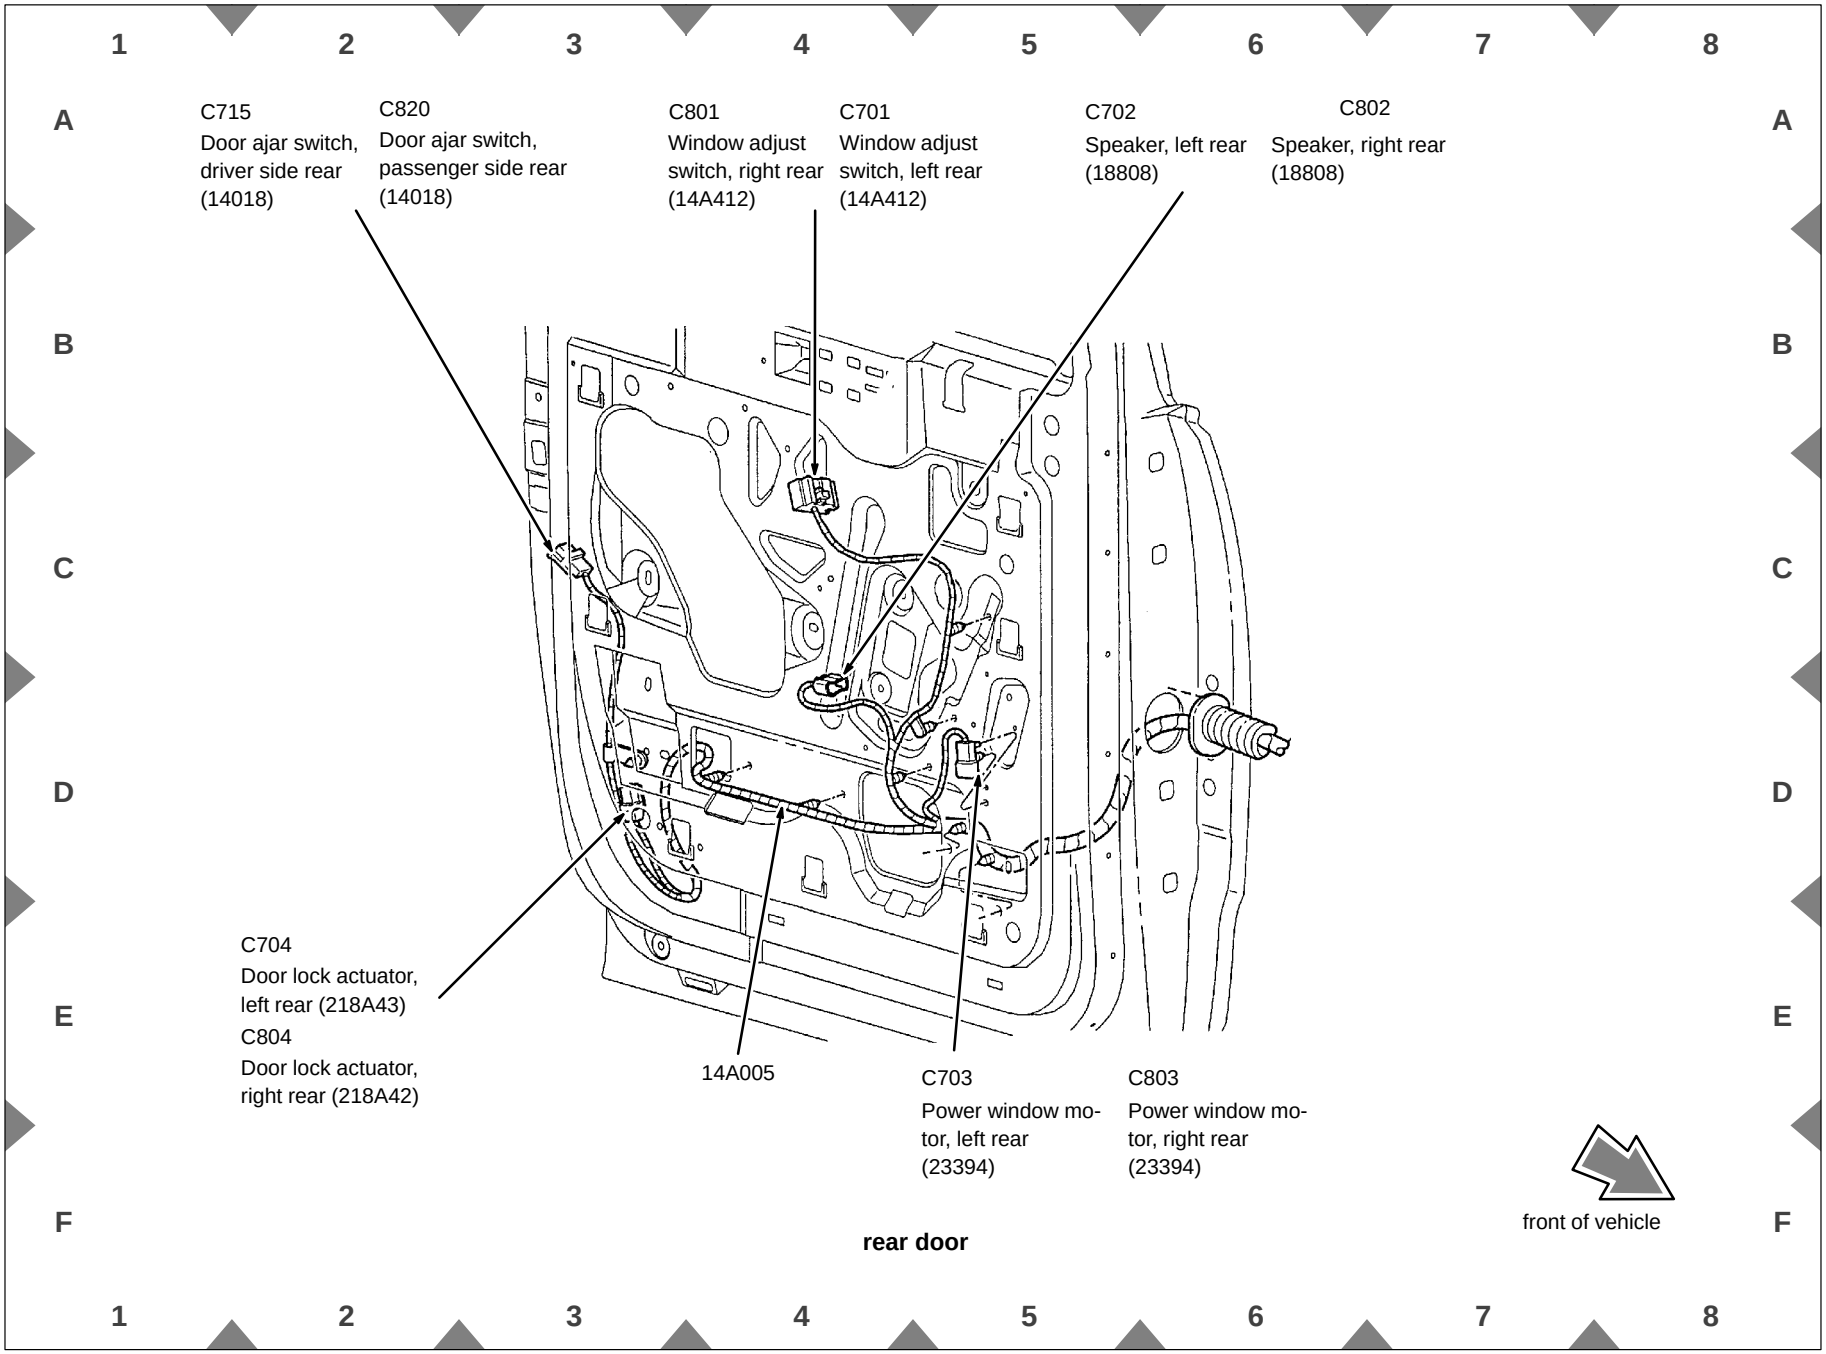
1 2 3 4 5 6 7 8
A B C D E F
C715
Door ajar switch, driver side rear (14018)
C820
Door ajar switch, passenger side rear (14018)
C801
Window adjust switch, right rear (14A412)
C701
Window adjust switch, left rear (14A412)
C702
Speaker, left rear (18808)
C802
Speaker, right rear (18808)
C704
Door lock actuator, left rear (218A43)
C804
Door lock actuator, right rear (218A42)
14A005
C703
Power window motor, left rear (23394)
C803
Power window motor, right rear (23394)
front of vehicle

rear door