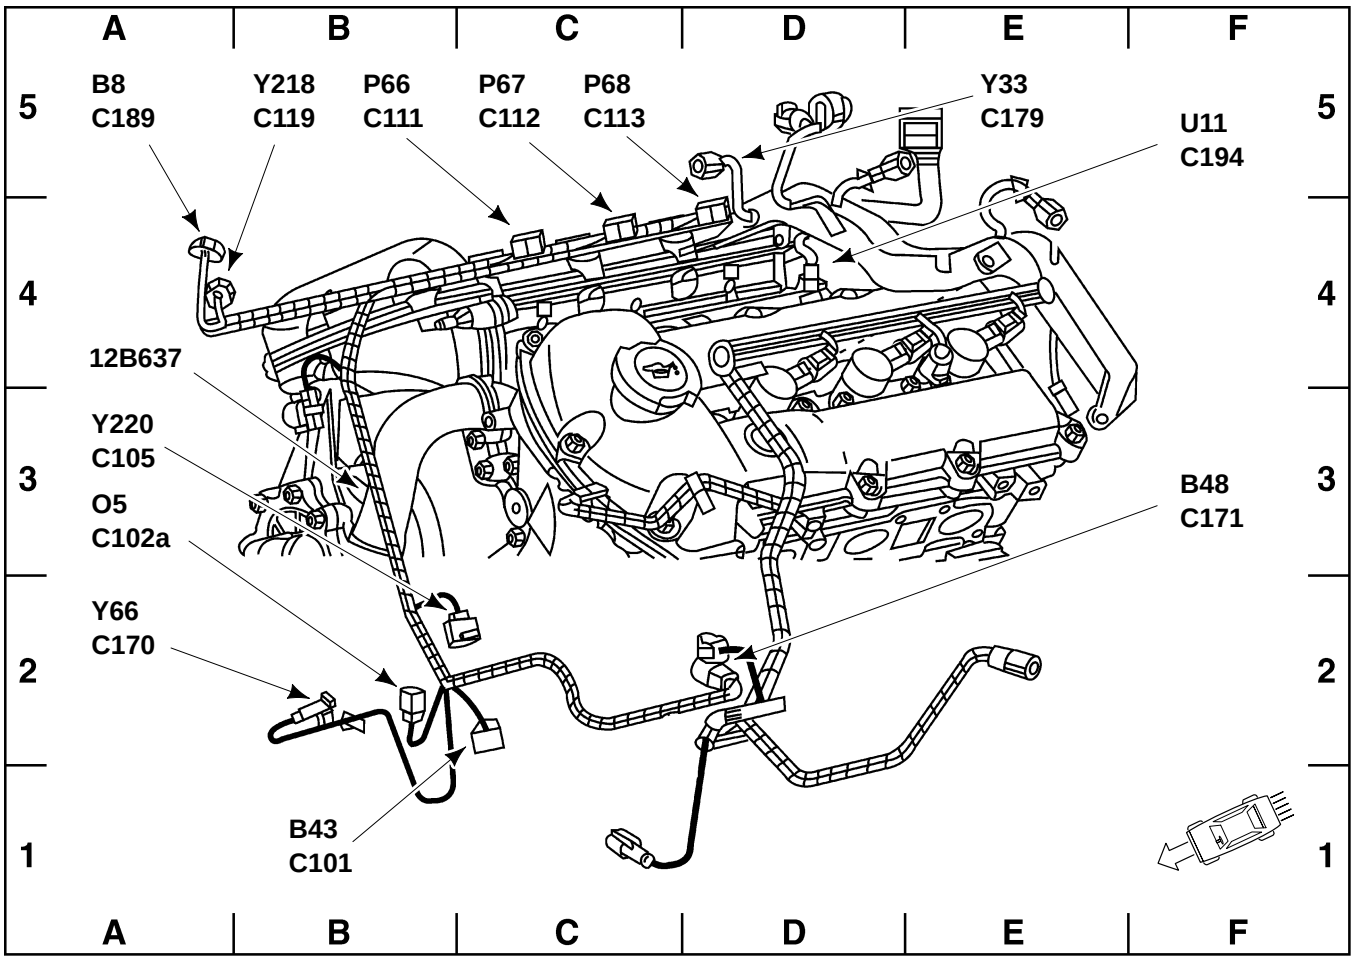


3.0L Engine

12B637	A 4	C179	E 5
B8 . . . Throttle Position Sensor (TPS)	A 5	C189	A 5
B43 . . Crankshaft position sensor	B 1	C194	F 5
B48 . . Heated Oxygen Sensor (HO2S) #11	F 3	O5 . . . Generator	A 3
C101	B 1	P66 . . Coil On Plug (COP) 1	B 5
C102a	A 3	P67 . . Coil On Plug (COP) 2	C 5
C105	A 3	P68 . . Coil On Plug (COP) 3	C 5
C111	B 5	U11 . . Ignition transformer capacitor 2	F 5
C112	C 5	Y33 . . Electr. Vacuum Regulator (EVR) solenoid valve	E 5
C113	C 5	Y66 . . Vacuum diverter valve solenoid	A 2
C119	B 5	Y218 . Inlet air control valve solenoid	B 5
C170	A 2	Y220 . Hydraulic fan solenoid	A 3
C171	F 3		