# Seat adjust switch, passenger side front

## Schematic

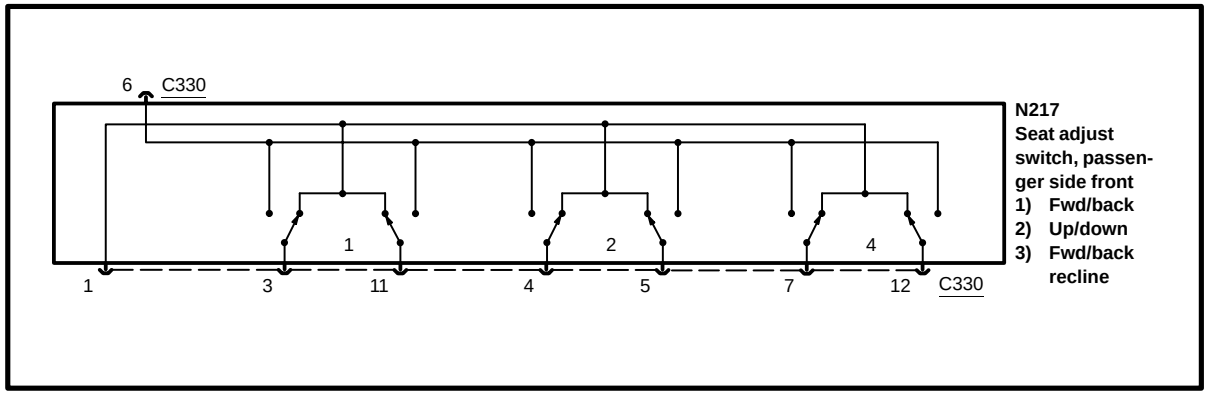


## Terminals

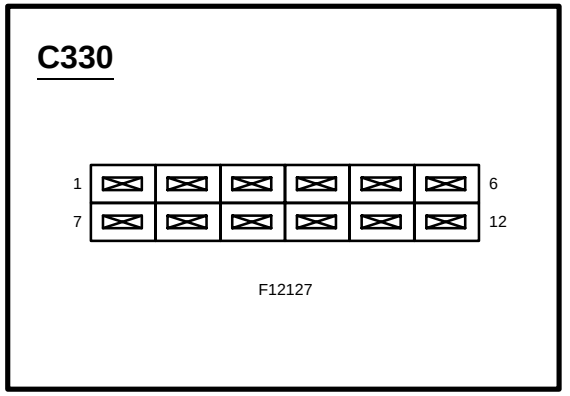


## Component testing procedure

| Circuit to test | Connect self–powered test light or ohm-meter to terminals | Move switch to these positions | A good switch will indicate |
|---|---|---|---|
| **Backrest circuit** | 6 and 7 | Rest /Backrest rearward | Open circuit |
| | | Backrest forward | Closed circuit |
| | 6 and 12 | Rest /Backrest forward | Open circuit |
| | | Backrest rearward | Closed circuit |
| **Forward/Rearward circuit** | 3 and 6 | Rest /Seat rearward | Open circuit |
| | | Seat Forward | Closed circuit |
| | 6 and 11 | Rest /Seat rearward | Open circuit |
| | | Tilt telescope motors | Closed circuit |
| **Height circuit** | 5 and 6 | Rest /Front Height Down | Open circuit |
| | | Front Height Up | Closed circuit |
| | 4 and 6 | Rest /Front Height Up | Open circuit |
| | | Front Height Down | Closed circuit |