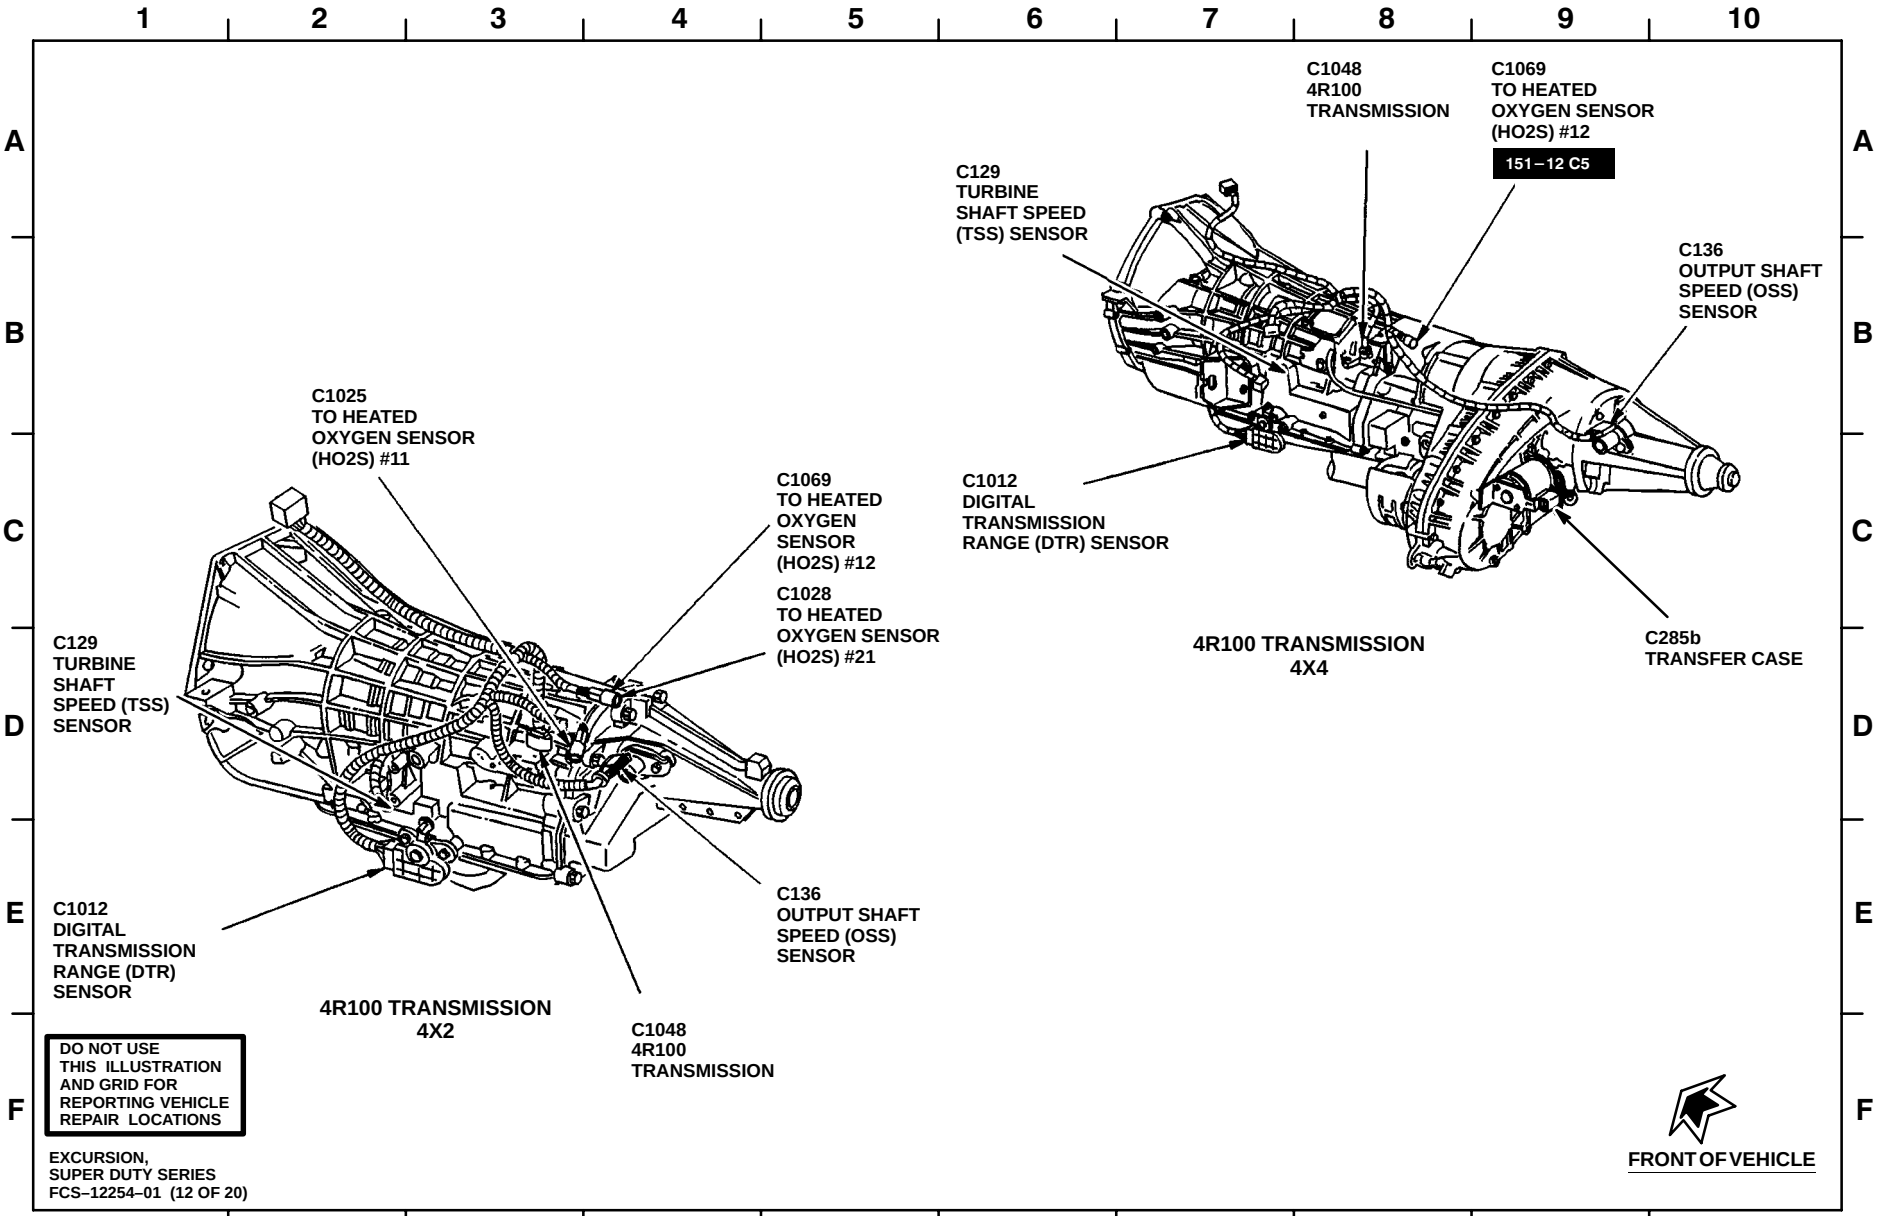
1 2 3 4 5 6 7 8 9 10
A B C D E F
C1048
4R100
TRANSMISSION
C1069
TO HEATED
OXYGEN SENSOR
(HO2S) #12
151–12 C5
C129
TURBINE
SHAFT SPEED
(TSS) SENSOR
C136
OUTPUT SHAFT
SPEED (OSS)
SENSOR
C1012
DIGITAL
TRANSMISSION
RANGE (DTR) SENSOR
C285b
TRANSFER CASE
4R100 TRANSMISSION
4X4
C1025
TO HEATED
OXYGEN SENSOR
(HO2S) #11
C1069
TO HEATED
OXYGEN
SENSOR
(HO2S) #12
C1028
TO HEATED
OXYGEN SENSOR
(HO2S) #21
C129
TURBINE
SHAFT
SPEED (TSS)
SENSOR
C1012
DIGITAL
TRANSMISSION
RANGE (DTR)
SENSOR
C136
OUTPUT SHAFT
SPEED (OSS)
SENSOR
4R100 TRANSMISSION
4X2
C1048
4R100
TRANSMISSION
DO NOT USE
THIS ILLUSTRATION
AND GRID FOR
REPORTING VEHICLE
REPAIR LOCATIONS
EXCURSION,
SUPER DUTY SERIES
FCS–12254–01 (12 OF 20)
FRONT OF VEHICLE