## C281b

### 14B079

Four-wheel drive control module

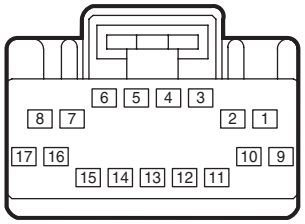


XW4T-14A464-HA (F)

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 3125 (RD/YE) | J1850 com1 (-) |
| 2 | 1203 (BK/LB) | Electronic module logic ground (type 2 ground) |
| 3 | — | not used |
| 4 | 693 (OG) | module diagnostic |
| 5 | — | not used |
| 6 | — | not used |
| 7 | — | not used |
| 8 | 972 (BK/WH) | AWD module power feed |
| 9 | 3126 (TN/YE) | J1850 com2 (+) |
| 10 | — | not used |
| 11 | — | not used |
| 12 | — | not used |
| 13 | — | not used |
| 14 | 357 (YE/WH) | Module, powertrain control to throttle position sensor, #2 |
| 15 | — | not used |
| 16 | — | not used |
| 17 | — | not used |

## C282

### 14401

Inertia Fuel Shut-off (IFS) switch

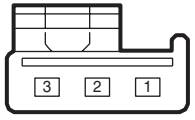


E8AB-14489-AA (F)

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 866 (WH) | Fuel pump inertia switch to module |
| 2 | 973 (RD) | Battery feed to auxiliary fuel selector switch |
| 3 | — | not used |

## C286

### 14401

Sunload sensor

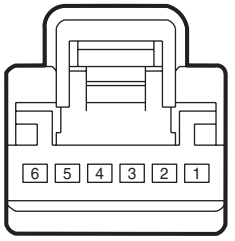


F8VB-14A464-AB (F)

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 468 (BN) | EATC LH sunload sensor, positive |
| 2 | 218 (WH/VT) | Autolamp amplifier to sensor |
| 3 | 645 (WH/LB) | Module, perimeter anti-theft - fused feed |
| 4 | 343 (DB/LG) | Module, perimeter anti-theft - warning lamp |
| 5 | 1205 (BK) | General ground (type 4 ground) |
| 6 | 468 (BN) | EATC LH sunload sensor, positive |

## C289

### 19C603

Temperature blend door actuator, left

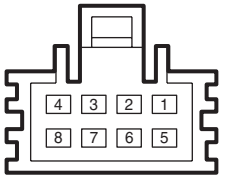


E8OB-14489-RA (F)

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 114 (LB/YE) | VAPS control assembly - diagnostic input |
| 2 | — | not used |
| 3 | — | not used |
| 4 | — | not used |
| 5 | 292 (BN) | 18 ga fuse link |
| 6 | 780 (DB) | Electrical shift module to 2h 4h switch |
| 7 | 290 (GY) | 12 ga fuse link |
| 8 | 291 (BK) | 16 ga fuse link |