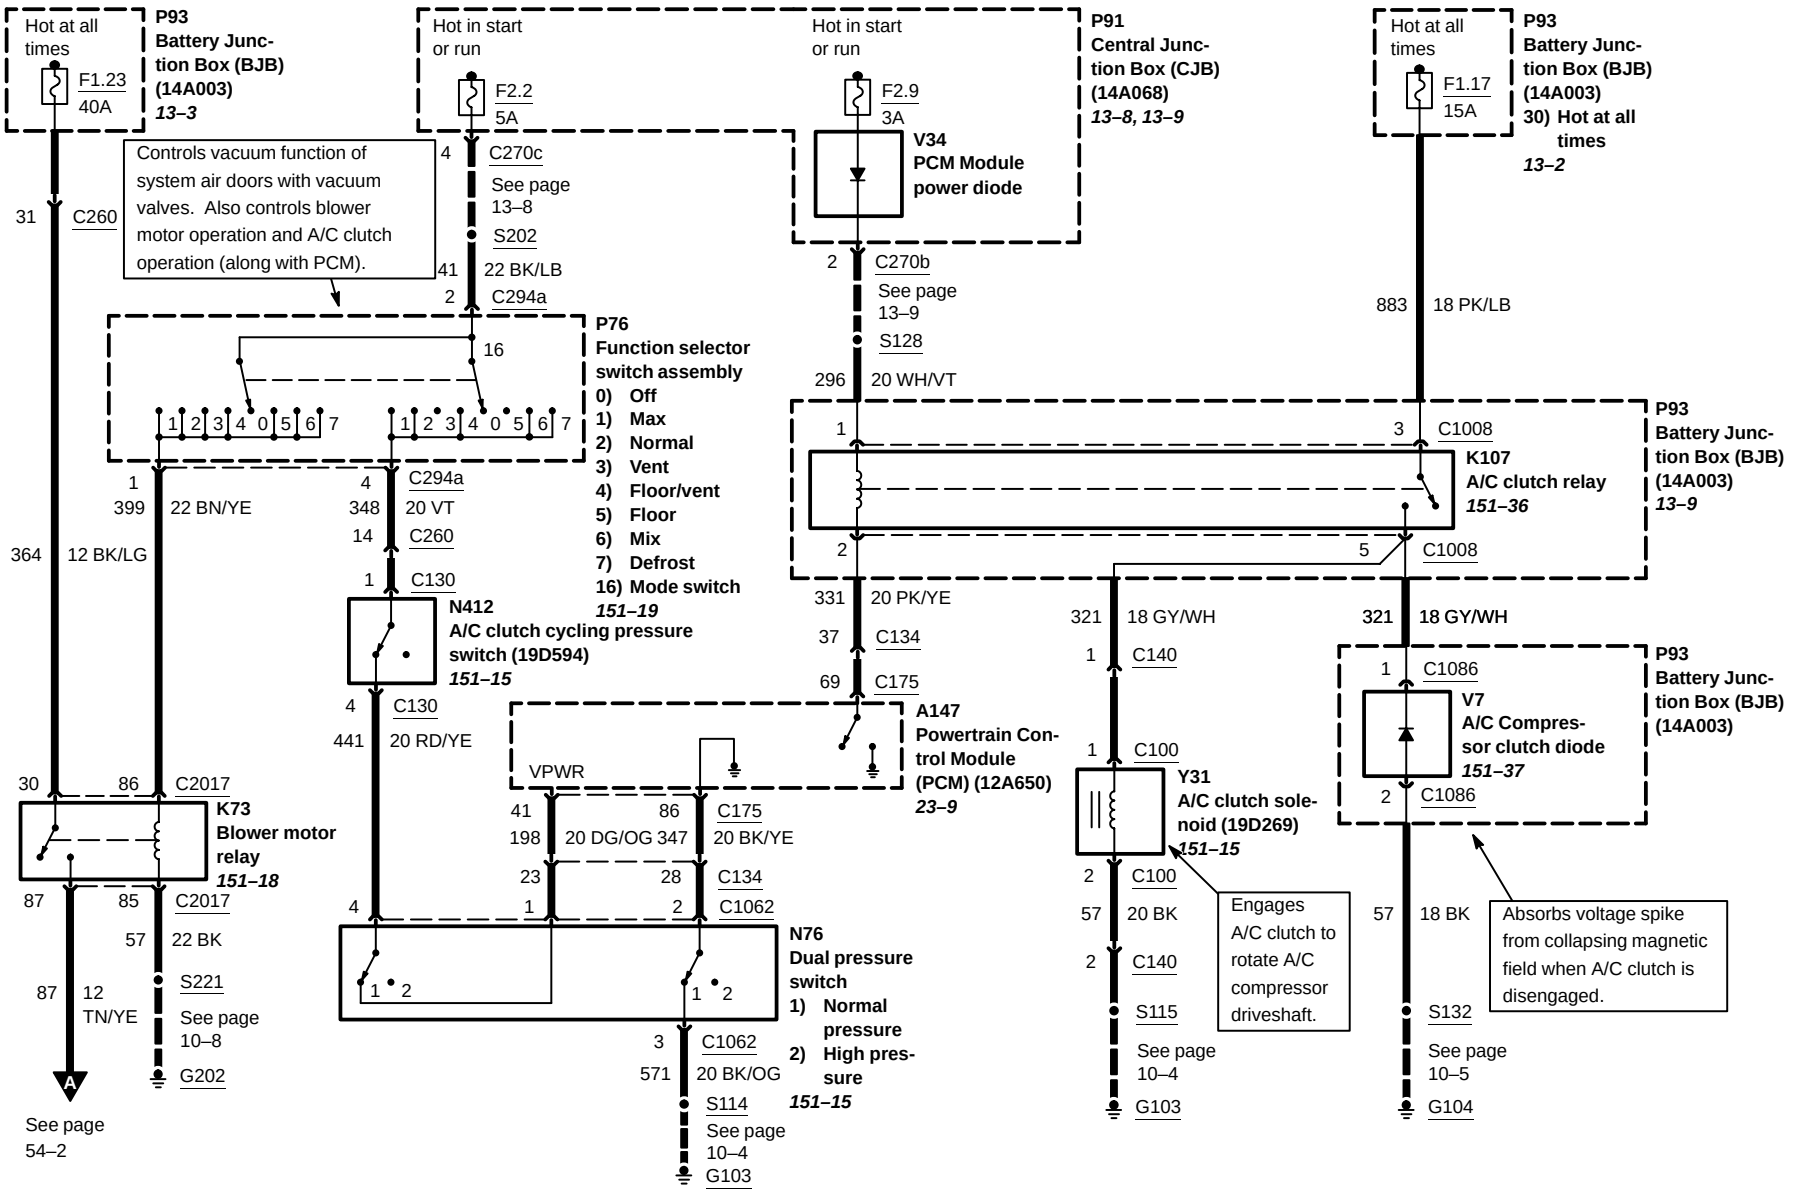
Hot at all times
F1.23
40A
P93 Battery Junction Box (BJB) (14A003) 13–3
Hot in start or run
F2.2
5A
Hot in start or run
F2.9
3A
P91 Central Junction Box (CJB) (14A068) 13–8, 13–9
Hot at all times
F1.17
15A
P93 Battery Junction Box (BJB) (14A003)
30) Hot at all times
13–2
Controls vacuum function of system air doors with vacuum valves. Also controls blower motor operation and A/C clutch operation (along with PCM).
31 C260
4 C270c
See page 13–8
S202
41 22 BK/LB
2 C294a
V34 PCM Module power diode
2 C270b
See page 13–9
S128
296 20 WH/VT
883 18 PK/LB
P76 Function selector switch assembly
0) Off
1) Max
2) Normal
3) Vent
4) Floor/vent
5) Floor
6) Mix
7) Defrost
16) Mode switch
151–19
1 399 22 BN/YE
4 348 20 VT
14 C260
1 C130
364 12 BK/LG
N412 A/C clutch cycling pressure switch (19D594) 151–15
4 C130
441 20 RD/YE
1 C1008
3 C1008
K107 A/C clutch relay 151–36
P93 Battery Junction Box (BJB) (14A003) 13–9
2
5 C1008
331 20 PK/YE
37 C134
69 C175
A147 Powertrain Control Module (PCM) (12A650) 23–9
321 18 GY/WH
1 C140
321 18 GY/WH
1 C1086
V7 A/C Compressor clutch diode 151–37
P93 Battery Junction Box (BJB) (14A003)
2 C1086
30 86 C2017
K73 Blower motor relay 151–18
VPWR
41 198 20 DG/OG
86 C175 20 BK/YE
23 1
28 C134
2 C1062
87 85 C2017
57 22 BK
87 12 TN/YE
S221
See page 10–8
G202
A
See page 54–2
4
N76 Dual pressure switch
1) Normal pressure
2) High pressure
151–15
3 C1062
571 20 BK/OG
S114
See page 10–4
G103
1 C100
Y31 A/C clutch solenoid (19D269) 151–15
2 C100
57 20 BK
2 C140
S115
See page 10–4
G103
Engages A/C clutch to rotate A/C compressor driveshaft.
57 18 BK
S132
See page 10–5
G104
Absorbs voltage spike from collapsing magnetic field when A/C clutch is disengaged.