C329

14C719

A223
Heated seat module, passenger side front

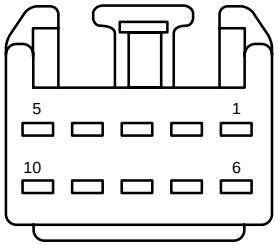

F10063

Pin	Circuit	Circuit function
1	1061 (BN/LB)	Seat cushion heater, passenger side, Sensor, return
2	581 (RD)	Seat heater switch, passenger side to Heated seat module, passenger side front
3	1064 (YE/LB)	Seat cushion heater, passenger side, heater, feed
4	175 (BK/YE)	Voltage supplied at all times (overload protected)
5	1067 (VT/LB)	Seat back heater, passenger side, heater, return
6	298 (VT/OG)	Voltage supplied in Start and Run (overload protected)
7	1060 (BK/LB)	Seat cushion heater, passenger side, Sensor, feed
8	1205 (BK)	Ground
9	–	not used
10	461 (OG)	Electronic Automatic Temperature Control (EATC) module (19980) to Heated seat module, passenger side front

C334

14C719

N458
Seat cushion heater, passenger side

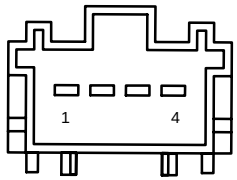

F04139

Pin	Circuit	Circuit function
1	1064 (YE/LB)	Seat cushion heater, passenger side, heater, feed
2	1060 (BK/LB)	Seat cushion heater, passenger side, Sensor, feed
3	1061 (BN/LB)	Seat cushion heater, passenger side, Sensor, return
4	1066 (GY/LB)	Seat back heater, passenger side, heater, feed

C335

14C719

N460
Seat back heater, passenger side

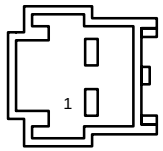

F02077

Pin	Circuit	Circuit function
1	1066 (GY/LB)	Seat back heater, passenger side, heater, feed
2	1067 (VT/LB)	Seat back heater, passenger side, heater, return