C557 (GY)

14401

F02056



Pin	Circuit	Circuit Function
1	31S-TA34A (BK/YE)	Ground, switched
2	15-GG14A (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)

C558 (GY)

14401

F02034

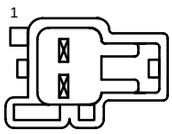

Pin	Circuit	Circuit Function
1	31S-TA34 (BK/YE)	Ground, switched
2	15-GG14 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)

C632 (BK)

14405

N98
Tailgate/decklid anti–theft inhibit switch

F02005

Pin	Circuit	Circuit Function
1	31-GL27 (BK)	Ground
2	31S-GL27 (BK/OG)	Ground, switched

C641 (BK)

12A522

T1
Ignition coil

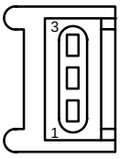

F03028

Pin	Circuit	Circuit Function
1	31S-RR1 (BK/OG)	Ground, switched
2	15-RR4A (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
3	31S-RR2 (BK/GN)	Ground, switched

C642 (BK)

9H589

B43
Crankshaft position sensor

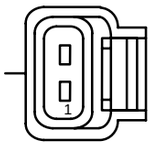

F02026

Pin	Circuit	Circuit Function
1	9-RJ4 (BN/RD)	Sensor signal return (reference/ground)
2	8-RJ4 (WH/RD)	Sensor signal