C240d

14401

A220
Audio unit (18808)



F01049

C243

14401

A144
CD changer
(18D806)

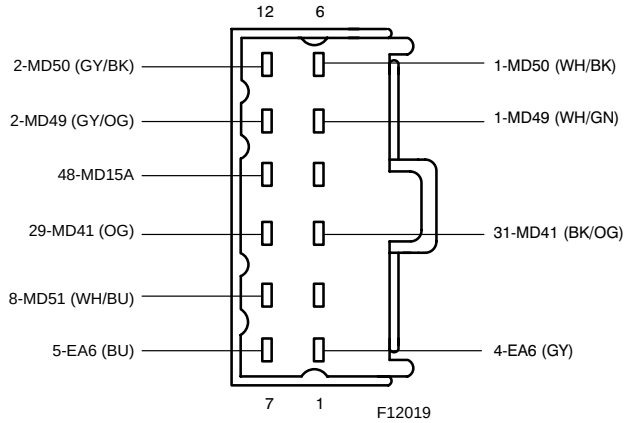

F12019

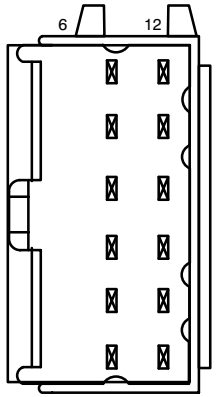

F12087

Pin	Circuit	Circuit function
1	4-EA6 (GY)	ACP Bus, A, (+)
2	–	not used
3	31-MD41 (BK/OG)	Ground
4	–	not used
5	1-MD49 (WH/GN)	Audio signal positive, Left
6	1-MD50 (WH/BK)	Audio signal positive, Right
7	5-EA6 (BU)	ACP Bus, B, (–)

Pin	Circuit	Circuit function
8	8-MD51 (WH/BU)	Audio System ON (ASYSON)
9	29-MD41 (OG)	Voltage supplied at all times (overload protected)
10	48-MD15A	audio, Drain wire
11	2-MD49 (GY/OG)	Audio signal negative, Left
12	2-MD50 (GY/BK)	Audio signal negative, Right