C216

PIA

A42
Driver air bag unit
(78043B13)

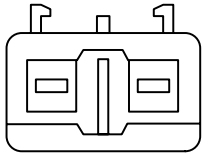

F02297

C218a

14401

P140
Air bag sliding contact (14A664)

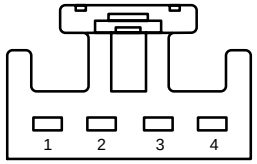

F04243

Pin	Circuit	Circuit function
1	601 (LB/PK)	Voltage supplied in Start and Run (overload protected)
2	151 (LB/BK)	Speed control switch, input
3	848 (DG/OG)	Speed control switch, Ground
4	6 (YE/LG)	Horn relay, control

C218b

14401

P140
Air bag sliding contact (14A664)

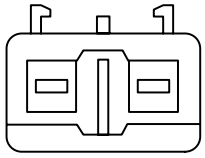

F02297

Pin	Circuit	Circuit function
A	614 (GY/OG)	Driver air bag, feed, monitor
B	615 (GY/WH)	Driver air bag, return

C220a

14401

A30
Instrument cluster

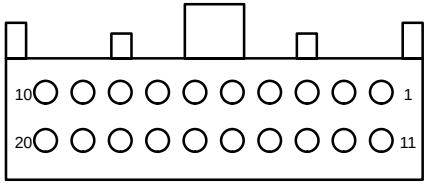

F20037

Pin	Circuit	Circuit function
1	–	not used
2	158 (BK/PK)	Key warning switch (11A127), input
3	–	not used
4	–	not used
5	1011 (TN/OG)	Instrument illumination
6	29 (YE/WH)	Fuel pump/fuel gauge sender
7	1169 (WH/LB)	Transmission range sensor, signal
8	1168 (YE/BK)	Transmission range sensor, signal
9	1167 (WH/BK)	Transmission range sensor, signal
10	–	not used
11	1166 (YE/RD)	Transmission range sensor, signal
12	–	not used
13	–	not used
14	12 (LG/BK)	Low beam, output
15	930 (VT/LG)	Door ajar indicator, control
16	1083 (LB/BK)	Air bag, tone driver
17	–	not used
18	–	not used
19	–	not used
20	–	not used