C321

14C719

N275
Seat heater switch, passenger side

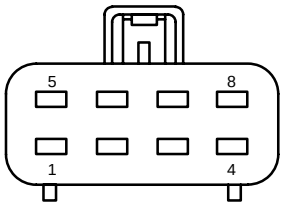

F08209

Pin	Circuit	Circuit function
1	298 (VT/OG)	Voltage supplied in Start and Run (overload protected)
	1205 (BK)	Ground
2	581 (RD)	Seat heater switch, driver side to Heated seat module, passenger side front
3	–	not used
4	–	not used
5	–	not used
6	–	not used
7	–	not used
8	–	not used

C323

14C719

N317
Safety belt buckle switch (10B924)



F02073

Pin	Circuit	Circuit function
1	85 (BN/LB)	Safety belt buckle switch (10B924), input
2	1205 (BK)	Ground

C327 (GY)

14335

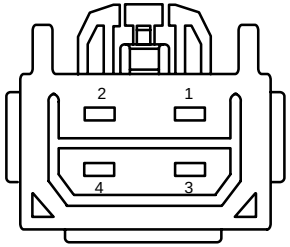

F04283

14A488

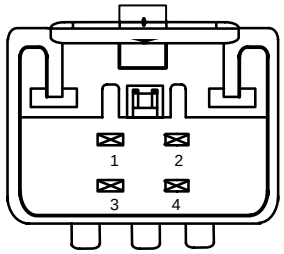

F04285

(1) 53 (BK/LB)
(2) 705 (LG/OG)
(3) 1205 (BK)
(4) 1205 (BK)

C328

14335

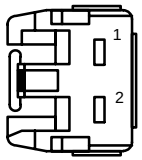

F02251

19D887

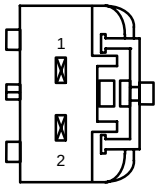

F02253

(1) 515 (OG/RD)
(2) 261 (OG/BK)