C732 (BK)

12A522

A31
Fuel tank unit

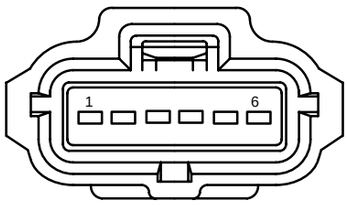

F06077

Pin	Circuit	Circuit Function
1	15S-RG2 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched
2	8-GA7 (WH/RD)	Sensor signal
3	–	not used
4	9-GA7 (BN/RD)	Sensor signal return (reference/ground)
5	31-RG2 (BK)	Ground
6	31-RG2A (BK)	Ground

C738 (GN)

14A584

K50
One–touch window relay

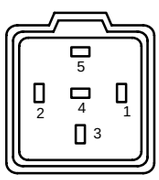

F05065

Pin	Circuit	Circuit Function
1	31-AJ15 (BK)	Ground
2	15-AJ15 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
3	15S-AJ40 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
4	15S-AJ42 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
5	32-AJ26 (WH)	Switched between: Battery voltage, Ground or Open

C741 (BK)

14A584

N70
Power mirror adjust switch

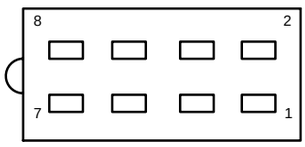

F08013

Pin	Circuit	Circuit Function
1	34-AD7 (BU/RD)	Switched between: Battery voltage, Ground or Open
2	34-AD10 (BU/YE)	Switched between: Battery voltage, Ground or Open
3	32-AD1 (WH/RD)	Switched between: Battery voltage, Ground or Open
4	31-AD12 (BK)	Ground
5	33-AD11 (YE/VT)	Switched between: Battery voltage, Ground or Open
6	29-AD12 (OG/YE)	Voltage supplied at all times (overload protected)
7	33-AD8 (YE/BU)	Switched between: Battery voltage, Ground or Open
8	–	not used

C756 (BK)

9H589

Y13
Idle speed control valve

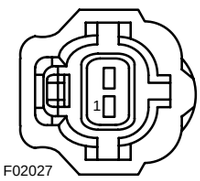

F02027

Pin	Circuit	Circuit Function
1	15-RL9 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
2	31S-RL9 (BK/YE)	Ground, switched

C771 (BK)

9H589

Y108
Injector 1

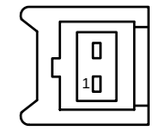

F02012

Pin	Circuit	Circuit Function
1	15-RL10 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)
2	31S-RL10 (BK/WH)	Ground, switched