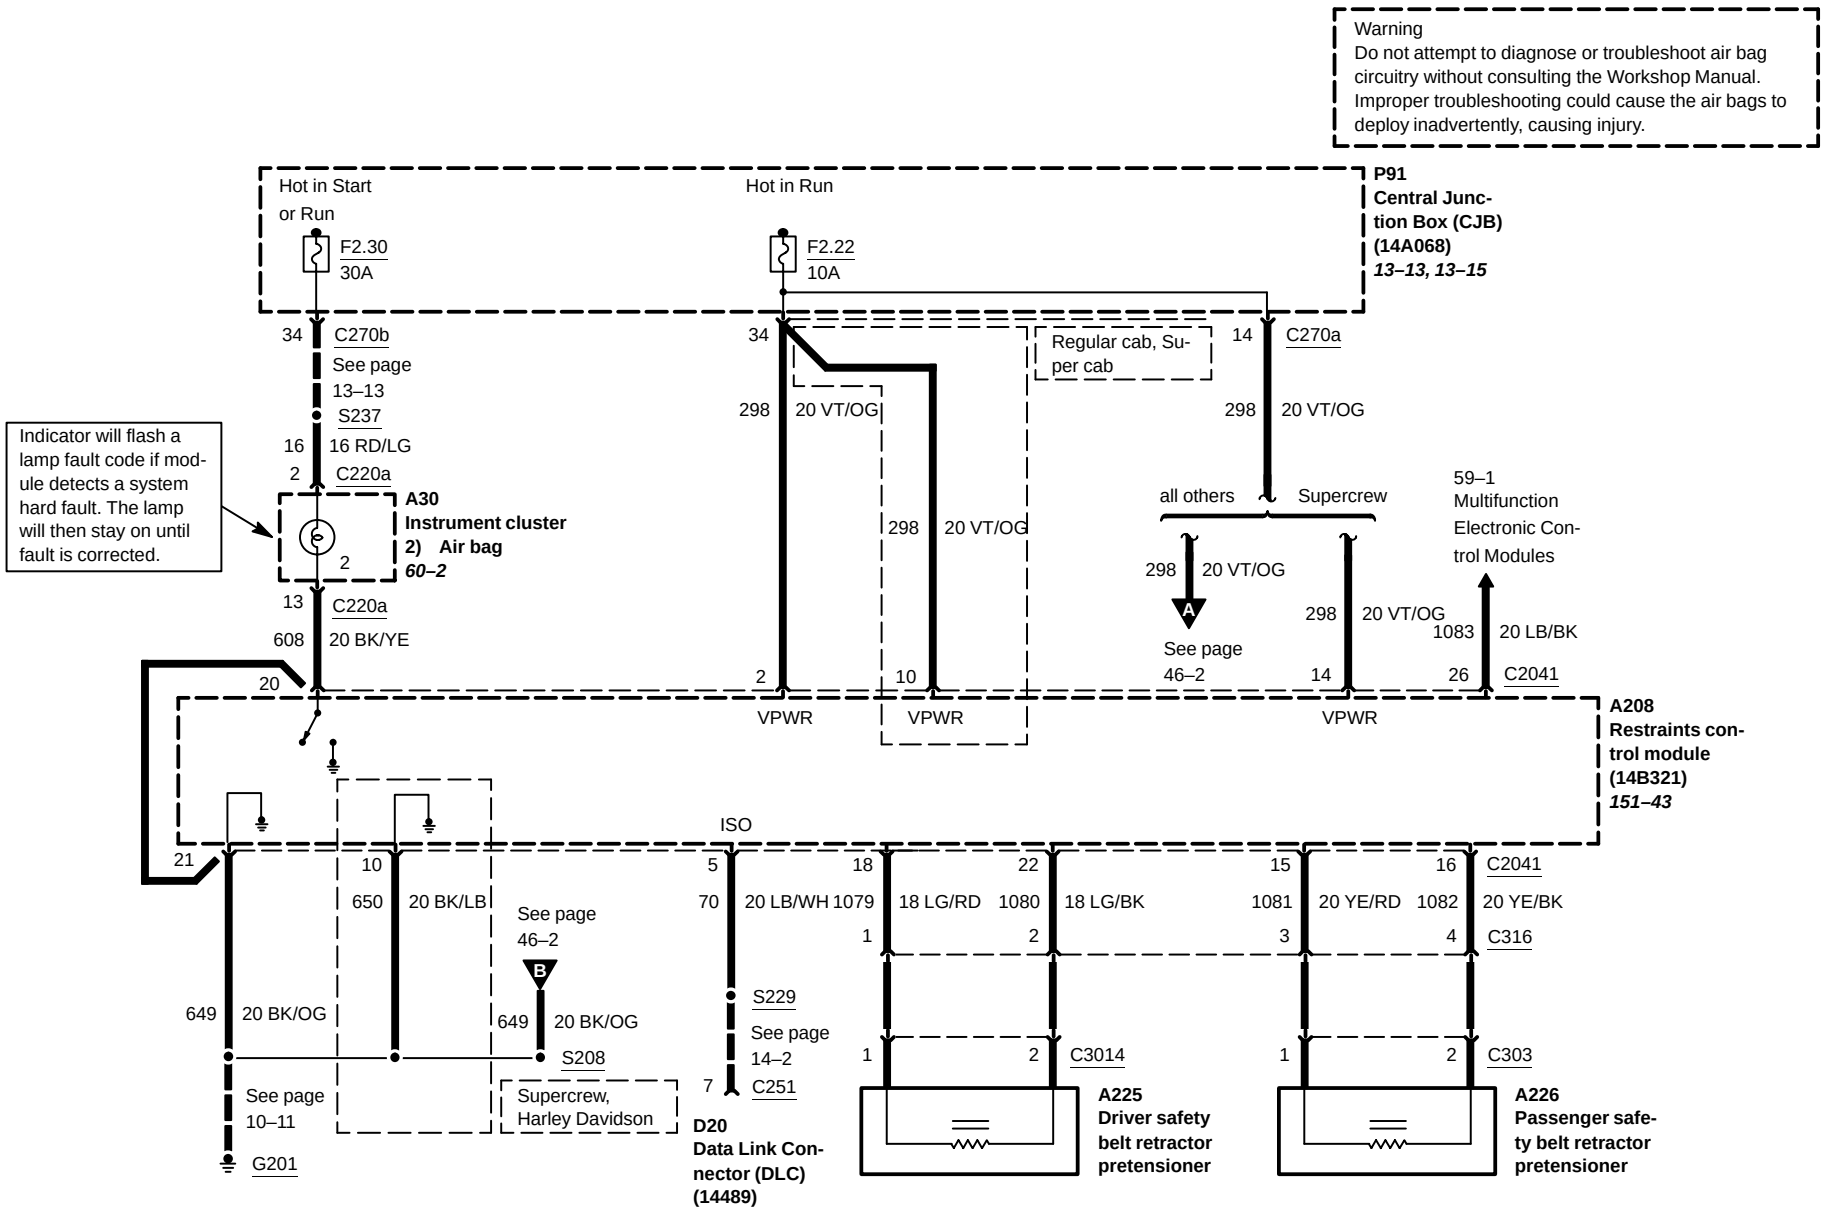
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
Hot in Start or Run
Hot in Run
F2.30 30A
F2.22 10A
P91 Central Junction Box (CJB) (14A068) 13–13, 13–15
34 C270b
See page 13–13
S237
16 16 RD/LG
2 C220a
Indicator will flash a lamp fault code if module detects a system hard fault. The lamp will then stay on until fault is corrected.
A30 Instrument cluster 2) Air bag 60–2
2
13 C220a
608 20 BK/YE
20
34
298 20 VT/OG
Regular cab, Super cab
14 C270a
298 20 VT/OG
298 20 VT/OG
all others
Supercrew
298 20 VT/OG
A
See page 46–2
298 20 VT/OG
59–1 Multifunction Electronic Control Modules
1083 20 LB/BK
26 C2041
2 VPWR
10 VPWR
14 VPWR
A208 Restraints control module (14B321) 151–43
ISO
21
10
650 20 BK/LB
See page 46–2
B
649 20 BK/OG
S208
Supercrew, Harley Davidson
649 20 BK/OG
See page 10–11
G201
5
70 20 LB/WH
S229
See page 14–2
7 C251
D20 Data Link Connector (DLC) (14489)
18
1079 18 LG/RD
1
22
1080 18 LG/BK
2
1 2 C3014
A225 Driver safety belt retractor pretensioner
15
1081 20 YE/RD
3
16 C2041
1082 20 YE/BK
4 C316
1 2 C303
A226 Passenger safety belt retractor pretensioner