C220b

14401

A30
Instrument cluster

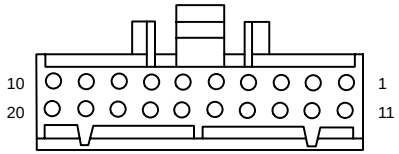

Pin	Circuit	Circuit function
1	506 (RD)	Electronic Automatic Temperature Control (EATC) mod-
2	–	ule (19980) not used
3	143 (LB/YE)	Message center switch, Power (Start or Run)
4	39 (RD/WH)	Engine Coolant Temperature (ECT) sender, input
5	1907 (WH/LG)	Powertrain Control Module (PCM) (12A650)
6	29 (YE/WH)	Fuel pump/fuel gauge sender
7	54 (LG/YE)	Voltage supplied at all times (overload protected)
8	676 (PK/OG)	Vehicle Speed Sensor (VSS) –
9	88 (BK/WH)	Voltage in Run (overload protected)
10	82 (PK/YE)	Washer fluid level switch
11	205 (DB/LG)	Powertrain Control Module (PCM) (12A650)
12	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
13	19 (LB/RD(	Instrument illumination, feed
14	911 (WH/LG)	Transmission Control Indicator Lamp (TCIL)
15	–	not used
16	–	not used
17	344 (BK/YE)	Driver Door Module, Lighting control module
18	1270 (OG/RD)	Engine cooling, indicator, signal
19	183 (TN/YE)	Voltage, hot in run only
20	–	not used

C220c

14401

A30
Instrument cluster

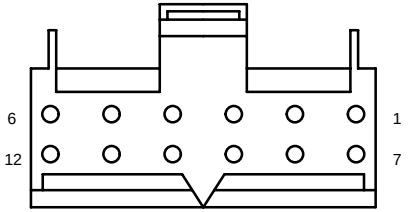

F12018

Pin	Circuit	Circuit function
1	676 (PK/OG)	Vehicle Speed Sensor (VSS) –
2	88 (BK/WH)	Voltage in Run (overload protected)
3	484 (OG/BK)	Headlamp switch, on input
4	12 (LG/BK)	Power, Hot with High Beams on
5	2 (WH/LB)	Turn lamps, feed, right front
6	3 (LG/WH)	Turn lamps, feed, left front
7	88 (BK/WH)	Voltage in Run (overload protected)
8	31 (WH/RD)	Engine oil pressure indicator, control
9	658 (PK/LG)	Malfunction Indicator Lamp (MIL), control
10	904 (LG/RD)	Generator/Battery indicator, control
11	450 (DG/LG)	Safety belt indicator, feed
12	939 (VT)	traction assist, indicator, Lamp

C226

14401

B36
Steering position
sensor (18B015)

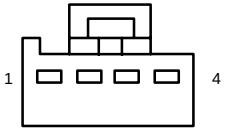

F04153

Pin	Circuit	Circuit function
1	837 (YE/BK)	Ground
2	634 (BN)	Steering position sensor (18B015), to, Air suspension module (3C142), Terminal +B
3	633 (RD)	Steering position sensor (18B015), to, Air suspension module (3C142), Terminal +A
4	298 (VT/OG)	Voltage in Run (overload protected)