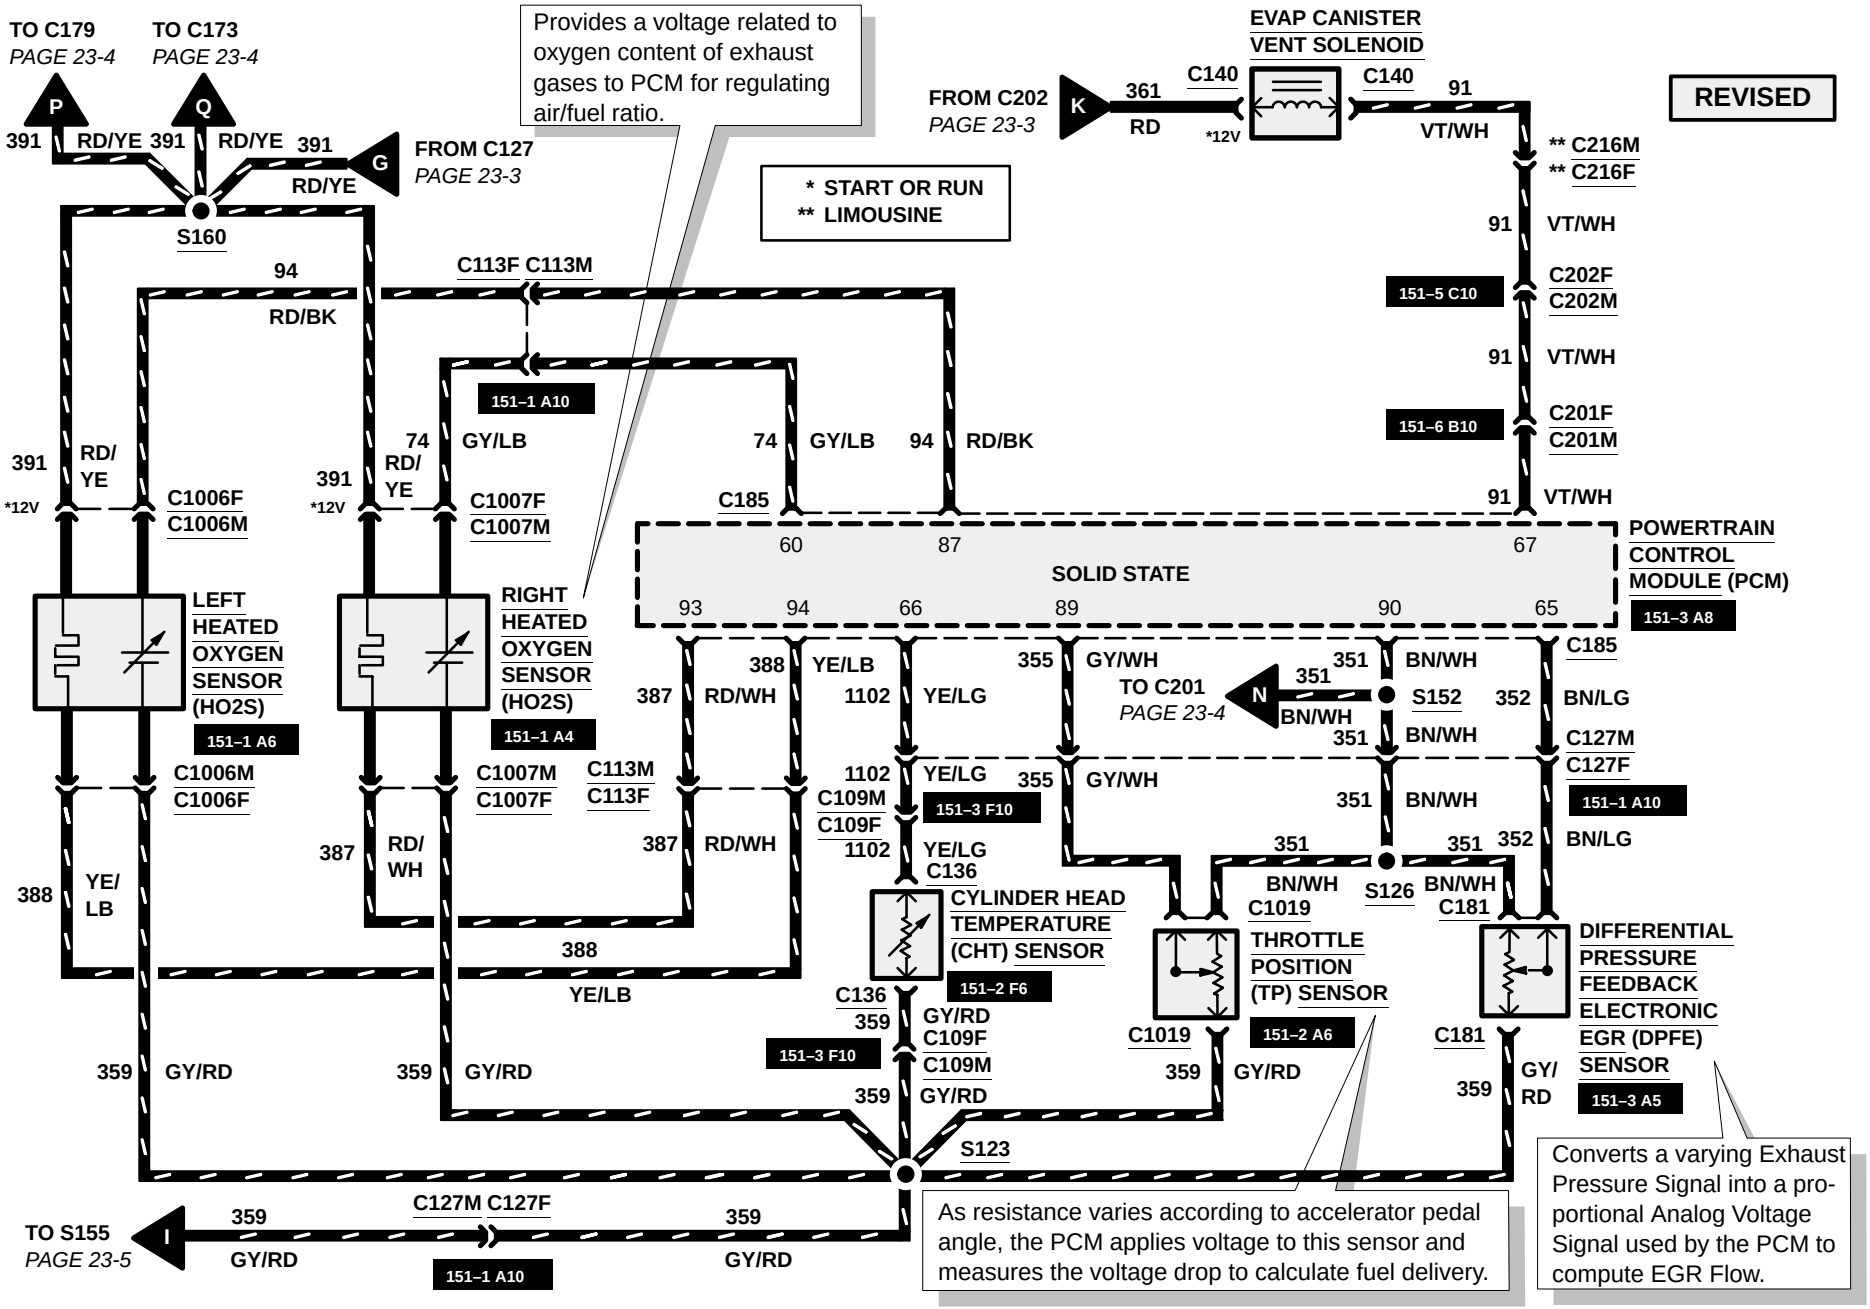
TO C179
PAGE 23-4
TO C173
PAGE 23-4
Provides a voltage related to oxygen content of exhaust gases to PCM for regulating air/fuel ratio.
EVAP CANISTER VENT SOLENOID
FROM C202
PAGE 23-3
REVISED
FROM C127
PAGE 23-3
* START OR RUN
** LIMOUSINE
** C216M
** C216F
S160
C113F C113M
151–5 C10
C202F
C202M
151–1 A10
151–6 B10
C201F
C201M
C1006F
C1006M
C1007F
C1007M
C185
POWERTRAIN CONTROL MODULE (PCM)
SOLID STATE
151–3 A8
LEFT HEATED OXYGEN SENSOR (HO2S)
151–1 A6
RIGHT HEATED OXYGEN SENSOR (HO2S)
151–1 A4
TO C201
PAGE 23-4
S152
C127M
C127F
151–1 A10
151–3 F10
S126
C1019
C181
CYLINDER HEAD TEMPERATURE (CHT) SENSOR
151–2 F6
THROTTLE POSITION (TP) SENSOR
151–2 A6
DIFFERENTIAL PRESSURE FEEDBACK ELECTRONIC EGR (DPFE) SENSOR
151–3 A5
C109M
C109F
S123
TO S155
PAGE 23-5
As resistance varies according to accelerator pedal angle, the PCM applies voltage to this sensor and measures the voltage drop to calculate fuel delivery.
Converts a varying Exhaust Pressure Signal into a proportional Analog Voltage Signal used by the PCM to compute EGR Flow.