C175a (GY)

14398

Powertrain Control Module (PCM) (12A650)

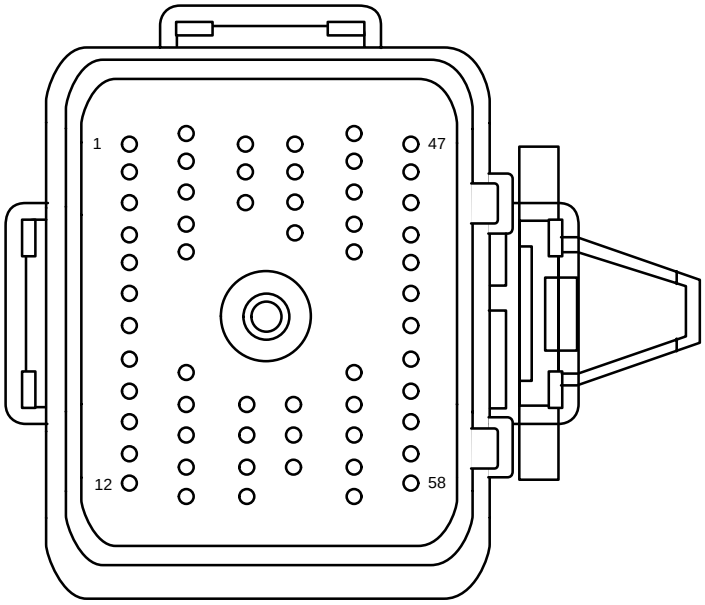

F58003

* with four–wheel drive

Pin	Circuit	Circuit function
1	–	not used
2	787 (PK/BK)	Fuel pump, Power
3	914 (TN/OG)	SCP Bus +
4	915 (PK/LB)	SCP Bus –
5	–	not used
6	91 (VT/WH)	Canister vent
7	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
8	904 (LG/RD)	Generator/Battery indicator, control
9	331 (PK/YE)	A/C clutch relay, control
10	357 (YE/WH)	Powertrain Control Module (PCM) (12A650) to Four–wheel drive control module
11	1215 (WH/LG)	TX, signal
12	191 (LG/BK)	Powertrain Control Module (PCM) (12A650), EVAP canister purge valve
13	107 (VT)	Module programming signal

Pin	Circuit	Circuit function
14	1216 (GY/OG)	RX, signal
15	–	not used
16	–	not used
17	359 (GY/RD)	signal, return
18	–	not used
19	–	not used
20	351 (BN/WH)	Reference, voltage
21	–	not used
22	343 (DB/LG)	Anti–theft, indicator, input
23	*784 (LB/BK)	Four–wheel drive, indicator, Low
24	570 (BK/WH)	Ground
25	570 (BK/WH)	Ground
26	570 (BK/WH)	Ground
27	570 (BK/WH)	Ground

Pin	Circuit	Circuit function
28	307 (BK/YE)	Brake pressure switch (2B264), input
29	203 (OG/LB)	Cruise set, indicator, control
30	347 (BK/YE)	A/C clutch relay, switched output
31	967 (LB/RD)	Mass Air Flow (MAF) sensor (12B579), output
32	1140 (VT)	PCM power relay, Switched, Power (Start or Run)
33	1140 (VT)	PCM power relay, Switched, Power (Start or Run)
34	–	not used
35	–	not used
36	203 (OG/LB)	Cruise set, indicator, control
37	–	not used
38	968 (TN/LB)	Mass Air Flow (MAF) sensor (12B579), signal, return
39	461 (OG)	PCM, to starter motor relay
40	810 (RD/LG)	Brake pedal position switch (13480), input
41	224 (TN/WH)	PCM, to transmission overdrive cancel switch
42	–	not used

Pin	Circuit	Circuit function
43	1205 (BK)	Ground
44	729 (RD/WH)	Voltage supplied at all times (overload protected)
45	133 (BK)	Speed control switch, return
46	203 (OG/LB)	Cruise set, indicator, control
47	441 (RD/YE)	A/C pressure switch, to A/C cycling switch
48	–	not used
49	–	not used
50	348 (VT)	A/C demand signal
51	743 (GY)	Intake Air Temperature (IAT) sensor (12A697), input
52	791 (RD/PK)	Fuel tank pressure transducer sensor (9C968)
53	–	not used
54	–	not used
55	–	not used
56	848 (DG/OG)	Speed control switch, Ground
57	151 (LB/BK)	Speed control switch, input
58	926 (LB/OG)	Fuel pump relay, control