C882

14K733

N76
Dual pressure switch

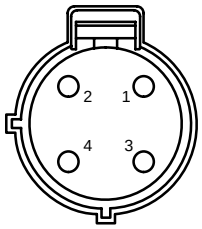

F04030

Pin	Circuit	Circuit Function
1	91S-PA13 (BK/BU)	Ground, switched
2	15S-FA38 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
3	91-PA13 (BK/BU)	Ground
4	15S-RE9 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched

C893

12A522

B22
Mass Air Flow (MAF) sensor

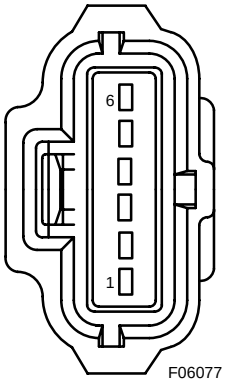

F06077

Pin	Circuit	Circuit Function
1	8-RJ17 (WH/VT)	Sensor signal
2	15-RJ22 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)
3	91-RJ22 (BK/OG)	Ground
4	9-RJ22 (BN/BU)	Sensor signal return (reference/ground)
5	8-RJ22 (WH/BU)	Sensor signal
6	91-RJ17 (BN/WH)	Sensor signal return (reference/ground)

C890a

14335

E18
Interior lamp, front

F01005

Pin	Circuit	Circuit Function
1	29-LB13 (OG/BU)	Voltage supplied at all times (overload protected)

C890b

14335

E18
Interior lamp, front



F02009

Pin	Circuit	Circuit Function
1	31S-LB13 (BK/BU)	Ground, switched
2	31-LB13 (BK)	Ground

C896

14K024

P140
Air bag sliding contact

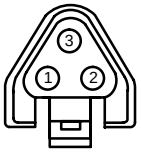

F03015

Pin	Circuit	Circuit Function
1	31-PG13 (BK)	Ground
2	31S-GJ7 (BK/BU)	Ground, switched
3	8-PG13 (WH)	Sensor signal