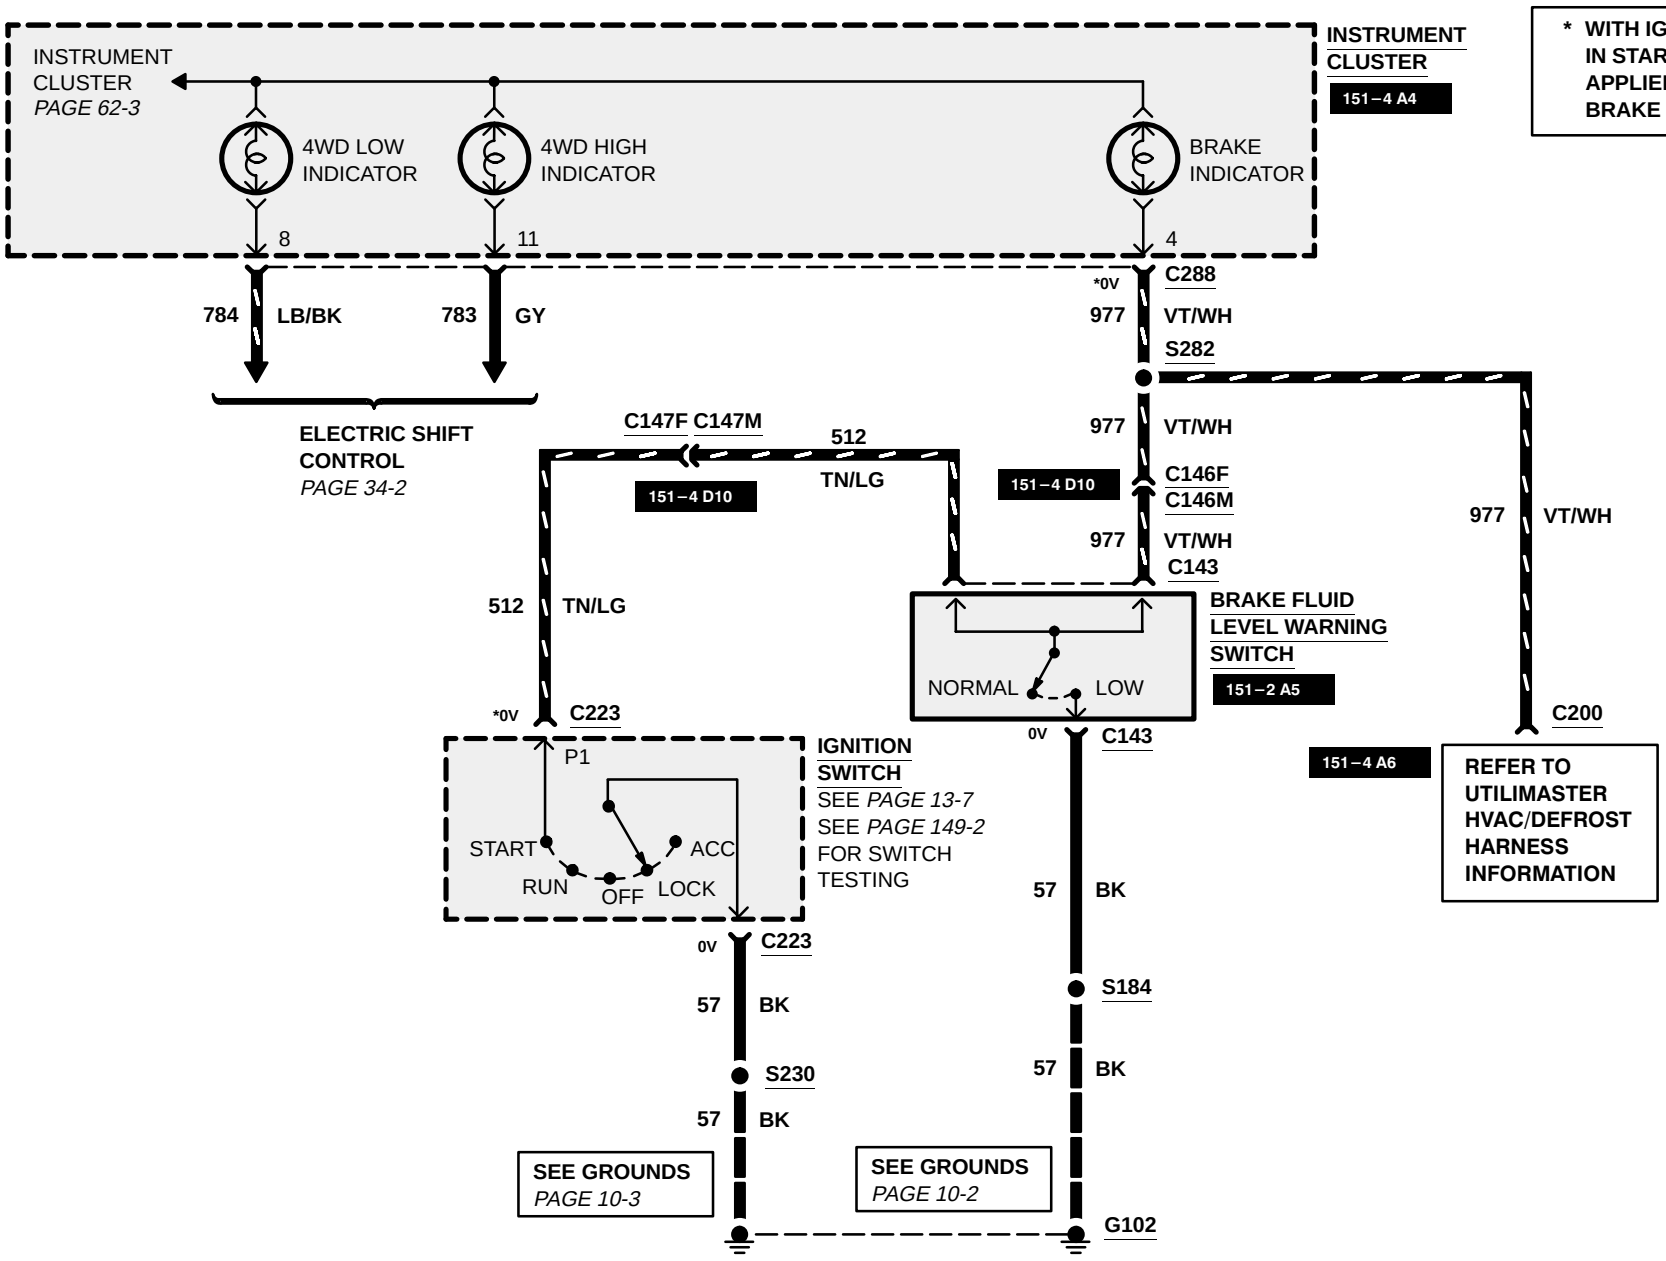
INSTRUMENT CLUSTER
PAGE 62-3
4WD LOW INDICATOR
4WD HIGH INDICATOR
BRAKE INDICATOR
8
11
4
INSTRUMENT CLUSTER
151–4 A4
* WITH IGNITION SWITCH IN START, PARK, BRAKE APPLIED OR LOW BRAKE FLUID
784 LB/BK
783 GY
*0V
977 VT/WH
C288
S282
ELECTRIC SHIFT CONTROL
PAGE 34-2
C147F C147M
512 TN/LG
151–4 D10
151–4 D10
977 VT/WH
C146F
C146M
977 VT/WH
C143
977 VT/WH
512 TN/LG
BRAKE FLUID LEVEL WARNING SWITCH
151–2 A5
NORMAL
LOW
*0V
C223
0V
C143
C200
151–4 A6
REFER TO UTILIMASTER HVAC/DEFROST HARNESS INFORMATION
P1
START
ACC
RUN
OFF
LOCK
IGNITION SWITCH
SEE PAGE 13-7
SEE PAGE 149-2
FOR SWITCH TESTING
57 BK
0V
C223
57 BK
S184
57 BK
S230
57 BK
SEE GROUNDS
PAGE 10-3
SEE GROUNDS
PAGE 10-2
G102