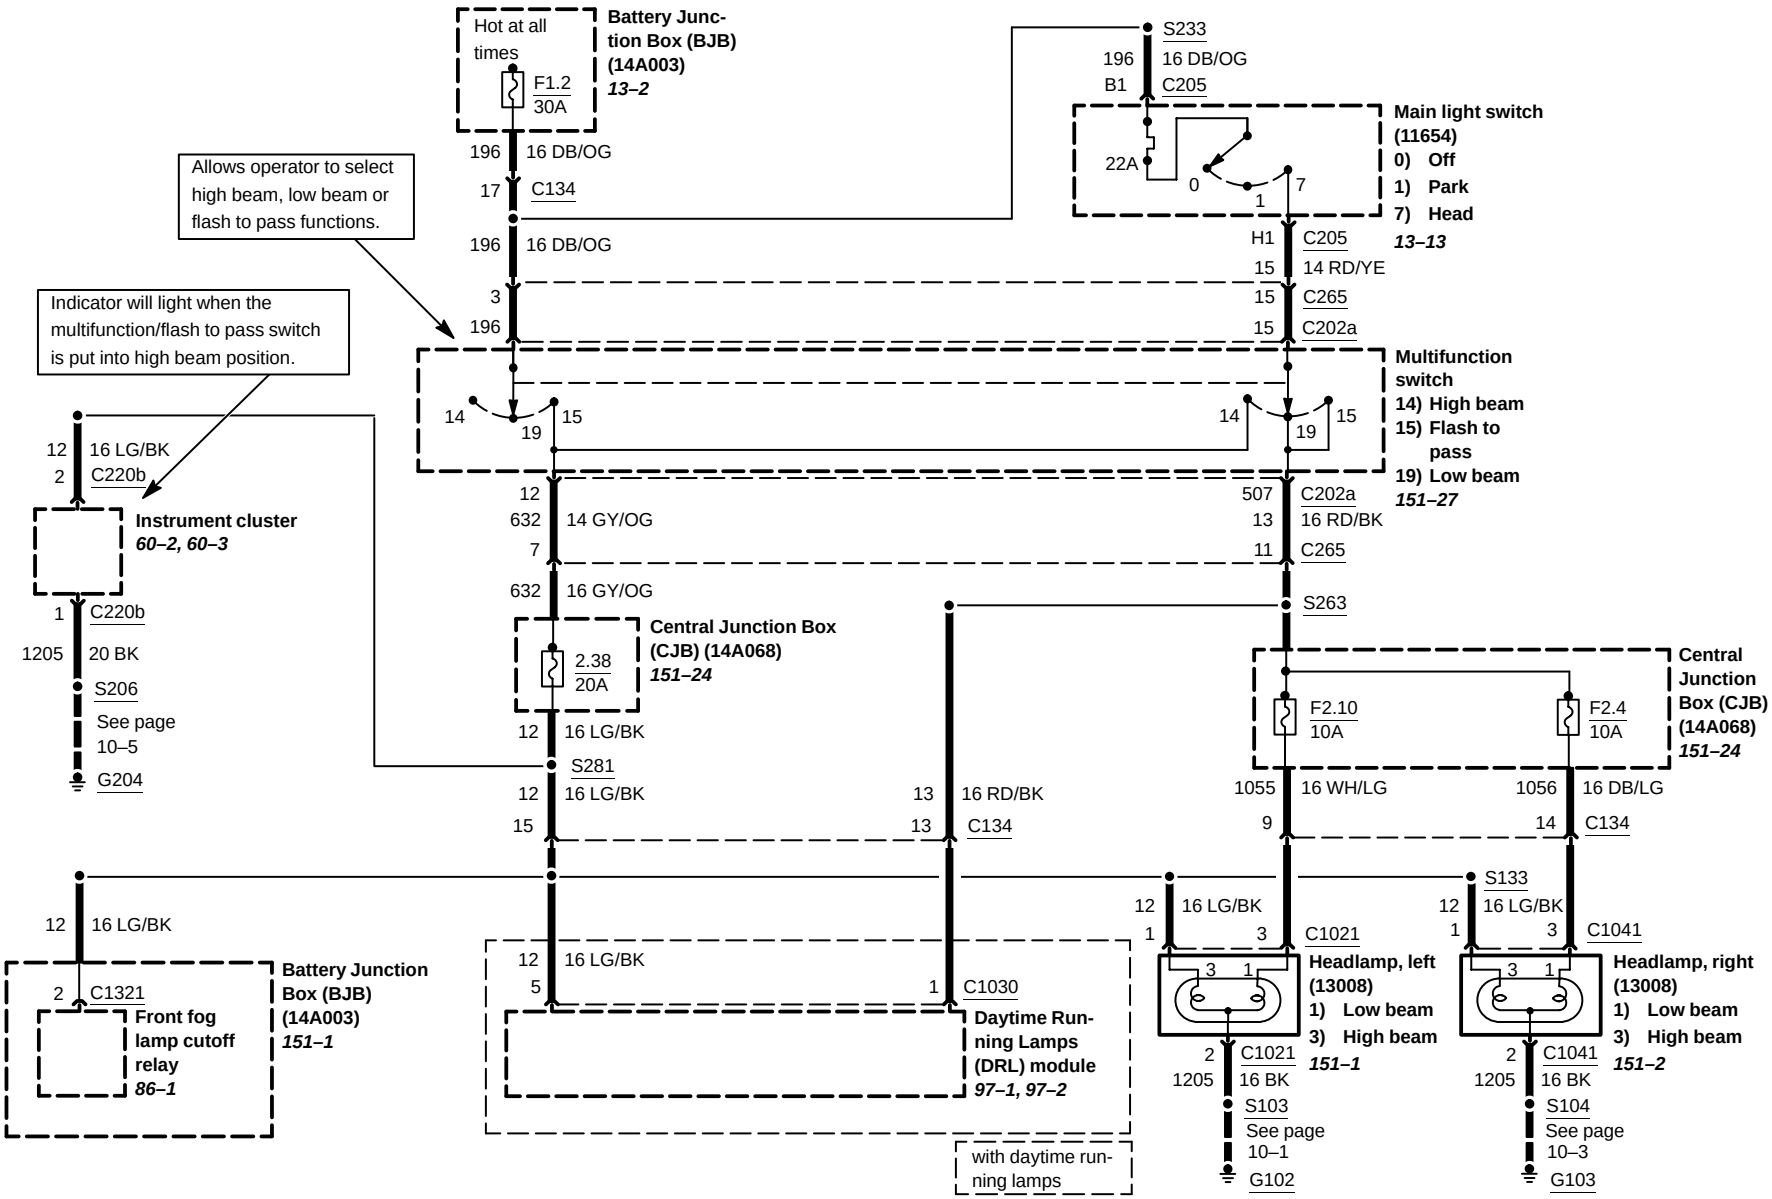
Hot at all times
F1.2
30A
Battery Junction Box (BJB) (14A003)
13–2
196
16 DB/OG
17
C134
S233
196
B1
16 DB/OG
C205
Main light switch (11654)
0) Off
1) Park
7) Head
13–13
22A
0
1
7
H1
C205
15
14 RD/YE
15
C265
15
C202a
Allows operator to select high beam, low beam or flash to pass functions.
Indicator will light when the multifunction/flash to pass switch is put into high beam position.
Multifunction switch
14) High beam
15) Flash to pass
19) Low beam
151–27
14
19
15
12
2
16 LG/BK
C220b
Instrument cluster
60–2, 60–3
1
C220b
1205
20 BK
S206
See page 10–5
G204
12
632
14 GY/OG
7
507
C202a
13
16 RD/BK
11
C265
632
16 GY/OG
S263
Central Junction Box (CJB) (14A068)
151–24
2.38
20A
12
16 LG/BK
S281
12
16 LG/BK
15
13
16 RD/BK
13
C134
F2.10
10A
F2.4
10A
1055
16 WH/LG
9
1056
16 DB/LG
14
C134
Central Junction Box (CJB) (14A068)
151–24
12
16 LG/BK
2
C1321
Front fog lamp cutoff relay
86–1
Battery Junction Box (BJB) (14A003)
151–1
12
16 LG/BK
5
1
C1030
Daytime Running Lamps (DRL) module
97–1, 97–2
with daytime running lamps
12
16 LG/BK
1
3
C1021
Headlamp, left (13008)
1) Low beam
3) High beam
151–1
2
C1021
1205
16 BK
S103
See page 10–1
G102
S133
12
16 LG/BK
1
3
C1041
Headlamp, right (13008)
1) Low beam
3) High beam
151–2
2
C1041
1205
16 BK
S104
See page 10–3
G103