C604 (GY)

* Sport

14630

Window adjust switch, passenger side

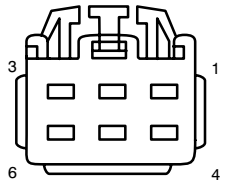

F06213

Pin	Circuit	Circuit function
1	314 (TN/LB)	Window switch, feed, right front, Down
2	334 (RD/YE)	Window motor, feed, Down
3	*400 (LB/BK)	Window safety relay, switched power, output
	170 (RD/LB)	Window lockout, switched power, output
4	–	not used
5	333 (YE/RD)	Window motor, feed, Up
6	313 (WH/YE)	Window switch, feed, right front, Up

C605 (GN)

14630

Door lock switch, passenger side (14028)

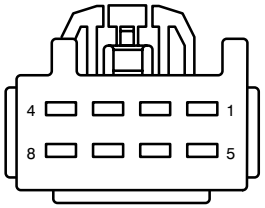

F08217

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	120 (PK/LG)	Door unlock +
4	57 (BK)	Ground
5	705 (LG/OG)	Battery saver relay, switched power
6	–	not used
7	119 (PK/YE)	Door lock +
8	–	not used

C608 (GY)

14630

Power window motor, passenger side front (23394)



F02073

Pin	Circuit	Circuit function
1	333 (YE/RD)	Window motor, feed, Up
2	334 (RD/YE)	Window motor, feed, Down