C710

14A005

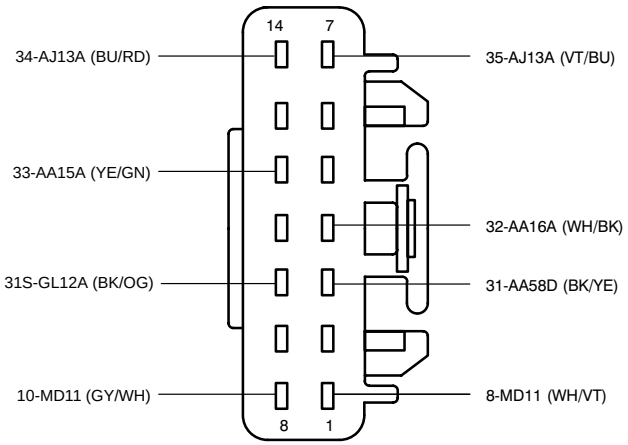

F14012

14633

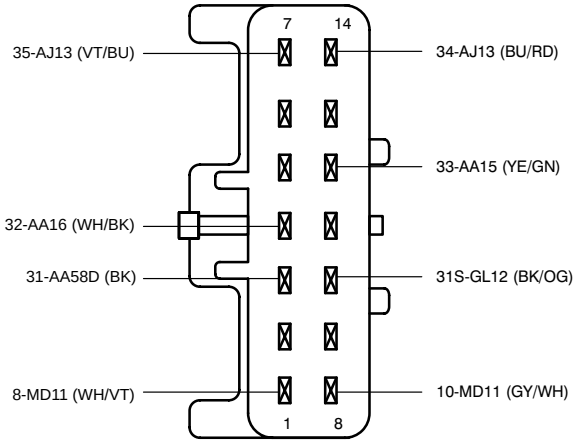

F14013

C801

14A005

N110
Window adjust
switch, right rear
(14A412)

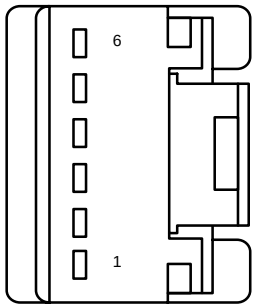

F06163

Pin	Circuit	Circuit function
1	8-AJ24 (WH)	Sensor signal
2	10-AJ24 (GY)	Signal 2 (Y–direction, reverse, downward)
3	7-AJ24 (YE)	Voltage DC supplied at all times (sensor)
4	31-LH33 (BK/GN)	Ground
5	–	not used
6	29S-LH33 (OG/BK)	Voltage supplied at all times (overload protected), Switched

C802

14632

Y19
Speaker, right rear
(18808)

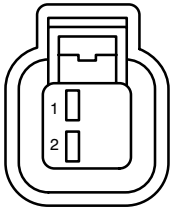

F02069

Pin	Circuit	Circuit function
1	8-MD18 (WH)	Speaker, right rear (18808), Audio signal positive
2	10-MD18 (GY)	Speaker, right rear (18808), Audio signal negative