## C824

### 13A612

N82
Brake pedal position switch

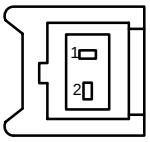


F02012

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 15S-PG16 (GN/YE) | Voltage, ignition switch in Start or Run (not overload protected), switched |
| 2 | 15-PG6 (GN/YE) | Voltage, ignition switch in Start or Run (not overload protected) |

## C825

### 13A612

N81
Clutch pedal position switch

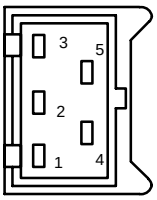


F05012

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 15S-PG17 (GN/BU) | Voltage, ignition switch in Start or Run (not overload protected), switched |
| 2 | – | not used |
| 3 | 15S-PG7 (GN/BU) | Voltage, ignition switch in Start or Run (not overload protected), switched |
| 4 | 8-BB6 (WH) | Sensor signal |
| 5 | 9-BB6 (BN) | Sensor signal return (reference/ground) |

## C828

### 14K733

M74
Two–way washer pump motor

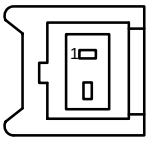


F02014

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 33-KA34 (YE/BK) | Switched between: Battery voltage, Ground or Open |
| 2 | 32-KA34 (WH/BK) | Switched between: Battery voltage, Ground or Open |

## C831 (BU)

### 14K733

E43
Fog lamp, left

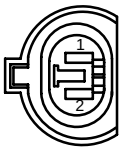


F02037

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 31-LD11 (BK) | Ground |
| 2 | 29S-LD11 (OG/WH) | Voltage supplied at all times (overload protected), switched |

## C832 (BU)

### 14K733

E42
Fog lamp, right

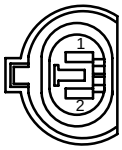


F02037

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 31-LD17 (BK) | Ground |
| 2 | 29S-LD17 (OG/WH) | Voltage supplied at all times (overload protected), switched |