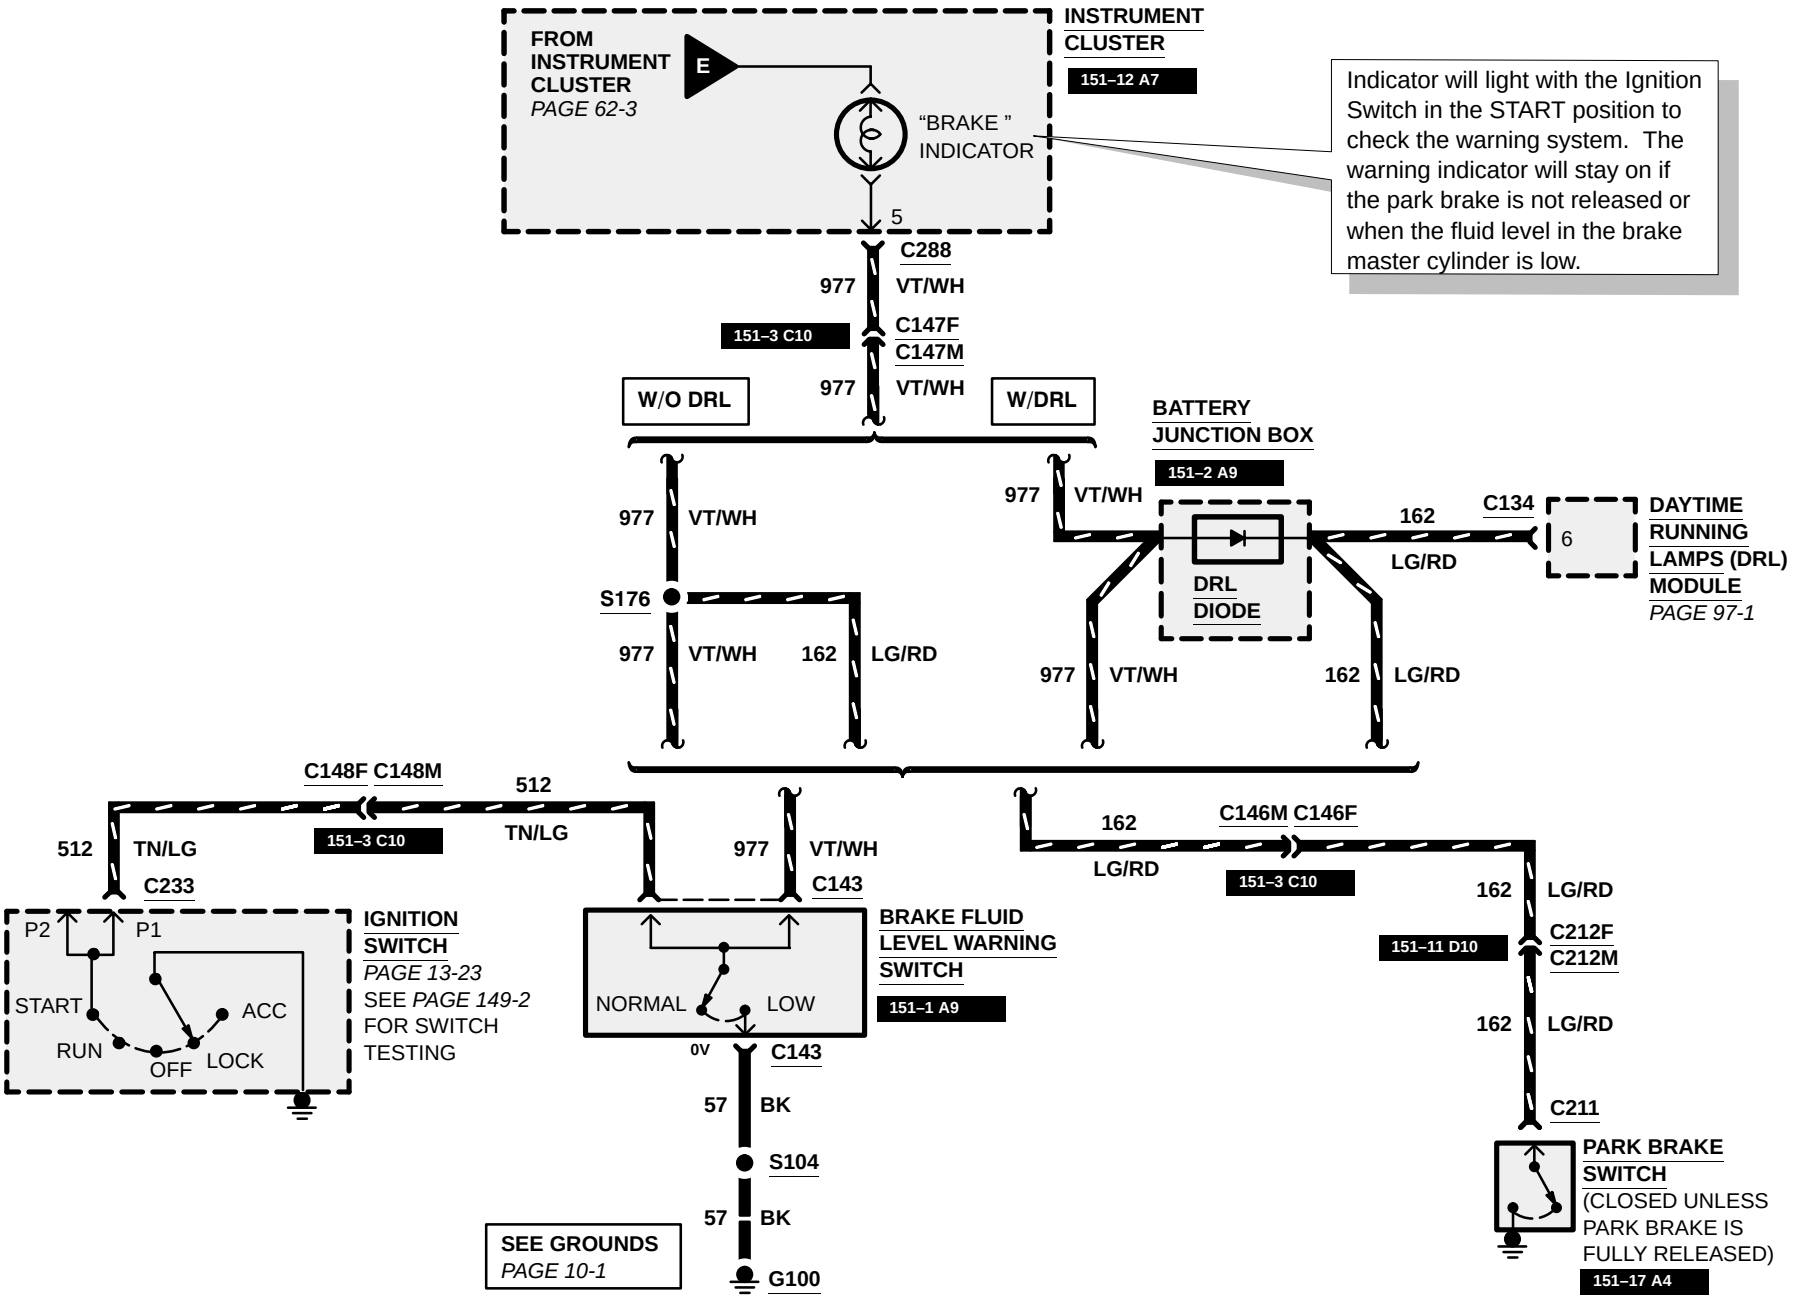
FROM INSTRUMENT CLUSTER
PAGE 62-3
E
"BRAKE " INDICATOR
5
INSTRUMENT CLUSTER
151–12 A7
Indicator will light with the Ignition Switch in the START position to check the warning system. The warning indicator will stay on if the park brake is not released or when the fluid level in the brake master cylinder is low.
C288
977 VT/WH
151–3 C10
C147F
C147M
977 VT/WH
W/O DRL
W/DRL
BATTERY JUNCTION BOX
151–2 A9
977 VT/WH
977 VT/WH
S176
977 VT/WH 162 LG/RD
977 VT/WH
162 LG/RD
DRL DIODE
162
C134
6
LG/RD
DAYTIME RUNNING LAMPS (DRL) MODULE
PAGE 97-1
C148F C148M
512
TN/LG
512 TN/LG
151–3 C10
512 TN/LG
977 VT/WH
C143
162 LG/RD
C146M C146F
151–3 C10
162 LG/RD
C233
P2
P1
START
ACC
RUN
OFF
LOCK
IGNITION SWITCH
PAGE 13-23
SEE PAGE 149-2 FOR SWITCH TESTING
NORMAL
LOW
BRAKE FLUID LEVEL WARNING SWITCH
151–1 A9
0V
C143
57 BK
S104
57 BK
G100
SEE GROUNDS
PAGE 10-1
162 LG/RD
151–11 D10
C212F
C212M
162 LG/RD
C211
PARK BRAKE SWITCH
(CLOSED UNLESS PARK BRAKE IS FULLY RELEASED)
151–17 A4