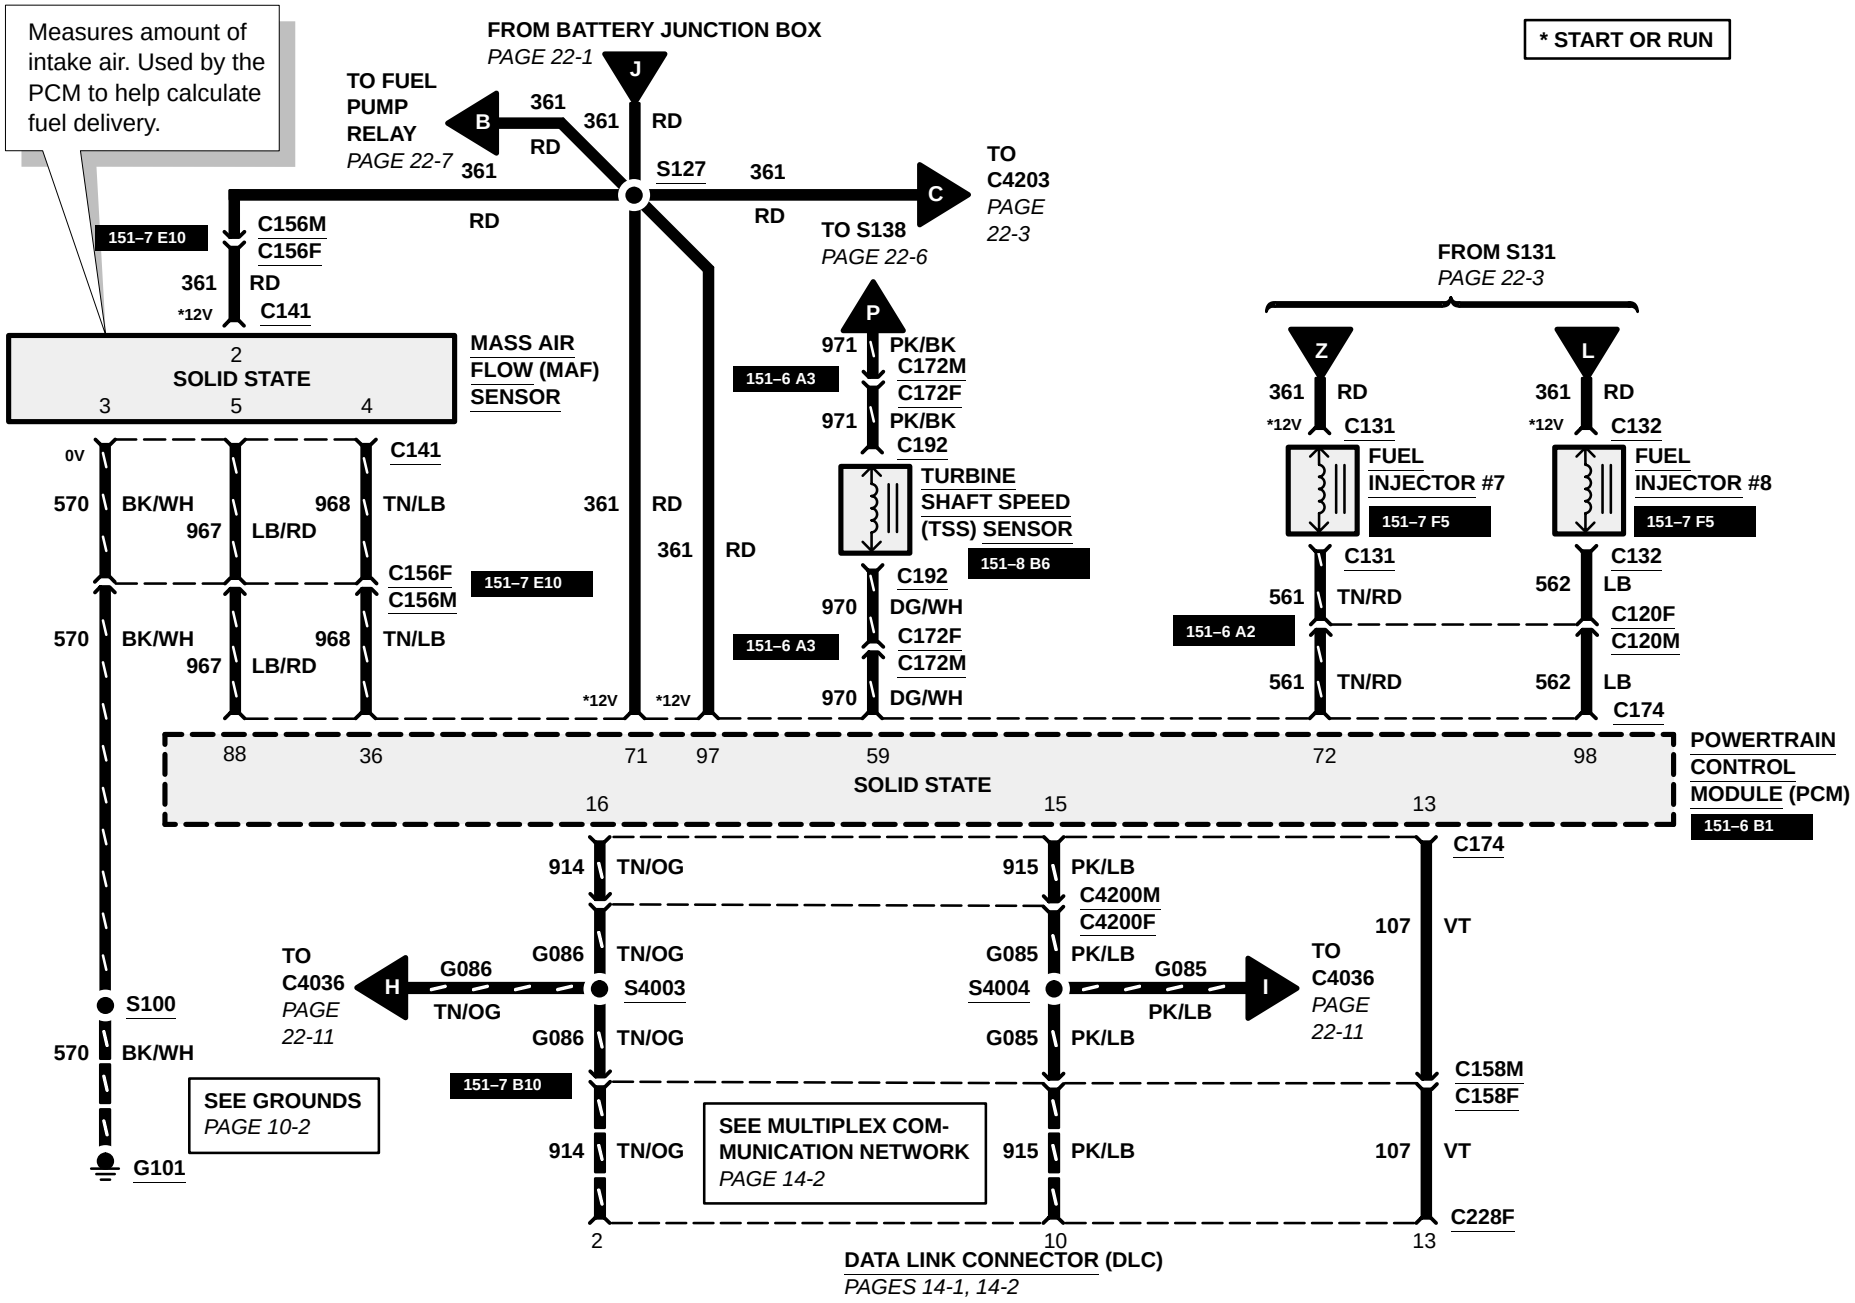
Measures amount of intake air. Used by the PCM to help calculate fuel delivery.
* START OR RUN
FROM BATTERY JUNCTION BOX
PAGE 22-1
J
TO FUEL PUMP RELAY
PAGE 22-7
B
361
361
RD
RD
361
S127
361
RD
RD
C
TO C4203
PAGE 22-3
TO S138
PAGE 22-6
151–7 E10
C156M
C156F
361
RD
*12V
C141
2
SOLID STATE
3
5
4
MASS AIR FLOW (MAF) SENSOR
P
971
PK/BK
151–6 A3
C172M
C172F
971
PK/BK
C192
TURBINE SHAFT SPEED (TSS) SENSOR
151–8 B6
FROM S131
PAGE 22-3
Z
L
361
RD
*12V
C131
C132
FUEL INJECTOR #7
FUEL INJECTOR #8
151–7 F5
C131
C132
561
TN/RD
562
LB
151–6 A2
C120F
C120M
561
TN/RD
562
LB
C174
0V
570
BK/WH
967
LB/RD
968
TN/LB
C141
C156F
C156M
151–7 E10
570
BK/WH
967
LB/RD
968
TN/LB
361
RD
361
RD
*12V
*12V
C192
970
DG/WH
151–6 A3
C172F
C172M
970
DG/WH
88
36
71
97
59
72
98
SOLID STATE
16
15
13
POWERTRAIN CONTROL MODULE (PCM)
151–6 B1
914
TN/OG
915
PK/LB
C4200M
C4200F
C174
107
VT
TO C4036
PAGE 22-11
H
G086
TN/OG
G086
TN/OG
S4003
G085
PK/LB
S4004
G085
PK/LB
I
TO C4036
PAGE 22-11
S100
570
BK/WH
G086
TN/OG
G085
PK/LB
151–7 B10
C158M
C158F
914
TN/OG
915
PK/LB
107
VT
SEE GROUNDS
PAGE 10-2
SEE MULTIPLEX COMMUNICATION NETWORK
PAGE 14-2
G101
C228F
2
10
13
DATA LINK CONNECTOR (DLC)
PAGES 14-1, 14-2