C3016

14C719

N421
Power seat switch, left

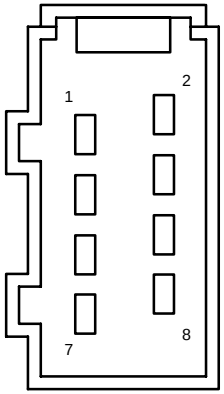

F08114

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	1463 (RD/YE)	Power seat switch, left to Driver seat module (14C718)
3	1468 (GY/LB)	Power seat switch, left to Driver seat module (14C718)
	1466 (GY/OG)	
4	1466 (GY/OG)	Power seat switch, left to Driver seat module (14C718)
	1467 (GY/YE)	
5	1467 (GY/YE)	Power seat switch, left to Driver seat module (14C718)
	1465 (GY/WH)	
6	1464 (YE)	Power seat switch, left to Driver seat module (14C718)
	1468 (GY/LB)	
7	490 (RD)	Voltage supplied at all times (overload protected)
8	1465 (GY/WH)	Power seat switch, left to Driver seat module (14C718)
	1464 (YE)	

C3019

19D887

M256
Temperature blend door actuator (19E616)

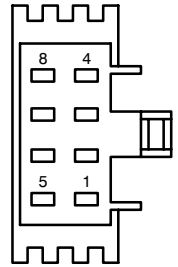

F08059

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	1125 (BN)	Temperature blend door actuator (19E616), return
4	–	not used
5	–	not used
6	–	not used
7	1124 (WH)	Temperature blend door actuator (19E616), feed
	1003 (GY/YE)	Voltage supplied in Start and Run (overload protected)
8	1205 (BK)	Ground