C3113b

7E203/7C078

A423
Vehicle Interface
Module (VIM)

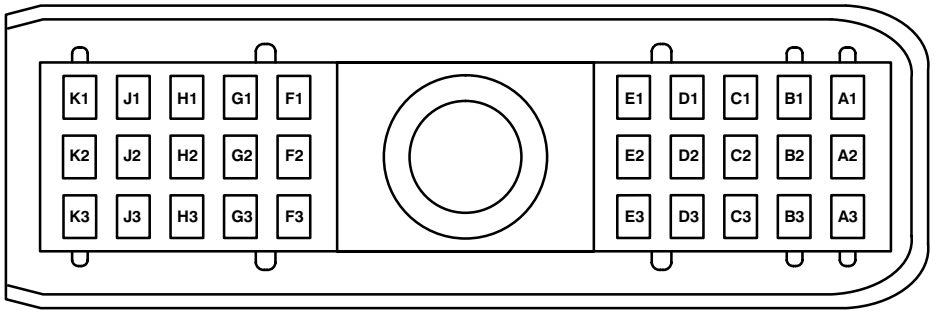

F30007

Pin	Circuit	Circuit function
A1	167 (BN/OG)	TX, signal
A2	50 (RD)	Central Junction Box (CJB) (14A068), Start, to, Ignition switch (11572)
A3	50 (RD)	Central Junction Box (CJB) (14A068), Start, to, Ignition switch (11572)
B1	167 (BN/OG)	TX, signal
B2	50 (RD)	
B3	50 (RD)	Central Junction Box (CJB) (14A068), Start, to, Ignition switch (11572)
C1	1290 (WH/OG)	Voltage supplied in Start and Run (overload protected)
C2	50 (RD)	Central Junction Box (CJB) (14A068), Start, to, Ignition switch (11572)
C3	50 (RD)	Central Junction Box (CJB) (14A068), Start, to, Ignition switch (11572)
D1	1065 (YE/LB)	Seat cushion heater, passenger side, heater, feed
D2	50 (RD)	Central Junction Box (CJB) (14A068), Start, to, Ignition switch (11572)
D3	50 (RD)	Central Junction Box (CJB) (14A068), Start, to, Ignition switch (11572)
E1	1066 (GY/LB)	Seat back heater, driver side, feed
E2	154 (VT/LG)	Speed control switch, feed
E3	161 (DG/OG)	Headlamp, right (13008), (Low beam lamp feed)
F1	325 (DB/OG)	Starter relay (11450), control

Pin	Circuit	Circuit function
F2	50 (RD)	Central Junction Box (CJB) (14A068), Start, to, Ignition switch (11572)
F3	50 (RD)	Central Junction Box (CJB) (14A068), Start, to, Ignition switch (11572)
G1	325 (DB/OG)	Starter relay (11450), control
G2	50 (RD)	Central Junction Box (CJB) (14A068), Start, to, Ignition switch (11572)
G3	50 (RD)	Central Junction Box (CJB) (14A068), Start, to, Ignition switch (11572)
H1	50 (RD)	Central Junction Box (CJB) (14A068), Start, to, Ignition switch (11572)
H2	50 (RD)	Central Junction Box (CJB) (14A068), Start, to, Ignition switch (11572)
H3	50 (RD)	Central Junction Box (CJB) (14A068), Start, to, Ignition switch (11572)
J1	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
J2	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
J3	50 (RD)	Central Junction Box (CJB) (14A068), Start, to, Ignition switch (11572)
K1	570 (BK/WH)	Ground
K2	570 (BK/WH)	Ground
K3	50 (RD)	Central Junction Box (CJB) (14A068), Start, to, Ignition switch (11572)