## C1892

**9H589**

B8
Throttle Position Sensor (TPS) (9B989)

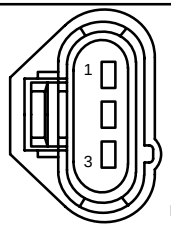

F03071

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 7-RJ28 (YE) | Voltage D.C. supplied at all times (sensor) |
| 2 | 8-RJ28 (WH) | Sensor signal |
| 3 | 9-RJ28 (BN) | Sensor signal return (reference/ground) |

## C1893

**9H589**

B41
Camshaft position sensor (6B288)

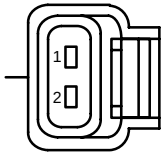

F02026

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 8-RJ3 (WH/VT) | Sensor signal |
| 2 | 9-RJ3 (BN/WH) | Sensor signal return (reference/ground) |

## C1894

**9H589**

B43
Crankshaft position sensor (6C315)

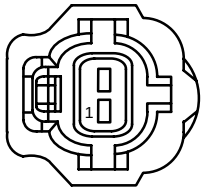

F02027

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 8-RJ4 (WH/RD) | Sensor signal |
| 2 | 9-RJ4 (BN/RD) | Sensor signal return (reference/ground) |

## C1898

**9F759**

Y131
Evaporative emission (EVAP) canister vent valve (9F945)

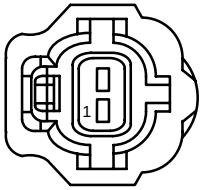

F02027

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 15-RL3 (GN/RD) | Voltage, ignition switch in Start or Run (not overload protected) |
| 2 | 91S-RL3 (BK/OG) | Ground, Switched |

## C1899

**12A522**

B11
Vehicle Speed Sensor (VSS)

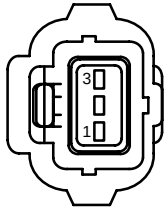

F03093

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 91-RJ29 (BK/OG) | Ground |
| 2 | 8-RJ29 (WH/BU) | Sensor signal |
| 3 | 15-RJ29 (GN/RD) | Voltage, ignition switch in Start or Run (not overload protected) |