C3075

14A699

M280
Passenger seat rear height motor

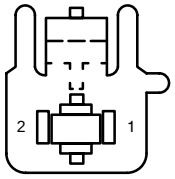

F02480

Pin	Circuit	Circuit function
1	983 (RD/LG)	Rear height motor, Up
2	982 (YE/LG)	Rear height motor, Down

C3076

VF3862

A270
Video cassette player



F12119

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	16 (YE/WH)	Fused battery feed, SSP 4 relay, to, right rear, Instrument Panel Illumination
3	18 (BK)	Ground
4	–	not used
5	–	not used
6	255 (PK/DG)	Video cassette player, control
7	245 (YE/RD)	Right, audio, input, from, Video cassette player, –
8	235 (VT/YE)	Right, audio, input, from, Video cassette player, +
9	225 (DB/RD)	Left, audio, input, from, Video cassette player, +
10	215 (PK/BK)	Left, audio, input, from, Video cassette player, –
11	205 (BK/WH)	Video display,input,from,Video cassette player,+
12	195 (OG/BK)	Video display,input,from,Driver seat module (14C718),–

C3077a

VF3862

A267
Rear Seat Entertainment (RSE) module

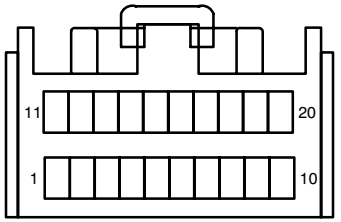

F20039

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	–	not used
4	–	not used
5	–	not used
6	205 (BK/WH)	Video display,input,from,Video cassette player,+
7	225 (DB/RD)	Left, audio, input, from, Video cassette player, +
8	245 (YE/RD)	Right, audio, input, from, Video cassette player, –
9	95 (DG)	Video display,output,to,Video display,+
10	255 (PK/DG)	Video cassette player,control
11	155 (RD)	Left,audio,output,to,AM/FM radio,+
12	165 (WH)	Left,audio,output,to,AM/FM radio,–
13	175 (OG)	Right,audio,output,to,AM/FM radio,+
14	185 (YE)	Right,audio,output,to,AM/FM radio,–
15	48	Shield
16	195 (OG/BK)	Video display,input,from,Driver seat module (14C718),–
17	215 (PK/BK)	Left, audio, input, from, Video cassette player, –
18	235 (VT/YE)	Right, audio, input, from, Video cassette player, +
19	105 (DB)	Video display,output,to,Video display,–
20	48	Shield