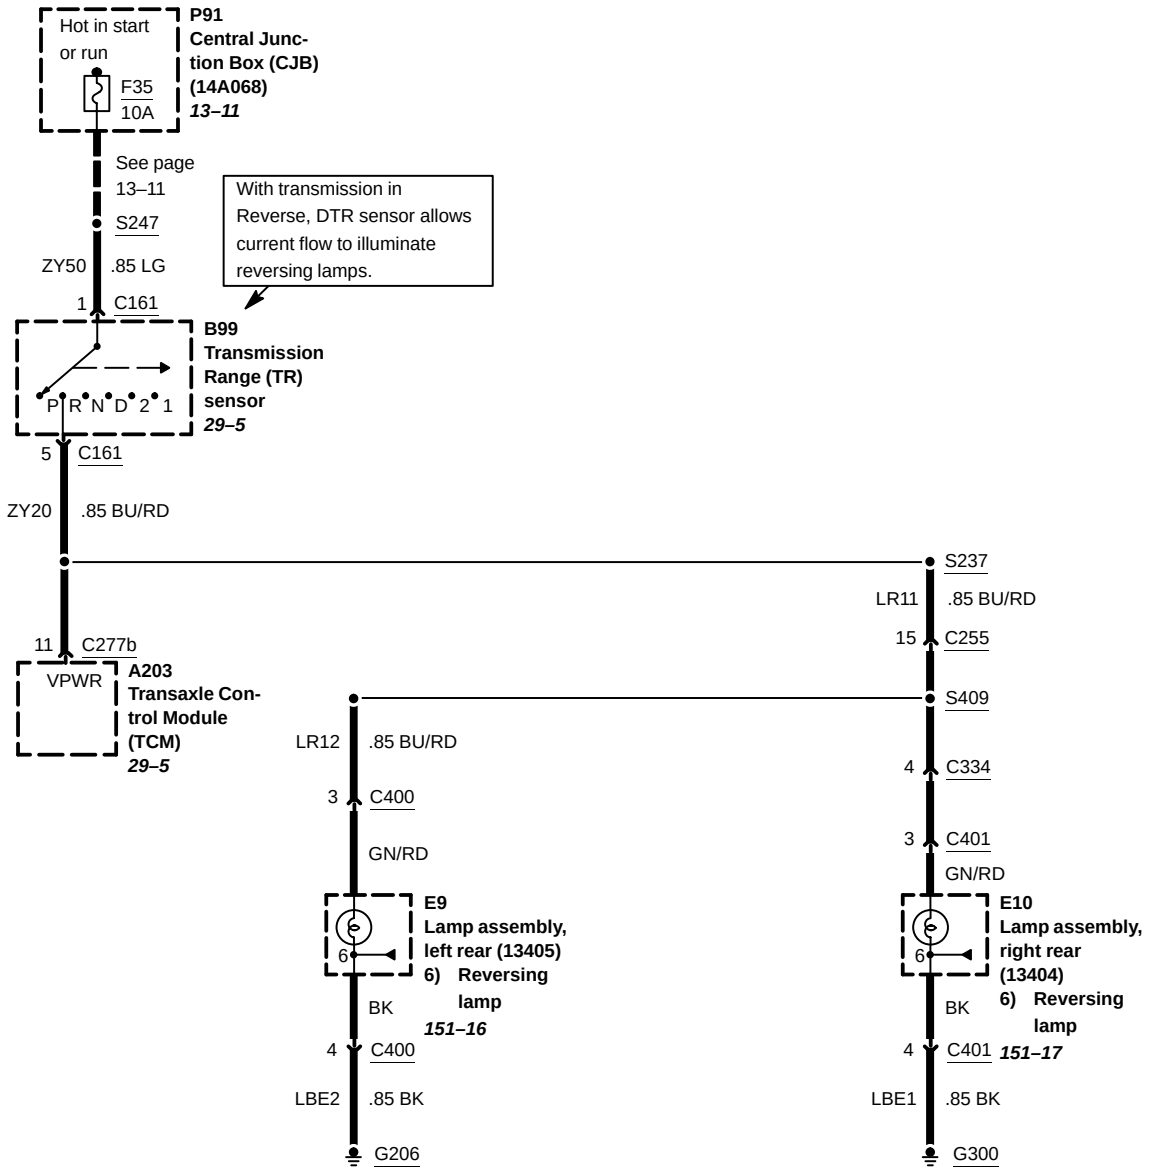
Hot in start or run
F35
10A
P91
Central Junction Box (CJB)
(14A068)
13–11
See page 13–11
S247
ZY50 .85 LG
1 C161
With transmission in Reverse, DTR sensor allows current flow to illuminate reversing lamps.
B99
Transmission Range (TR) sensor
29–5
P R N D 2 1
5 C161
ZY20 .85 BU/RD
11 C277b
VPWR
A203
Transaxle Control Module (TCM)
29–5
S237
LR11 .85 BU/RD
15 C255
S409
LR12 .85 BU/RD
4 C334
3 C400
3 C401
GN/RD
GN/RD
E9
Lamp assembly, left rear (13405)
6) Reversing lamp
151–16
E10
Lamp assembly, right rear (13404)
6) Reversing lamp
151–17
6
BK
BK
4 C400
4 C401
LBE2 .85 BK
LBE1 .85 BK
G206
G300