C518 (BK)

14631

Power window motor, driver side front (23395)

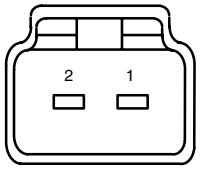

F02381

Pin	Circuit	Circuit function
1	991 (TN/LB)	Master window adjust switch (14529), feed, Down
2	992 (WH/BK)	Master window adjust switch (14529), feed, Up

C525 (GY)

14631

Door lock actuator, left front

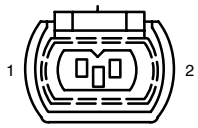

F02116

Pin	Circuit	Circuit function
1	163 (RD/OG)	Driver door unlock relay, switched power
2	117 (PK/BK)	Door lock, output

C520 (BN)

14A005

Door entry lamp, left front (13776)

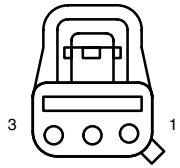

F03187

Pin	Circuit	Circuit function
1	53 (BK/LB)	Interior lamp relay, switched power, output
2	–	not used
3	57 (BK)	Ground

C526 (BK)

14631

Door ajar switch, left front

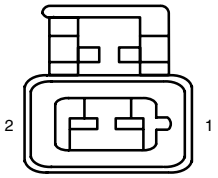

F02379

Pin	Circuit	Circuit function
1	344 (BK/YE)	Door ajar switch, left front, signal
2	57 (BK)	Ground

C523 (BK)

14A005

Speaker, left front (18808)

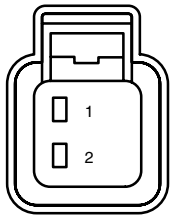

F02337

Pin	Circuit	Circuit function
1	804 (OG/LG)	Speaker, left front (18808) +
2	813 (LB/WH)	Speaker, left front (18808) –