C175b

14398

Powertrain Control Module (PCM)

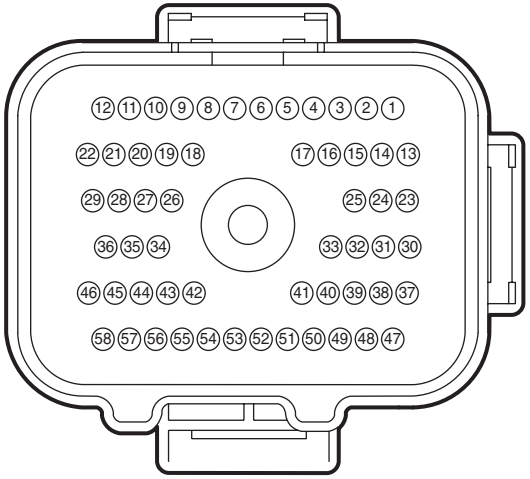

XW43-14A464-GA (F)

Pin	Circuit	Circuit Function
1	—	not used
2	238 (DG/YE)	PCM to fuel pump monitor/fuel pump relay to safety switch
3	914 (TN/OG)	J1850 bus plus/data plus
4	915 (PK/LB)	J1850 bus minus/data minus
5	—	not used
6	91 (VT/WH)	PCM - canister vent
7	679 (GY/BK)	Vehicle speed signal - plus to PCM
8	904 (LG/RD)	Ignition switch "coil"/"accy" to alternator regulator "ign" terminal
9	331 (PK/YE)	PCM to wide open throttle A/C cutout switch
10	357 (YE/WH)	Module, powertrain control to throttle position sensor, #2
11	1215 (WH/LG)	Passive anti-theft transeiver module - TX
12	191 (LG/BK)	PCM to vapor management valve - constant current
13	209 (WH/VT)	Module, powertrain control to self test connector
14	1216 (GY/OG)	Passive anti-theft transeiver module - RX
15	—	not used
16	—	not used
17	359 (GY/RD)	Sensor, signal return
18	—	not used
19	1154 (WH/BK)	Auxiliary condenser cooling fan relay control feed
20	351 (BN/WH)	Power to engine sensors

Pin	Circuit	Circuit Function
21	—	not used
22	343 (DB/LG)	Module, perimeter anti-theft - warning lamp
23	—	not used
24	570 (BK/WH)	Communication network ground (type 1 ground)
25	570 (BK/WH)	Communication network ground (type 1 ground)
26	570 (BK/WH)	Communication network ground (type 1 ground)
27	570 (BK/WH)	Communication network ground (type 1 ground)
28	307 (BK/YE)	Module, speed control to brake pressure switch
29	264 (WH/LB)	Module, powertrain control to idle speed control motor #1
30	347 (BK/YE)	Module, powertrain control to a/c cyclic pressure switch
31	967 (LB/RD)	Module, powertrain control to mass air flow sensor,
32	1140 (VT)	PCM relay - switched start/run power
33	1140 (VT)	PCM relay - switched start/run power
34	—	not used
35	—	not used
36	265 (LG/WH)	Module, powertrain control to idle speed control motor #2
37	330 (YE/LG)	Module, powertrain control to power steering pressure switch
38	968 (TN/LB)	Mass air flow return
39	461 (OG)	Module to relay
40	511 (LG)	Stoplamp (brake on/off) switch to stoplamps
41	224 (TN/WH)	PCM to transmission overdrive cancel switch
42	—	not used
43	1205 (BK)	General ground (type 4 ground)
44	729 (RD/WH)	Radio memory
45	133 (BK)	Speed control switch return
46	376 (BN/WH)	Module, powertrain control to idle speed control motor #3
47	441 (RD/YE)	A/c head pressure switch to cyclic pressure switch
48	—	not used
49	—	not used
50	—	not used
51	743 (GY)	Module, powertrain control to air charge temperature sensor,
52	791 (RD/PK)	Fuel tank pressure transducer to module, powertrain control
53	—	not used
54	—	not used
55	—	not used
56	848 (DG/OG)	Speed control switch to amplifier
57	151 (LB/BK)	Speed control on-off switch to amplifier
58	928 (LB/OG)	Module, powertrain control to modulated fuel pump