C321 (GN)

14A699

Seat heater switch, passenger side

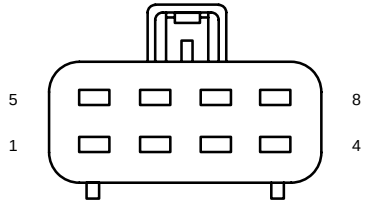

F08209

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	1020 (DG/VT)	Climate controlled seat module – On
3	–	not used
4	57 (BK)	Ground
5	–	not used
6	461 (OG)	indicator – On
7	–	not used
8	–	not used

C323 (BK)

14405

Safety belt switch

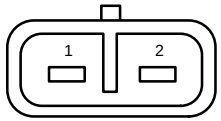

F02305

Pin	Circuit	Circuit function
1	469 (LG)	Instrument cluster, feed, to, Safety belt buckle switch (10B924)
2	57 (BK)	Ground

C329 (GY)

14A699

Heated seat module, passenger side front

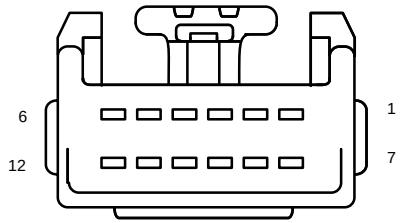

F12075

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	1061 (BN/LB)	Temperature, return
4	1060 (BK/LB)	Temperature, signal
5	41 (BK/LB)	Voltage supplied in Start and Run (overload protected)
6	1064 (YE/LB)	heater, feed
7	1067 (VT/LB)	heater, return
8	–	not used
9	461 (OG)	indicator – On
10	–	not used
11	1020 (DG/VT)	Climate controlled seat module – On
12	1153 (RD)	Voltage supplied at all times (overload protected)

C334 (GY)

14A699

Seat cushion heater, right front

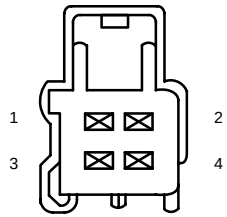

F04105

Pin	Circuit	Circuit function
1	1064 (YE/LB)	heater, feed
2	1060 (BK/LB)	Temperature, signal
3	1061 (BN/LB)	Temperature, return
4	1067 (VT/LB)	heater, return