-1

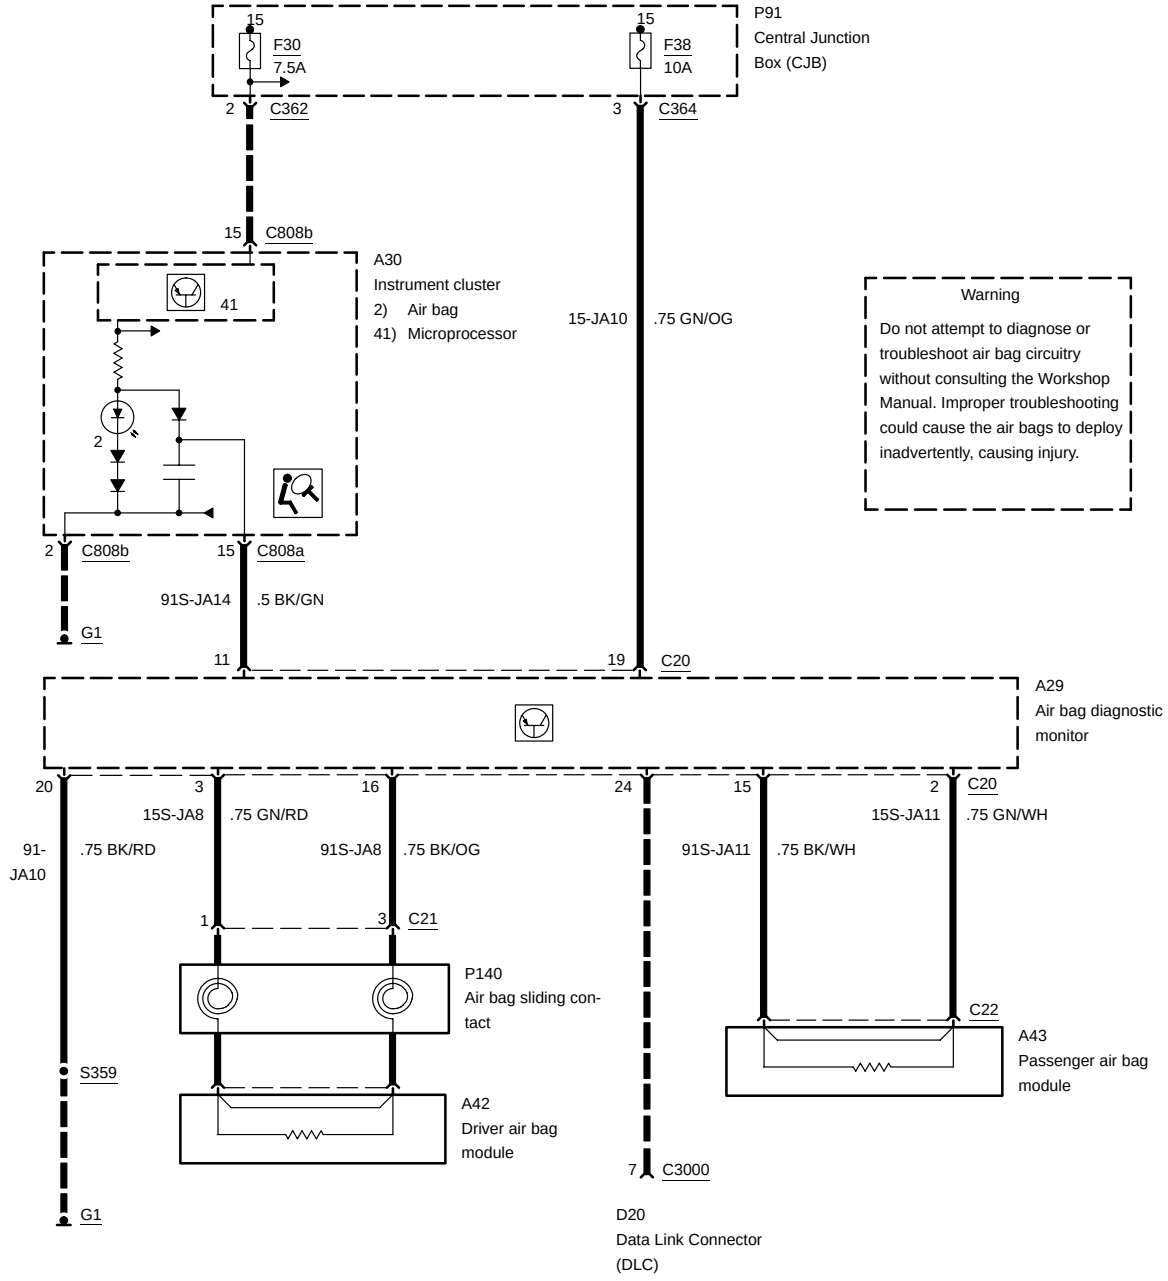
15
F30
7.5A
15
F38
10A
P91
Central Junction
Box (CJB)
2 C362
3 C364
15 C808b
A30
Instrument cluster
2) Air bag
41) Microprocessor
41
2
15-JA10 .75 GN/OG
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
2 C808b
15 C808a
91S-JA14 .5 BK/GN
G1
11
19 C20
A29
Air bag diagnostic
monitor
20
3
16
24
15
2 C20
15S-JA8 .75 GN/RD
15S-JA11 .75 GN/WH
91-JA10 .75 BK/RD
91S-JA8 .75 BK/OG
91S-JA11 .75 BK/WH
1
3 C21
P140
Air bag sliding con-
tact
C22
A43
Passenger air bag
module
S359
A42
Driver air bag
module
G1
7 C3000
D20
Data Link Connector
(DLC)